

**Maintenance programme**

Operations	1	6	12	18	24	30	36	42	48	54	60	66	72	X 1000 Km
Check: V Replace: S	4	12	24	36	-	-	-	-	-	-	-	-	-	Months
Engine oil - Check level / Top up	V	EVERY 3,000 KM												
Engine oil - Replace		S	S	S	S	S	S	S	S	S	S	S	S	
Hub oil lever - Check / Replace	S	V	V	V	S	V	V	V	S	V	V	V	S	
Spark plug / Electrode gap - Check / Replace		V	S	V	S	V	S	V	S	V	S	V	S	
Air filter - Clean			V		V		V		V		V		V	
Oil filter - Replace		S	S	S	S	S	S	S	S	S	S	S	S	
Valve clearance - Adjust		V			V				V				V	
Idle speed - Adjust	V	V	V	V	V	V	V	V	V	V	V	V	V	
Throttle control - Adjust	V		V		V		V		V		V		V	
Roller case - Check		V	V	V	V	V	V	V	V	V	V	V	V	
Drive belt - Check / Replace		V	S	V	S	V	S	V	S	V	S	V	S	
Coolant level - Check		V	V	V	V	V	V	V	V	V	V	V	V	
Coolant - Replace		EVERY 2 YEARS												
Radiator - Clean exterior				V			V			V			V	
Steering - Adjust	V		V		V		V		V		V		V	
Brake levers - Grease	V		V		V		V		V		V		V	
Brake pads - Check condition + wear	V	V	V	V	V	V	V	V	V	V	V	V	V	
Flexible brake lines - Replace							S						S	
Brake fluid level - Check	V	V	V	V	V	V	V	V	V	V	V	V	V	
Brake fluid - Replace		EVERY 2 YEARS												
Transmissions- Lubricate			V		V		V		V		V		V	
Nuts, bolts and fastenings - Check	V		V		V		V		V		V		V	
Suspension - Check			V		V		V		V		V		V	
Electrical system and battery - Check	V	V	V	V	V	V	V	V	V	V	V	V	V	
Headlight - Check / Adjust			V		V		V		V		V		V	
Tyres - Check condition + wear		V	V	V	V	V	V	V	V	V	V	V	V	
Tyre pressure - Check	V	V	V	V	V	V	V	V	V	V	V	V	V	
Vehicle and brake test - Road test	V	V	V	V	V	V	V	V	V	V	V	V	V	
<b>Labour time</b>	30'	130'	160'	105'	155'	105'	250'	105'	155'	105'	110'	105'	300'	