


Ignition section

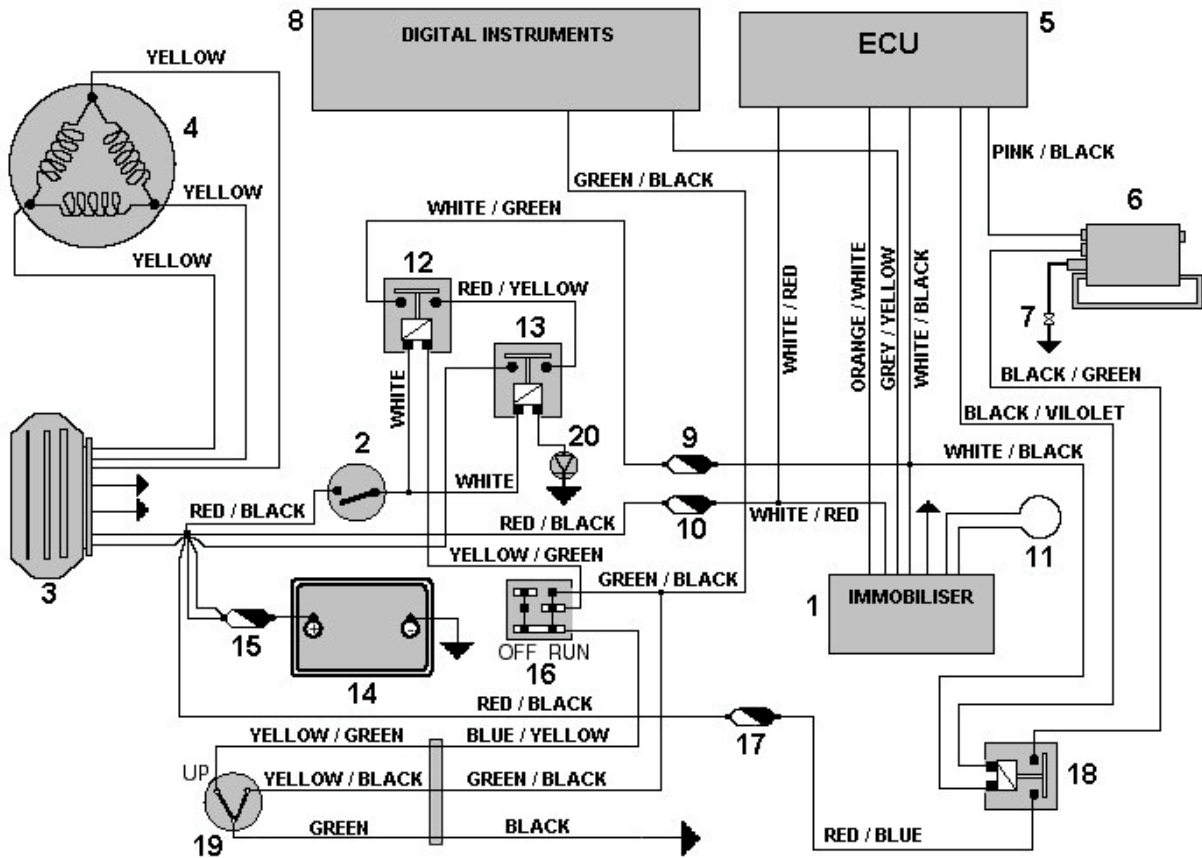

1	IMMOBILISER DECODER	11	IMMOBILISER AERIAL
2	IGNITION SWITCH	12	ENGINE STOP RELAY
3	RECTIFIER / REGULATOR	13	MAIN RELAY
4	375w THREE PHASE GENERATOR	14	12v - 14 ah BATTERY
5	ELECTRONIC CONTROL UNIT	15	30 amp MAIN FUSE
6	HT COIL	16	ENGINE STOP SWITCH
7	SPARK PLUG	17	10 amp FUSE
8	DIGITAL INSTRUMENT PANEL	18	RELAY FOR ECU
9	5 amp FUSE	19	SIDE STAND SWITCH
10	3 amp FUSE	20	DIODE