

## **Technical note “Evoluzioni MP3 – Fuoco”**

In response to a number of operational difficulties noted, we have introduced a set of unified procedures to resolve the main problems encountered.

Please note that these procedures are highly specific and must be implemented on the basis of your own experience.

# 1. Reprogramming the ECU

- 1.1. Preliminary checks
- 1.2. Specific actions
- 1.3. Reprogramming
- 1.4. Testing

## 1.1. Preliminary checks

- Check battery function (voltage above 12.5 V)
- Check functional parameters of injection system. (Optimum TPS values  $3.2^{\circ} \pm 0.6$ . In the event of values out of range or of evident tampering of throttle valve endstop screw, replace the throttle body. **REMARK: In the event of TPS values above  $4^{\circ}$ , or with abnormally fluctuating values, contact the Piaggio Help desk immediately).**
- Check errors with diagnostic tool.
- Note and delete memorised errors.
- In the event of currently active errors, diagnose/rectify the respective fault before deleting the error.

## 1.2. Specific actions

- Check/clean air box and filter
- Checking/cleaning throttle body
- Recalibrate the ECU with release **1233GN2N**
- A password is required in order to recalibrate the PGDS (**passw0rd**)
- Do not reset TPS





## 1.3. Testing

- Perform parameter auto-acquisition at idle speed (two electric fan activation cycles)
- Perform parameter auto-acquisition with vehicle in motion (5-6 Km at mid throttle and, if possible, with parts of the route at wide open throttle).
- Connect the Navigator and check determinable parameters:

GIRI MOTORE

TEMPERATURA ACQUA

APERTURA FARFALLA

ANTICIPO BASE

ANTICIPO REALE

TENSIONE SONDA

CONTROLLO SONDA

STATO LAMBDA

TITOLO MAGRO

TITOLO RICCO

ADATTATIVITÀ TITOLO MINIMO

ADATTATIVITÀ TITOLO\_OFFSET

ADATTATIVITÀ TITOLO\_GAIN

PASSI PROGRAMMATI

PASSI ATTUALI

**UTILIZZARE LA FUNZIONE SALVA E CONGELA I DATI E PARAMETRI DEL NAVIGATOR**