SR 50 i.e. Purejet (2004)

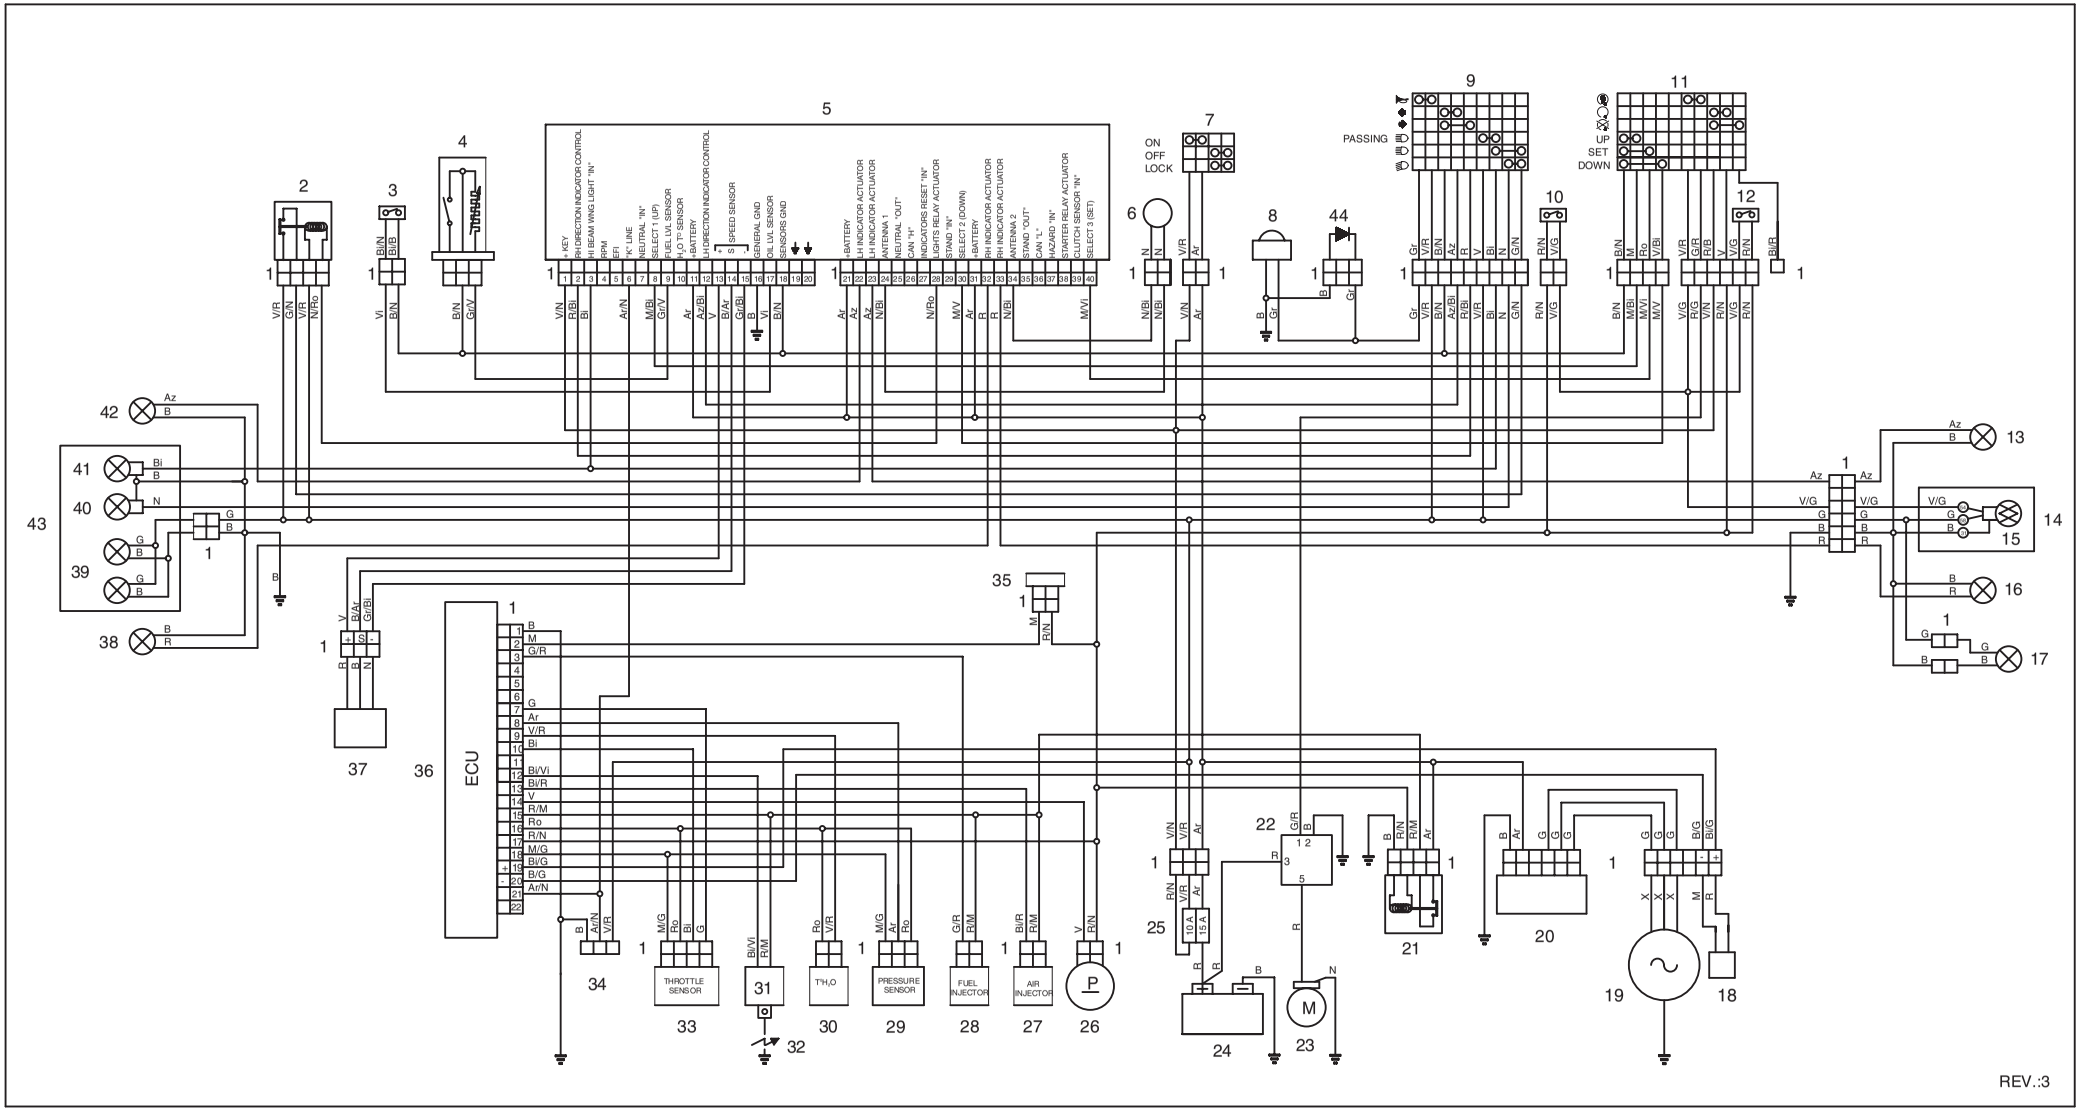

1 MULTIPLE CONNECTORS
2 HIGH-LOW BEAM RELAY
3 OIL LEVEL SWITCH
4 FUEL LEVEL SENSOR
5 INSTRUMENT PANEL (MATRIX)
6 IMMOBILIZER ANTENNA
7 IGNITION SWITCH
8 HORN
9 LH DIP SWITCH
10 REAR STOP SWITCH (ON LH DIMMER SWITCH)
11 RH DIP SWITCH
12 FRONT STOP SWITCH (ON RH DIMMER SWITCH)
13 LH REAR DIRECTION INDICATOR
14 TAIL LIGHT
15 DUAL PARKING/STOP BULB
16 RH REAR DIRECTION INDICATOR
17 NO. PLATE LIGHT (ONLY FOR USA/CH VERSIONS)
18 PICK-UP
19 GENERATOR
20 VOLTAGE REGULATOR
21 INJECTION RELAY
22 STARTER RELAY (noise proof)
23 STARTER MOTOR
24 BATTERY
25 FUSES
26 FUEL PUMP
27 AIR INJECTOR
28 FUEL INJECTOR
29 PRESSURE SENSOR (or built-in in ECU)
30 HEAD TEMPERATURE SENSOR
31 HT COIL
32 SPARK PLUG
33 THROTTLE SENSOR
34 SERIAL CONNECTION (DIAG.)
35 OIL PUMP
36 ECU
37 SPEED SENSOR
38 RH FRONT DIRECTION INDICATOR
39 FRONT PARKING LIGHTS (ONLY FOR USA/CH VERSIONS)
40 LOW BEAM
41 HIGH BEAM
42 LH FRONT DIRECTION INDICATOR
43 HEADLIGHT
44 DIODE
45 -
46 -
47 -
48 -
49 -

CABLE COLOURS
Ar Orange
Az Light blue
B Blue
Bi White
G Yellow
Gr Grey
M Brown
N Black
R Red
V Green
Vi Violet
Ro Pink