


FUSE A 30A CHARGING
 FUSE B 30A WINKER STOP/PHONE/METER/STARTER POSITION/PHONE
 FUSE C 10A IGNITION/IGN COIL/AUTO/BIS
 FUSE D 10A FAN MOTOR
 FUSE E 15A HEAD LIGHT/LUGGAGE BOX

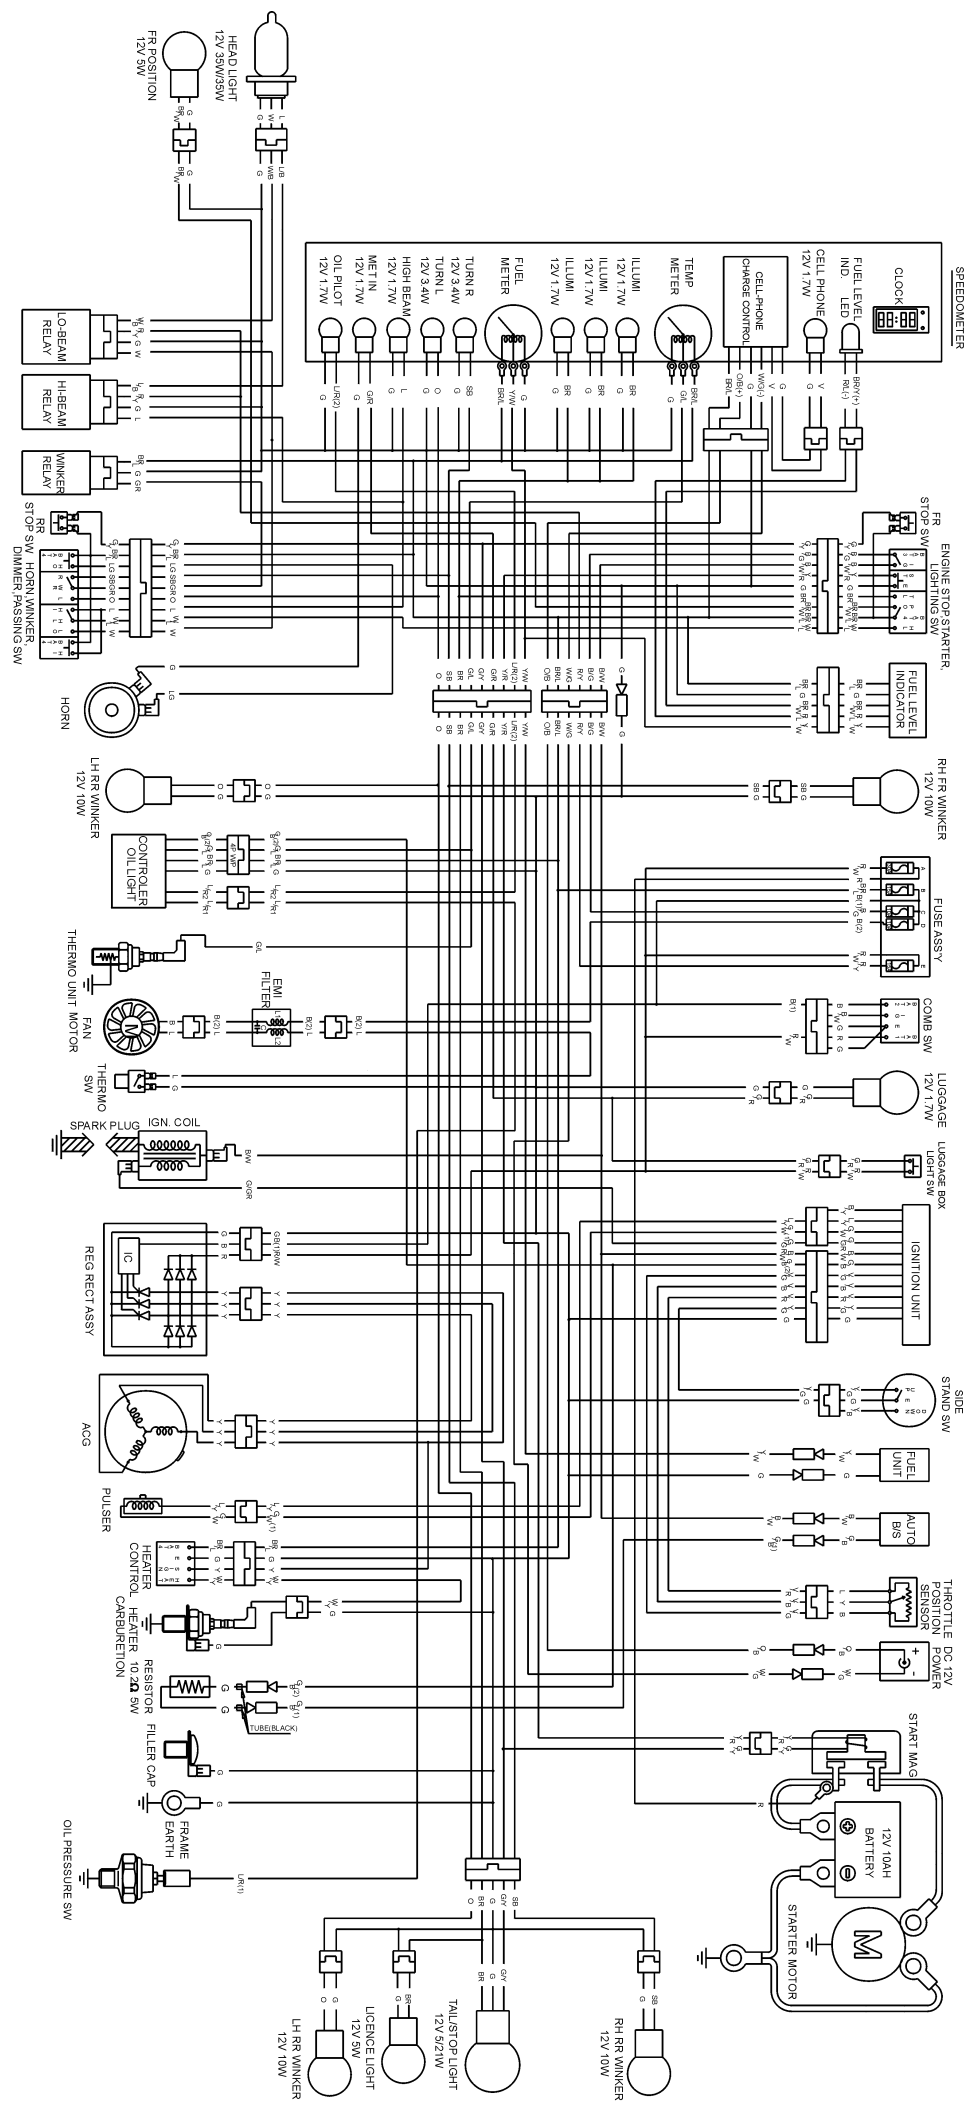

DIMMER SW	
HL	LO HI
LO	HI
(N)	
HI	
CORD	WIL
COLOR	W L

WINKER SW	
W	R L
L	
N	
R	
CORD	GR SB
COLOR	GR SB O

HORN SW	
HO	BA74
FREE	
PUSH	
CORD	IG BR/L
COLOR	IG BR/L

PASSING SW	
BA74	HI
FREE	
PUSH	
CORD	BR/L
COLOR	BR/L L

MAIN SW	
BA71	G E
BA72	
OFF	
LOCK	
CORD	R BW
COLOR	G B

LIGHTING SW	
BA74	PO TL
HL	
OFF	
PUSH	
CORD	BR/LBR/W BR WIL
COLOR	BR/LBR/W BR WIL

KILL SW	
BA74	IG
OFF	
PUSH	
CORD	B/G BW
COLOR	B/G BW

START SW	
ST	E
FREE	
PUSH	
CORD	VR
COLOR	G