



SERVICE STATION MANUAL

664646 - 664653



BEVERLY Cruiser 500ie



SERVICE STATION MANUAL

BEVERLY Cruiser 500ie

The descriptions and illustrations given in this publication are not binding. While the basic specifications as described and illustrated in this manual remain unchanged, PIAGGIO-GILERA reserves the right, at any time and without being required to update this publication beforehand, to make any changes to components, parts or accessories, which it considers necessary to improve the product or which are required for manufacturing or construction reasons.

Not all versions shown in this publication are available in all countries. The availability of single versions should be checked at the official Piaggio sales network.

"© Copyright 2005 - PIAGGIO & C. S.p.A. Pontedera. All rights reserved. Reproduction of this publication in whole or in part is prohibited."

PIAGGIO & C. S.p.A. - Q.C.S./After sales V.le Rinaldo Piaggio, 23 - 56025 PONTEDERA (Pi)
www.piaggio.com

SERVICE STATION MANUAL

BEVERLY Cruiser 500ie

This service station manual has been drawn up by Piaggio & C. Spa to be used by the workshops of Piaggio-Gilera dealers. It is assumed that the user of this manual for maintaining and repairing Piaggio vehicles has a basic knowledge of mechanical principles and vehicle repair technique procedures. Any significant changes to vehicle characteristics or to specific repair operations will be communicated by updates to this manual. Nevertheless, no mounting work can be satisfactory if the necessary equipment and tools are unavailable. It is therefore advisable to read the sections of this manual concerning special tools, along with the special tool catalogue.

N.B. Provides key information to make the procedure easier to understand and carry out.

CAUTION Refers to specific procedures to carry out for preventing damages to the vehicle.

WARNING Refers to specific procedures to carry out to prevent injuries to the repairer.



Personal safety Failure to completely observe these instructions will result in serious risk of personal injury.



Safeguarding the environment Sections marked with this symbol indicate the correct use of the vehicle to prevent damaging the environment.



Vehicle intactness The incomplete or non-observance of these regulations leads to the risk of serious damage to the vehicle and sometimes even the invalidity of the guarantee.



INDEX OF TOPICS

CHARACTERISTICS

CHAR

TOOLING

TOOL

MAINTENANCE

MAIN

ELECTRICAL SYSTEM

ELE SYS

ENGINE FROM VEHICLE

ENG VE

ENGINE

ENG

INJECTION

INJEC

SUSPENSIONS

SUSP

BRAKING SYSTEM

BRAK SYS

COOLING SYSTEM

COOL SYS

CHASSIS

CHAS

PRE-DELIVERY

PRE DE

TIME

TIME

INDEX OF TOPICS

CHARACTERISTICS

CHAR

This section describes the general specifications of the vehicle.

Rules

This section describes general safety rules for any maintenance operations performed on the scooter.

Safety rules

- Should it be necessary to keep the engine running while servicing, make sure that the area or room is well ventilated, and use special exhaust fans, if required. never let the engine run in an enclosed area. Exhaust fumes are toxic.
 - The battery electrolyte contains sulphuric acid. Protect your eyes, clothes and skin. Sulphuric acid is highly corrosive; in the event of contact with your eyes or skin, rinse thoroughly with abundant water and seek immediate medical attention.
 - The battery produces hydrogen, a gas that can be highly explosive. Do not smoke and avoid sparks or flames near the battery, especially when charging it.
 - Fuel is highly flammable, and in some conditions it can be explosive. Do not smoke in the working area, and avoid open flames or sparks.
 - Clean the brake pads in a well ventilated environment, directing the compressed air jet so as to not inhale the dust produced by the wear of the friction material. Even though the latter contains no asbestos, dust inhalation is harmful.
-

Maintenance rules

- Use original PIAGGIO spare parts and lubricants recommended by the Manufacturer. Non-original or non-conforming spares may damage the vehicle.
 - Use only the special tools designed for this scooter.
 - Always use new gaskets, sealing rings and split pins upon reassembly.
 - After removal, clean the components using non-flammable or low fire-point solvent. Lubricate all the work surfaces except the tapered couplings before reassembly.
 - After reassembly, check that all components have been installed properly and that they are in good working order.
 - For removal, overhaul and reassembly operations use only tools provided with metric measures. Metric bolts, nuts and screws are not interchangeable with coupling members with English measurement. Using unsuitable coupling members and tools may damage the scooter.
 - Should any interventions to the scooter electrical system be required, check that the electrical connections - especially earth and battery connections - have been implemented properly.
-

Vehicle identification


Chassis prefix: ZAPM34500



Engine prefix: M34AM



Dimensions and mass

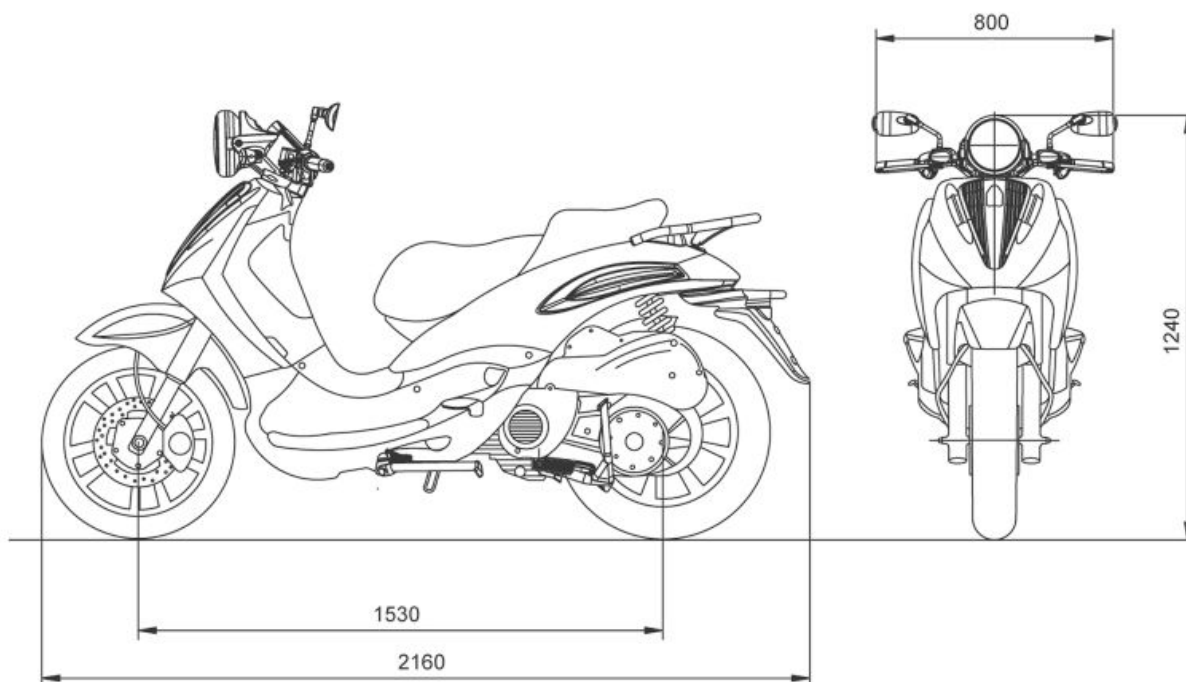

WEIGHTS AND DIMENSIONS

Specification	Desc./Quantity
Kerb weight	199 ± 5 kg
Maximum weight allowed	390 kg
Width (at handgrips)	800 mm
Length	2160 mm
Wheelbase	1530 mm
Height	1240 mm

Engine**ENGINE**

Specification	Desc./Quantity
Type	Single-cylinder, 4-stroke with double spark plug
Bore x Stroke	94 x 71 mm
Cubic capacity	493 cm ³
Compression ratio	10.5: 1
Timing system	Four valves, single overhead camshaft, chain driven.
Valve clearance	Inlet: 0.15 mm Outlet: 0.15 mm
Engine idle speed	1,500 ± 100 rpm
Start-up	Electric
Lubrication	Engine lubrication with trochoidal pump (inside the crankcase), oil filter and pressure adjustment by-pass.
Fuel supply	Electronic injection with electric fuel pump.
MAX. power	29 kW at 7,500 rpm
MAX torque	44 Nm at 5,200 rpm
Cooling	Forced coolant circulation system.

Transmission**TRANSMISSION**

Specification	Desc./Quantity
Transmission	Automatic expandable pulley variator with torque server, V belt, automatic clutch.

Capacities**CAPACITY**

Specification	Desc./Quantity
Engine oil (at oil and filter change)	1.7 l
Transmission oil	250 cm ³
Cooling system fluid	~ 1.8 l
Fuel tank (reserve)	~ 13.2 l (~3 l)

Electrical system

ELECTRICAL SYSTEM

Specification	Desc./Quantity
Ignition	Electronic, inductive, high efficiency ignition, integrated with the injection system, with variable advance and separate HV coil.
Spark plug	NGK CR7EKB
Battery	SEALED 12 V / 12 Ah BATTERY

Frame and suspensions

CHASSIS AND SUSPENSIONS

Specification	Desc./Quantity
Chassis	Tubular and sheet steel.
Front suspension	Hydraulic telescopic fork with Ø 41 mm stem.
Rear suspension	Two double-acting shock absorbers, adjustable to four positions at preloading.

Brakes

BRAKE SYSTEM

Specification	Desc./Quantity
Front brake	Ø 260 mm double disc brake with hydraulic control activated by the handlebar right-hand lever.
Rear brake	Ø 240 disc brake with hydraulic control activated by the handlebar left-hand lever. The system is controlled by a distribution pressure valve.

Wheels and tyres

WHEELS AND TYRES

Specification	Desc./Quantity
Wheel rim type	Light alloy rims.
Front rim	16" x 3.00
Rear rim	14" x 4.50
Front tyre	Pirelli 110/70 16" GTS 23 M/C - 52S TUBELESS
Rear tyre	Pirelli 150/70 14" GTS 24 M/C - 66S TUBELESS
Front tyre pressure (with passenger)	2.2 bar (-)
Rear tyre pressure (with passenger)	2.2 bar (2.3 bar)

N.B.

CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE. ADJUST PRESSURE ACCORDING TO THE WEIGHT OF THE RIDER AND ACCESSORIES.

CAUTION



IT IS MANDATORY TO ADOPT EXCLUSIVELY "S" CLASS TYRES, WHICH GUARANTEE CORRECT VEHICLE PERFORMANCE AT THE DIFFERENT SCOOTER SPEEDS. USING ANY OTHER

TYRE MAY RESULT IN VEHICLE INSTABILITY. IT IS ADVISABLE TO USE TYRE TYPES RECOMMENDED BY PIAGGIO.

Tightening Torques

CHASSIS

Name	Torque in Nm
Electric pump locking ring nut	20
Chassis cross-member lower screws	16 - 25
chassis front cross-member upper screws	6 - 10

BRAKE SYSTEM

Name	Torque in Nm
Brake calliper coupling	30 ÷ 33
Front brake disc mounting	11 ÷ 13
Rear brake disc mounting	11 ÷ 13
Front brake calliper mounting on fork	20 ÷ 25
Rear break calliper to chassis retainer	20 ÷ 25
Pipe / brake calliper fitting	16 ÷ 20
Calliper circuit drain fitting	12 - 16

FRONT SUSPENSION

Name	Torque in Nm
Front wheel shaft	45 ÷ 50
Holding torque of lower ring nut	20 ÷ 25
Fork stem mounting to the plate	20 ÷ 25
Lower steering ring nut	10 - 13 **
Upper steering ring nut	36 - 39
Stem upper cap	35 - 55
Fixing screw handlebar to steering tube	45 ÷ 50
Pumping element fixing screw	25 - 35
Safety screw on fork leg	6 ÷ 7
Wheel fastening screws	33 - 37

* tighten and loosen completely. ** tighten and loosen by 90°.

REAR SUSPENSION

Name	Torque in Nm
Lock nut	40 ÷ 50
Nut for bolt securing swinging arm to chassis	66 ÷ 73
Central stand retainers	25 - 30
Rear shock-absorber lower retainers	33 ÷ 41
Muffler heat guard retainers	6 - 8
Rear shock absorber upper retainers	33 ÷ 41
Swinging arm to engine retainer, muffler side	66 ÷ 70
swinging arm to engine retainer, transmission side	100 - 120
Side stand clamp	15 ÷ 20
Shock absorber to crankcase bracket fastener	20 - 25
rear shock absorber to muffler support arm bracket fastener	20 - 25
rod retainer	33 - 41
bolt securing swinging arm to chassis	14 - 17
Rear wheel shaft	104 ÷ 126

ENGINE ASSEMBLY

Name	Torque in Nm
starter motor retainers	11 - 13

THERMAL UNIT AND TIMING SYSTEM

Name	Torque in Nm
Spark plug	12 ÷ 14
Head fixing stud bolts:	***
Head fixing nuts	10 - 12
Exhaust / intake head fixing nuts:	10 - 12
Head lubrication control jet	5 - 7
Coolant temperature sensor	10 ÷ 12
counterweight mass fixing screw	7 - 8.5
Tensioner sliding block fixing screw:	10 - 14
Rpm timing sensor fixing screw:	3 - 4
injector fixing screw	3 ÷ 4
Rpm timing sensor fixing screw	3 ÷ 4
Valve lifter mass stop bell fixing screws:	30 - 35
inlet manifold fixing screws	11 - 13
Tappet cover fixing screws:	7 - 9
Throttle body fixing screws	11 ÷ 13
camshaft retaining bracket fixing screws	4 - 6
Head fixing screws	10 - 12
Lambda probe on exhaust manifold	10 - 12
Muffler to bracket fixing screw	14 - 16

*** Apply a preliminary torque of 7 Nm in a crossed sequence. - Tighten by 90° in a crossed sequence. - Tighten again by 90° in a crossed sequence.

CRANKCASE AND CRANKSHAFT

Name	Torque in Nm
Countershaft fixing nut	25 - 29
Engine oil filter	12 - 16
Engine oil drainage plug	24 ÷ 30
Engine-crankcase coupling screws	11 ÷ 13
Oil pump screws	5 - 6
Gear mounting on crankshaft screws	10 - 12
Bulkhead screws for oil pump housing cover	8 - 10

FINAL REDUCTION

Name	Torque in Nm
Rear hub cover screws	24 ÷ 27

TRANSMISSION COVER

Name	Torque in Nm
Driven pulley nut	92 - 100
Drive pulley nut	160 - 175
Anti-vibration roller screw	16.7 - 19.6
M8 retainers for transmission cover	23 - 26
M6 retainer	11 ÷ 13
Anti-vibration roller retainer	17 - 19
Clutch ring nut	65 - 75
Air deflector unit screws	7 ÷ 9
Water pump cover screws	3 ÷ 4

Name	Torque in Nm
Outside transmission cover screws	7 ÷ 9
Flywheel cover screws	11 - 13

FLYWHEEL COVER

Name	Torque in Nm
Flywheel fixing nut	115 - 125
Stator retainers	8 - 10
Blow-by recovery duct fixing screws	3 - 4
Screw fixing freewheel to flywheel	13 ÷ 15
Stator cable harness guide bracket screws	3 - 4

LUBRICATION

Name	Torque in Nm
Oil pump cover screws	0.7 ÷ 0.9
Screws fixing oil pump to the crankcase	5 - 6

See also


[Overhaul](#)
[Refitting](#)
[Refitting](#)
[Fuel tank](#)

Overhaul data

This section provides the main information for scooter servicing.

Assembly clearances

Cylinder - piston assy.

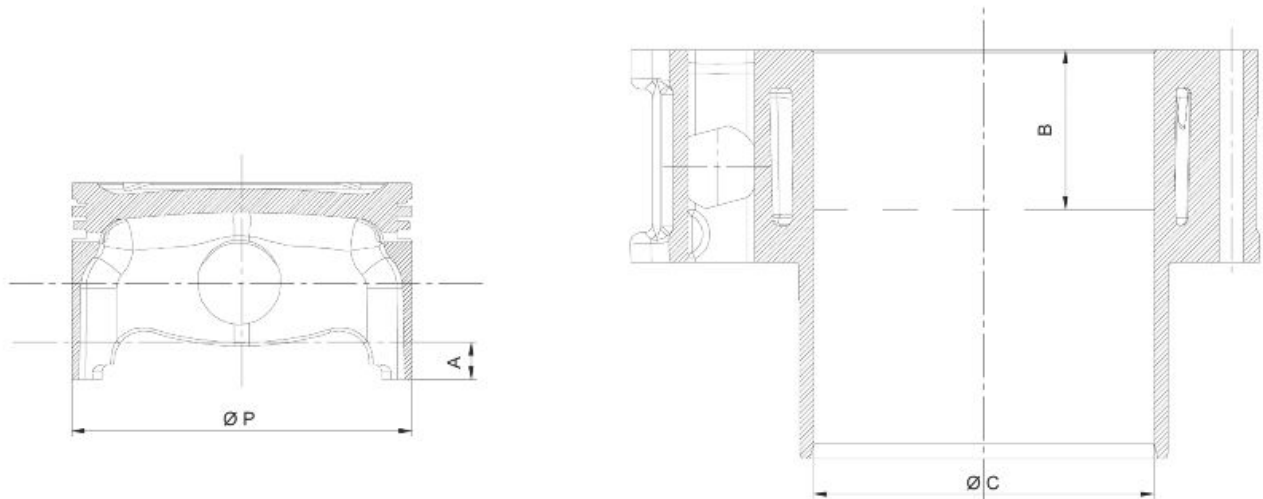

HEIGHT TO MEASURE THE PISTON

Specification	Desc./Quantity
A	10 mm
B	43 mm

CYLINDER - PISTON

Specification	Desc./Quantity
Cylinder diameter C	94+0.018-0.01
Piston diameter P	93.968±0.014


COUPLING CATEGORIES

Name	Initials	Cylinder	Piston	Play on fitting
Cylinder- Piston	A	93.990÷93.997	93.954÷93.961	0.029÷0.043
Cylinder- Piston	B	93.997÷93.004	93.961÷93.968	0.029÷0.043
Cylinder- Piston	C	94.004÷94.011	93.968÷93.975	0.029÷0.043
Cylinder- Piston	D	94.011÷94.018	93.975÷93.982	0.029÷0.043

N.B.

THE PISTON MUST BE INSTALLED WITH THE ARROW FACING TOWARDS THE EXHAUST SIDE, THE PISTON RINGS MUST BE INSTALLED WITH THE WORD «TOP» OR THE STAMPED MARK FACING UPWARDS.

Piston rings

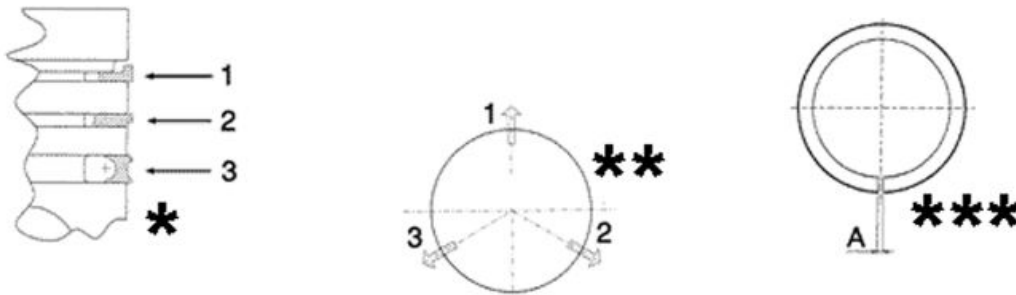

*Fit rings «2» and «3» with the word «TOP» facing upwards.

** Position the openings in the rings as shown here.

***Value «A» of sealing ring inside the cylinder.

Check the size of the sealing ring opening:

Compression ring: 0.15 ÷ 0.35 mm. Max. value 0.5 mm

Oil scraper ring: 0.25 ÷ 0.50 mm. Max. value 0.65 mm

Oil scraper ring: 0.25 ÷ 0.50 mm. Max. value 0.65 mm

Rings/housing coupling clearances:

Carefully clean the sealing ring housings.

Place a thickness gauge between the ring and the housing as shown in the drawing and check the coupling clearances.

Top ring Standard coupling clearance:


0.01÷0.06 mm

Maximum clearances allowed after use: 0.10 mm

Intermediate ring Standard coupling clearance:

0.02÷0.07 mm

Maximum clearances allowed after use: 0.10 mm

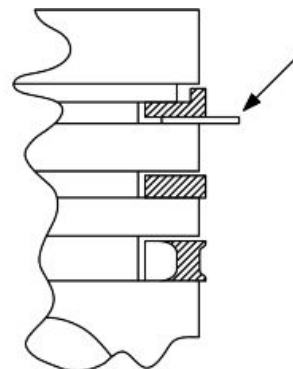

Oil scraper ring Standard coupling clearance:

0.01±0.06 mm

Maximum clearances allowed after use: 0.10


mm

Replace the piston if clearances exceed the maximum limits specified in the table.

Crankcase - crankshaft - connecting rod

Diameter of crankshaft bearings.

Measure the capacity on both axes x-y.

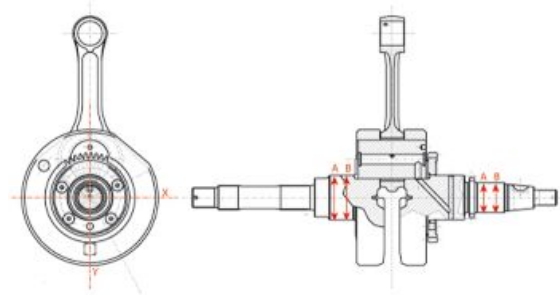


CRANKSHAFT

Specification	Desc./Quantity
Cat. 1	Standard diameter: 40.010 ÷ 40.016
Cat. 2	Standard diameter: 40.016 ÷ 40.022

Crankshaft alignment


Specific tooling

020335Y Magnetic support for dial gauge

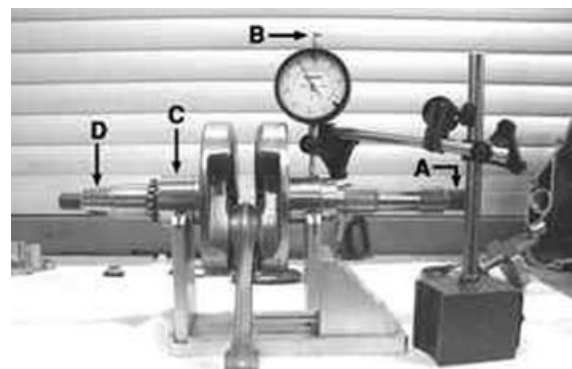


MAX. ADMISSIBLE DISPLACEMENT

Specification	Desc./Quantity
A =	0.15 mm
B =	0.010 mm
C =	0.010 mm
D =	0.10 mm

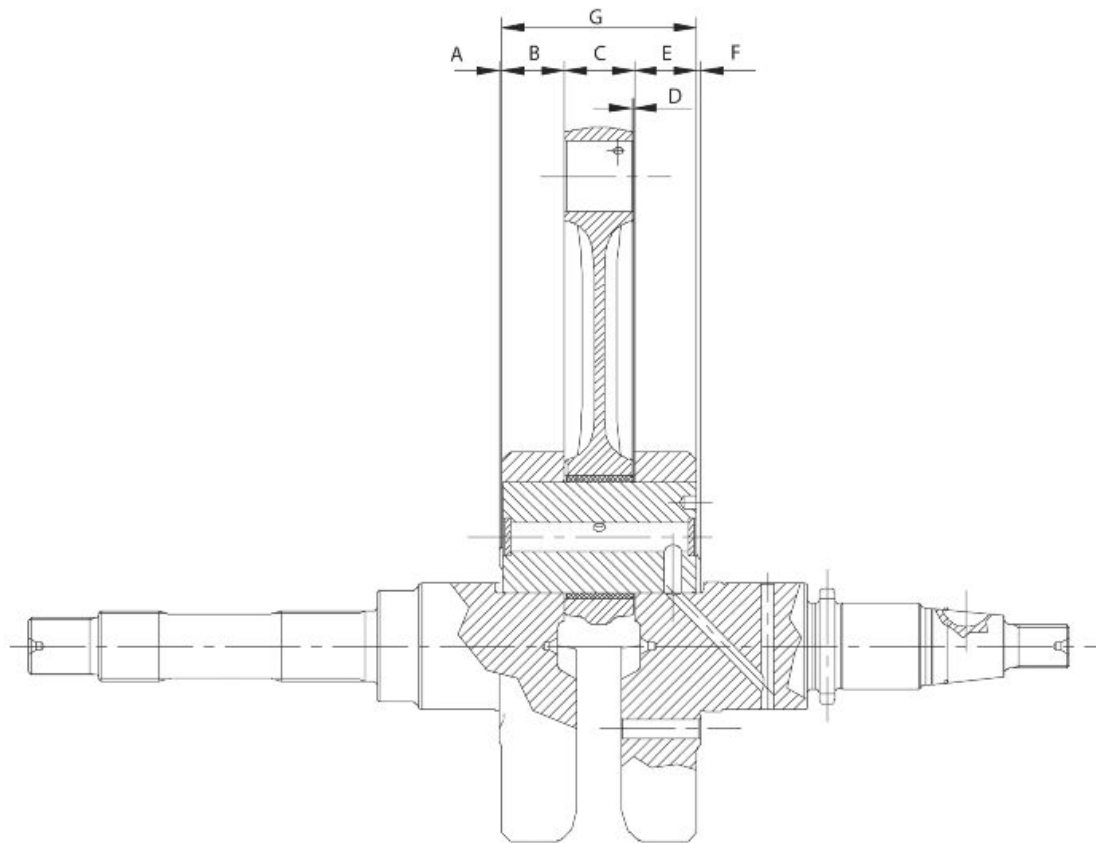

AXIAL CLEARANCE BETWEEN CRANKSHAFT AND CONNECTING ROD

Name	Description	Dimensions	Initials	Quantity
Transmission-side shoulder		1 ± 0.025	A	$D = 0.20 \div 0.50$
Half-shaft, transmission side		$20.9 - 0.05$	B	$D = 0.20 \div 0.50$
Connecting rod		$22 \ 0.10 - 0.15$	C	$D = 0.20 \div 0.50$
Flywheel-side shoulder		1.8 ± 0.025	F	$D = 0.20 \div 0.50$
Flywheel side half-shaft		$19.6 + 0.05$	E	$D = 0.20 \div 0.50$
Complete crankshaft		$65.5 +0.1 -0.05$	G	$D = 0.20 \div 0.50$

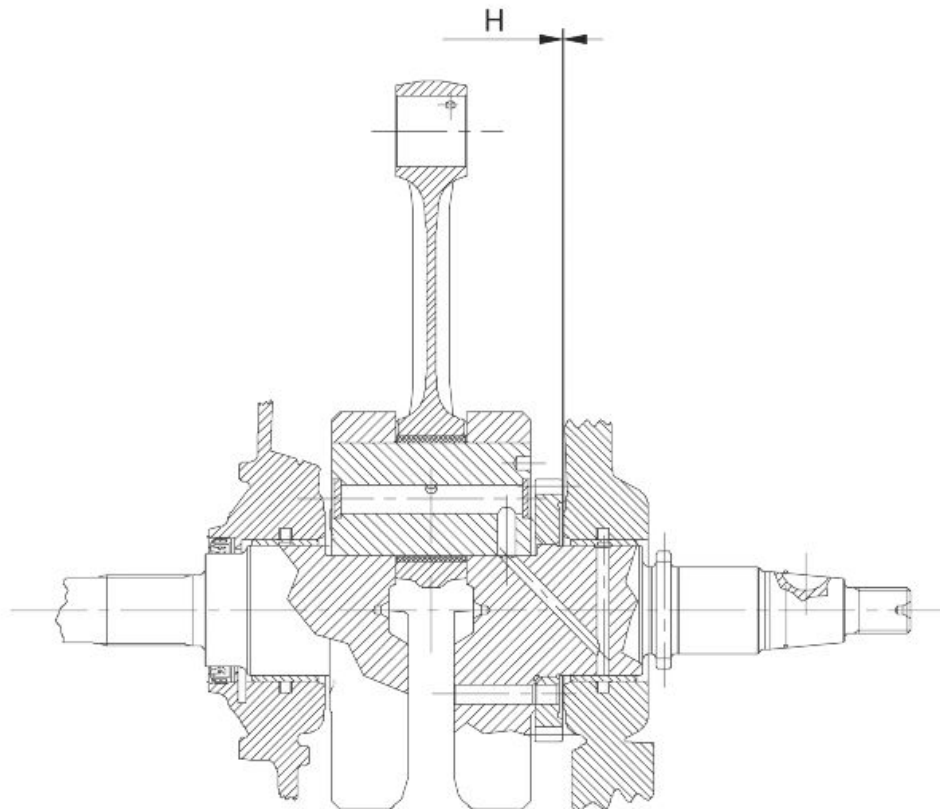

Characteristic

Crankshaft-crankcase axial clearance (H)

0.1 ÷ 0.405 mm (when cold)

Compression ratio


10.5: 1

Slot packing system

Shimming system to control compression ratio

DISTANCE «A» IS A PROTRUSION OR RECESS VALUE OF THE PISTON CROWN WITH RESPECT TO THE CYLINDER PLANE.

DISTANCE «A» HELPS DETERMINE THE THICKNESS OF GASKET «B» THAT HAS TO BE FITTED TO THE CYLINDER HEAD IN ORDER TO RESTORE COMPRESSION RATIO. BASE GASKET «B» MUST BE THICKER THE MORE THE PLANE FORMED BY THE PISTON TOP PROTRUDES FROM THE PLANE FORMED BY THE CYLINDER HEAD. ON THE OTHER HAND, THE MORE THE PISTON TOP IS RECESSED INTO THE CYLINDER TOP PLANE, THE SMALLER THE GASKET THICKNESS.

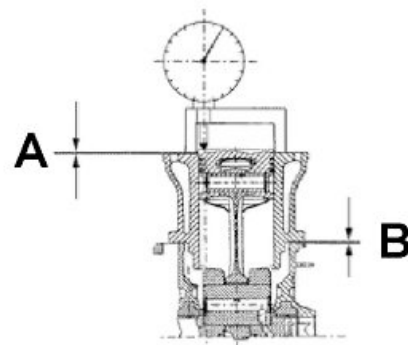

Characteristic**Compression ratio**

10.5: 1

BASE GASKET THICKNESS

Name	Measure A	Thickness
«A» MEASURE TAKEN	- 0.185 - - 0.10	0.4 ± 0.05
«A» MEASURE TAKEN	- 0.10 - + 0.10	0.6 ± 0.05
«A» MEASURE TAKEN	+ 0.10 ÷ + 0.185	0.8 ± 0.05

N.B.

VALUES INDICATED WITH «-» REFER TO PISTON CROWN RECESSES WITH RESPECT TO THE CYLINDER PLANE.

N.B.

DISTANCE «A» MUST BE MEASURED WITHOUT ANY GASKET FITTED AT «B»

Products**RECOMMENDED PRODUCTS TABLE**







Product	Description	Specifications
AGIP ROTRA 80W-90	Rear hub oil	SAE 80W/90 Oil that exceeds the requirements of API GL3 specifications
AGIP GP 330	Grease for brake control levers, throttle, stand	White calcium complex soap-based spray grease with NLGI 2; ISO-L-XBCIB2
AGIP CITY HI TEC 4T	Oil to lubricate flexible transmissions (throttle control)	Oil for 4-stroke engines
AGIP BRAKE 4	Brake fluid	FMVSS DOT4 Synthetic fluid
AGIP ANTIFREEZE SUPER	Coolant	-
AGIP FILTER OIL	Oil for air filter sponge	Mineral oil with specific additives for increased adhesiveness
AUTOSOL METAL POLISH	Muffler cleaning paste	Specific product for cleaning and polishing stainless steel mufflers.
AGIP CITY HI TEC 4T	Engine oil	SAE 5W-40, API SL, ACEA A3, JASO MA Synthetic oil
AGIP GREASE SM 2	Grease for the tone wheel revolving ring	Soap-based lithium grease containing NLGI 2 Molybdenum disulphide; ISO-L-XBCHB2, DIN KF2K-20
AGIP GREASE PV2	Grease for the steering bearings, pin seats and swinging arm	White anhydrous-calcium based protective grease for roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2.





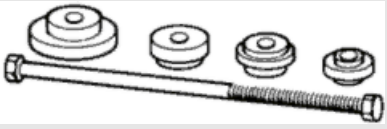

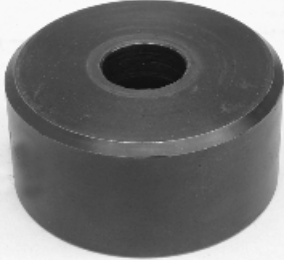
INDEX OF TOPICS

TOOLING

TOOL

APPROPRIATE TOOLS

Stores code	Description	
001330Y	Tool for fitting steering seats	
001467Y002	Driver for OD 73 mm bearing	
001467Y006	Pliers to extract 20 mm bearings	
001467Y007	Driver for OD 54 mm bearing	
001467Y008	Pliers to extract 17 mm ø bearings	
001467Y014	Pliers to extract ø 15-mm bearings	

Stores code	Description	
001467Y031	Bell	
001467Y034	Extraction pliers for ø 15 mm bearings	
001467Y035	Belle for OD 47-mm bearings	
002465Y	Pliers for circlips	
006029Y	Punch for fitting fifth wheel seat on steering tube	
020004Y	Punch for removing fifth wheels from headstock	
020055Y	Wrench for steering tube ring nut	
020150Y	Air heater support	

Stores code	Description	
020151Y	Air heater	
020193Y	Oil pressure gauge	
020201Y	Spacer bushing driving tube	
020262Y	Crankcase splitting strip	
020306Y	Punch for assembling valve seal rings	
020329Y	MityVac vacuum-operated pump	
020330Y	Stroboscopic light for timing control	

Stores code

Description


020331Y

Digital multimeter



020333Y

Single battery charger

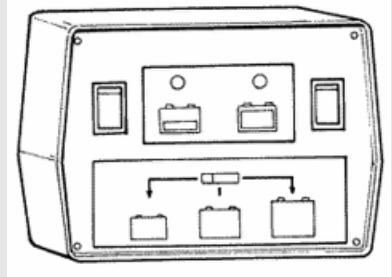

020334Y

Multiple battery charger



020335Y

Magnetic support for dial gauge



020357Y

32 x 35 mm adaptor







020358Y






37x40-mm adaptor

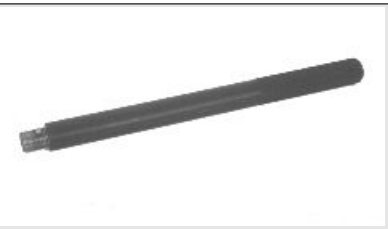

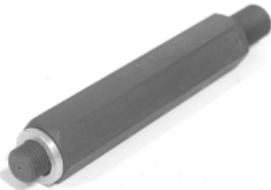


020359Y







42x47-mm adaptor










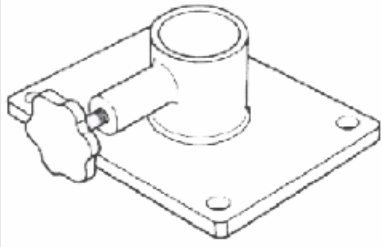



Stores code	Description	
020360Y	Adaptor 52 x 55 mm	
020364Y	25-mm guide	
020376Y	Adaptor handle	
020382Y012	bush (valve removing tool)	
020412Y	15 mm guide	
020424Y	Driven pulley roller casing fitting punch	
020431Y	Valve oil seal extractor	

Stores code	Description	
020434Y	Oil pressure control fitting	
020439Y	17 mm guide	
020444Y	Tool for fitting/ removing the driven pulley clutch	
020456Y	Ø 24 mm adaptor	
020458Y	Puller for lower bearing on steering tube	

Stores code	Description	
020459Y	Punch for fitting bearing on steering tube	
020460Y	Scooter diagnosis and tester	
020467Y	Flywheel extractor	
020468Y	Piston fitting ring	
020469Y	Reprogramming kit for scooter diagnosis tester	

Stores code	Description	
020470Y	Pin retainers installation tool	 A set of three metal tools used for installing pin retainers. It includes a long cylindrical pin, a shorter cylindrical sleeve, and a handle with a threaded end for driving the pin into the sleeve.
020471Y	Pin for countershaft timing	 A single, long, dark-colored metal pin with a slightly tapered end, used for timing the countershaft.
020472Y	Flywheel lock wrench	 A large, dark metal wrench with a circular head and a long handle. A small cylindrical component is shown separately below the main tool.
020474Y	Driving pulley lock wrench	 A dark metal wrench with a curved, hook-like shape and a central opening, used for locking the driving pulley.
020475Y	Piston position checking tool	 A circular metal tool with several vertical pins and a central block, used for checking the position of the piston.
020476Y	Stud bolt set	 A set of three dark metal stud bolts of varying lengths, used for engine assembly.

Stores code	Description	
020478Y	Punch for driven pulley roller casing	
020479Y	Countershaft lock wrench	
020480Y	Petrol pressure check set	
020481Y	Control unit interface wiring	
020482Y	Engine support	
020483Y	30 mm guide	

Stores code	Description	
020512Y	Piston fitting fork	
020527Y	Engine support base	
020604Y011	Fitting adapter	
020565Y	Flywheel lock calliper spanner	
020623Y	Pre-service gas extraction set	
Marelli MIU diagnosis software	Marelli MIU diagnosis software	

INDEX OF TOPICS

MAINTENANCE

MAIN



Maintenance chart

Adequate maintenance is fundamental to ensuring long-lasting, optimum operation and performance of your scooter.

For this purpose, PIAGGIO offers a set of checks and maintenance services (for payment) which are included in the summary table shown on the following page. Any minor faults should be reported without delay to an **Authorised Service Centre or Dealer** without waiting until the next scheduled service to solve it.

All scheduled maintenance services must be carried out at the specified times, even if the stated mileage has not yet been reached. Carrying out scheduled services on time is necessary to ensure your warranty remains valid. For any further information concerning Warranty procedures and "Scheduled Maintenance", please refer to the "Warranty Booklet".

EVERY 2 YEARS

60'

Action

- Coolant - change
- Brake fluid - change

AFTER 1,000 KM

60'

Action

- Safety locks - check
- Throttle lever - adjustment
- Engine oil - change
- Electrical system and battery - check
- Coolant level - check
- Brake fluid level - check
- Engine oil - replacement
- Brake pads - check condition and wear
- Tyre pressure and wear - check
- Vehicle and brake test - road test
- Hub oil - change
- Steering - Check

AFTER 5,000 KM; 25,000 KM; 35,000 KM; 55,000 KM; 65,000 KM

10'

Action

Engine oil - level check/ top-up
Brake pads - check condition and wear
Centre stand - lubrication

AFTER 10,000 KM; 50,000 KM; 70,000 KM

120'

Action

Safety locks - check
Driving belt - replacement
Throttle lever - adjustment
Air filter - clean
Engine oil - change
Electrical system and battery - check
Coolant level - check
Brake fluid level - check
Engine oil - replacement
Brake pads - check condition and wear
Sliding block / variable speed rollers - change
Tyre pressure and wear - check
Vehicle and brake test - road test
Hub oil - check
Suspensions - check
Steering - Check
Centre stand - lubrication
Spark plugs - replacement

AFTER 15,000 KM; 45,000 KM; 75,000 KM

45'

Action

Engine oil - level check/ top-up
Brake pads - check condition and wear
Centre stand - lubrication

AFTER 20,000 KM; 40,000 KM; 60,000 KM AND 80,000 KM

190'

Action

Spark plugs - replacement
Driving belt - replacement
Throttle lever - adjustment
Air filter - check
Engine oil - change
Valve clearance - check
Electrical system and battery - check
Coolant level - check
Engine oil - replacement
Brake pads - check condition and wear
Sliding block / variable speed rollers - change
Tyre pressure and wear - check
Vehicle and brake test - road test
Hub oil - change
Suspensions - check
Steering - Check

Action

Centre stand - lubrication
Brake fluid level - check

30,000 KM


200'

Action

Safety locks - check
Driving Belt - replacement
Throttle lever - adjustment
Air filter - clean
Engine oil - change
Electrical system and battery - check
Coolant level - check
Brake fluid level - check
Engine oil - replacement
Hub oil - check
Brake pads - check condition and wear
Sliding block / variable speed rollers - change
Tyre pressure and wear - check
Vehicle and brake test - road test
Suspensions - check
Steering - Check
Centre stand - lubrication
Spark plugs - replacement

Spark plug**Check and replacement****CAUTION**

THE SPARK PLUG MUST BE REMOVED WHEN THE ENGINE IS COLD. CHECK AND REPLACE THE SPARK PLUG AS INDICATED IN THE SCHEDULED MAINTENANCE TABLE. USING NON-COMPLYING IGNITION CONTROL UNITS OR SPARK PLUGS OTHER THAN THOSE PRESCRIBED MAY SERIOUSLY DAMAGE THE ENGINE.

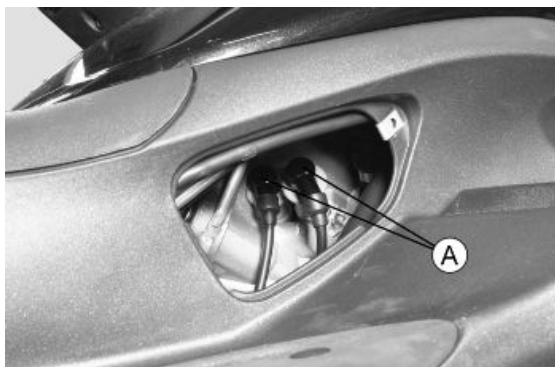

This engine has two spark plugs. To remove them, proceed as follows:

1. Remove the access cover over the spark plugs on the left-hand side of the scooter and reach into the spark plugs with your hand;
2. Disconnect the caps «A» of the spark plug HV wire;
3. Unscrew the spark plugs using the spark plug wrench supplied;
4. When refitting, place the spark plugs into the hole at the required angle and tighten by hand until it is finger tight;
5. Use the wrench only for final tightening of the spark plug;
6. Place caps «A» fully over the spark plugs

Characteristic

Spark plug

NGK CR7EKB

Electrode gap

0.7 ÷ 0.9 mm



Adjust the gap if necessary, carefully bending the earth electrode. In the event of irregularity, replace the spark plug with a recommended type.

- Fit the spark plug with the correct inclination and manually screw it all the way down, then use the special spanner to tighten it.


- Insert the cap onto the spark plug and proceed with the reassembly operations.

Hub oil**Check**

- Park the scooter on flat ground and rest it on the central stand.
- Unscrew the oil dipstick "A", dry it with a clean cloth and reinsert it, screwing it in thoroughly.
- Pull out the dipstick and check that the oil level is between the MAX. and MIN. levels indicated on the dipstick (see figure); if the level is below the MIN value, restore the proper amount of oil in the hub.
- Screw the oil bar back on, checking that it is tightly in place.

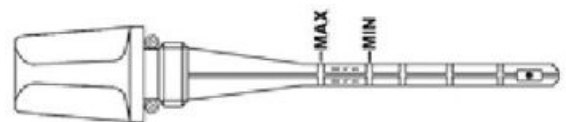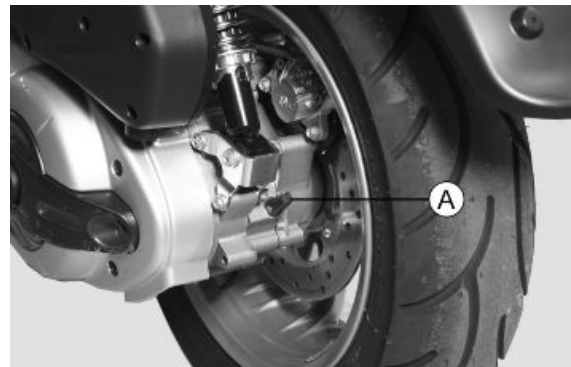**Replacement**

- Remove the oil filler cap "A".
- Prepare a suitable container.
- Remove the oil drainage cap "B" and let the oil drain out completely.
- Tighten the drainage cap with its gasket and refill.
- Remove the oil loading cap

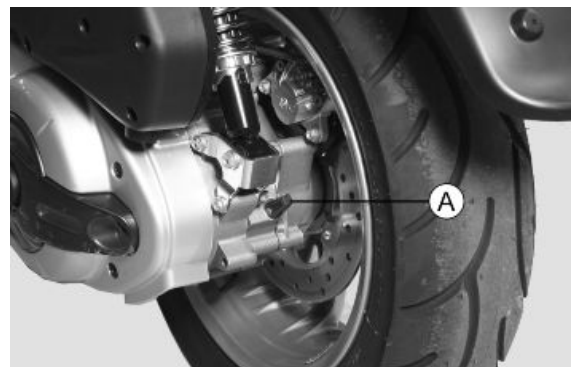**Recommended products**


AGIP ROTRA 80W-90 rear oil hub

SAE 80W/90 Oil that exceeds the requirements of API GL3 specifications

Characteristic

Transmission oil

250 cm³

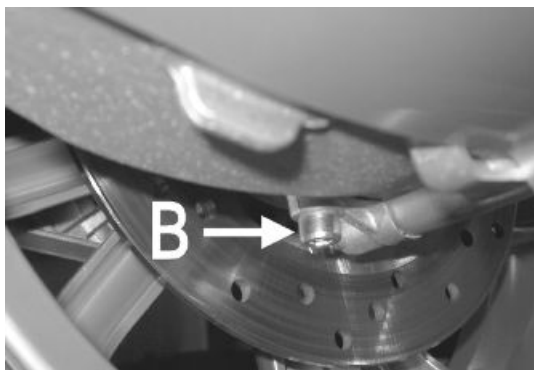

Air filter

- Remove the air cleaner cover after unscrewing the 9 fixing screws.
- Take out the filtering element.
- Replace the air filter with a new one.

Check the blow-by and condensate outlet pipe; empty if when full.



Cleaning:

- Wash with water and car shampoo.
- Dry with short blasts of compressed air and a clean cloth.
- Soak with a 50% mixture of gasoline and oil.
- Drip dry the filtering element and then squeeze it between your hands without wringing.
- Refit the filtering element.

CAUTION

NEVER RUN THE ENGINE WITHOUT THE AIR FILTER, THIS WILL RESULT IN AN EXCESSIVE CYLINDER AND PISTON WEAR AND ALSO IN CARBURETTOR DAMAGE.

CAUTION

WHEN TRAVELLING ON DUSTY ROADS, THE AIR FILTER MUST BE CLEANED MORE OFTEN THAN SHOWN IN THE SCHEDULED MAINTENANCE CHART.

Recommended products

AGIP FILTER OIL Oil for air filter sponge

Mineral oil with specific additives for increased adhesiveness

N.B.

FAILURE TO OBSERVE THE FILTERING ELEMENT CLEANING RULES MAY LEAD INCORRECT LUBRICATION OF THE PART INVOLVED. POOR LUBRICATION COMPROMISES THE FILTERING ELEMENT CAPACITY. EXCESSIVE LUBRICATION, AS WELL AS A DIRTY FILTER, RESULTS IN A RICH CARBURATION.


Engine oil

In 4T engines, the engine oil is used to lubricate the distribution elements, the bench bearings and the thermal group. **An insufficient quantity of oil can cause serious damage to the engine.**

In all 4T engines, the deterioration of the oil characteristics, or a certain consumption should be considered normal, especially if during the run-in period. Consumption levels in particular can be influenced by the conditions of use (e.g.: oil consumption increases when driving at "full throttle").

Check

This operation must be carried out with the engine cold and following the procedure below:

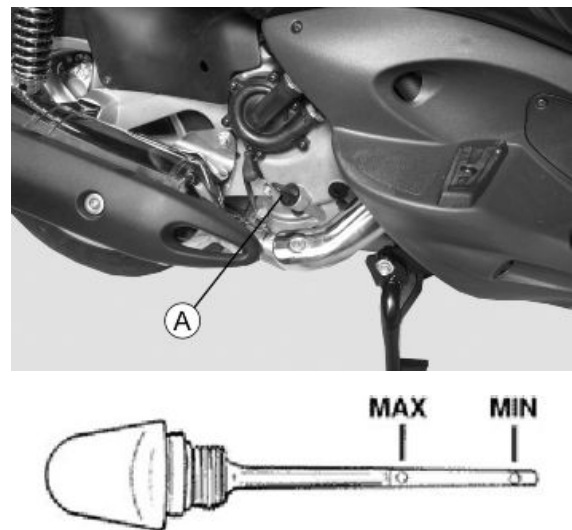

- 1) Rest the scooter on the central stand and on a flat ground.
- 2) Unscrew the cap/dipstick "A", dry it with a clean cloth and reinsert it, **screwing it thoroughly**.
- 3) Remove the cap/dipstick again and check that the level is between the max. and min levels; top up, if required.

Topping up from the MIN to MAX. level requires around 1700 cc.

If the check is carried out after the vehicle has been used, and therefore with a hot engine, the level line will be lower; in order to carry out a correct check it is necessary to wait at least 10 minutes after the engine has been stopped, so as to get the correct level.

Oil top up

The oil should be topped up after having checked the level and in any case by adding oil **without ever exceeding the MAX. level**.

The restoration level between the **MIN** and **MAX** levels implies a quantity of oil of **approx. 400 cc**.

Engine oil filter


CAUTION

DO NOT DISPOSE OF OIL IN THE ENVIRONMENT. OIL, GASKET AND FILTER SHOULD BE DISPOSED OF ACCORDING TO THE REGULATIONS IN FORCE.


WARNING

AVOID TOUCHING PARTS OF THE ENGINE WHEN HOT, AS THIS MAY CAUSE BURNS.


- Remove the muffler.
- Remove the filler plug «A».

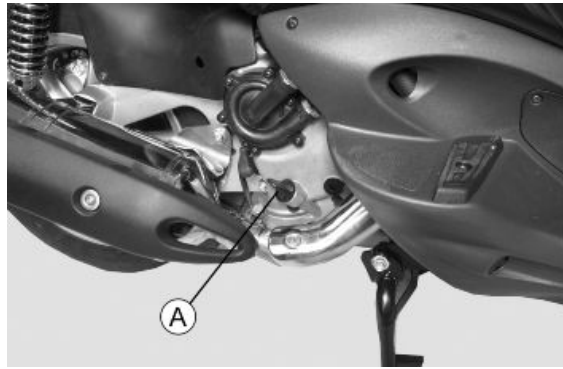

- Remove and clean the mesh pre-filter of the drainage plug «B» with compressed air.

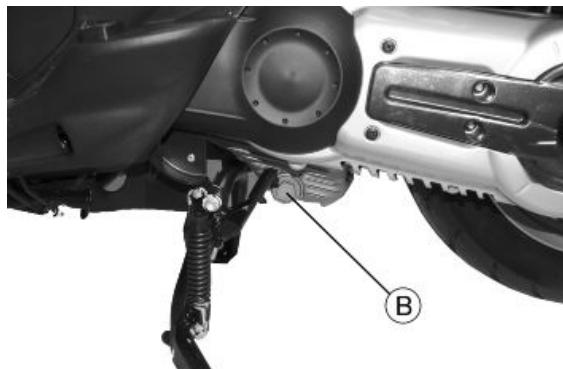

- Use a belt spanner for filters to remove cartridge filter "C".
- Make sure the pre-filter and drain cap O-rings are in good condition.
- Lubricate them and refit the mesh filter and oil drain cap by tightening to the prescribed torque.
- Refit a new cartridge filter making sure to lubricate the O-ring before fitting, then screw until it comes into contact with the seal and further tighten to the prescribed torque.

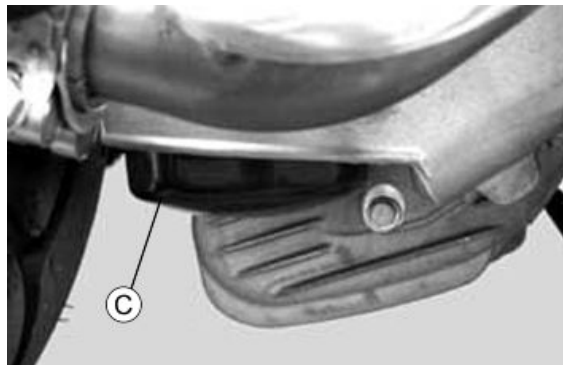

- Refit the muffler.
- Add recommended engine oil.
- Start the engine and let it run for a few minutes and then turn it off.

After 5 minutes check the level and top up, if necessary, **never exceed the MAX. level.**

N.B.

IF THE OIL IS CHANGED WITHOUT CHANGING THE CARTRIDGE FILTER (1ST COUPON) ADD AROUND 1500 CC OF OIL INSTEAD OF 1700 CC SINCE PART OF THE LUBRICATION CIRCUIT IS FILLED.

Characteristic

Engine oil:

1700 cm³

Locking torques (N*m)


Engine oil drainage plug 24 ÷ 30 Engine oil filter 12 - 16

Oil pressure warning light

Warning light (low oil pressure)

The vehicle is equipped with a warning light on the instrument panel that lights up when the key is turned to the "ON" position. However, this light should switch off once the engine has been started.

If the light comes on during braking, at idling speed or while turning, it is necessary to first switch off the engine and then to check the oil level and the lubrication system

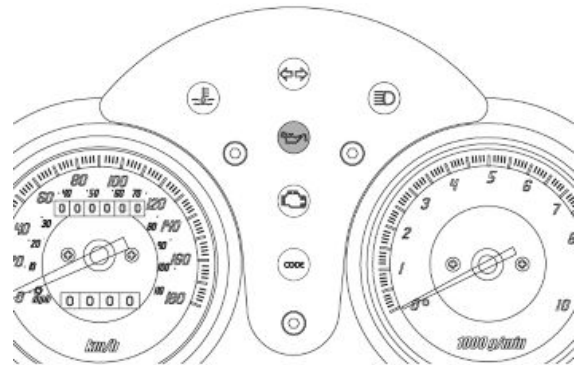

Checking the valve clearance

- To check the clearance in the valves collimate the references between the cam shaft control pulley and head.
- Use a feeler to make sure the clearance between the valve and register screw correspond to the indicated values. If the clearance does not correspond, adjust it by loosening the lock nut using a screwdriver on the set screw as shown in the figure.



Characteristic

Valve clearance

Inlet: 0.15 mm

Outlet: 0.15 mm

Cooling system


Level check

Check coolant level when the engine is cold, as indicated in the scheduled maintenance table. Follow the steps below:

- Place the scooter on its centre stand and on flat ground.
- Undo the screw shown in the figure and remove the RHS expansion tank cap.

Remove the expansion tank cap and top up if the fluid level is close to or below the «MIN» level inside the expansion tank. The fluid level should always be between the "MIN" and "MAX." level.

- To check the level, it is necessary to look inside the expansion tank: the two marks into the expansion tank indicate the two levels, "MIN" and "MAX."

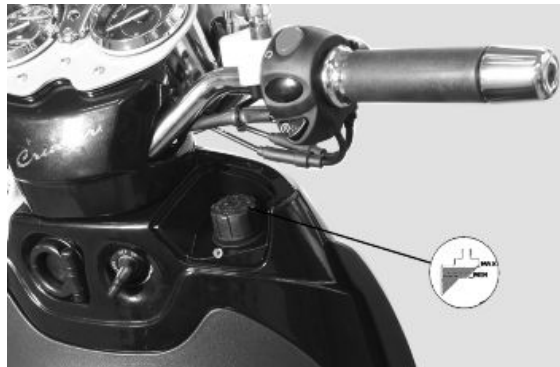

CAUTION

DO NOT EXCEED THE MAX. LEVEL WHEN FILLING SO AS TO AVOID THE COOLANT ESCAPING FROM THE EXPANSION TANK WHEN THE vehicle IS IN USE.

N.B.

THE COOLANT CONSISTS OF A MIXTURE OF DE-IONISED WATER AND FLUID FOR SEALED CIRCUITS. THE RESULTING MIXTURE ALLOWS A DECREASE OF THE FREEZING POINT TO -35°C. THE MIXTURE AT A PRESSURE OF 0.9 BAR INCREASES THE BOILING POINT TO APPROX. 125°C. THE RECOMMENDED FLUID IS ALSO PROTECTIVE FOR ALUMINIUM ALLOYS, AND OVER TIME THIS FEATURE MAY DECREASE. PERIODICAL REPLACEMENT IS THEREFORE ADVISABLE.

Recommended products

AGIP ANTIFREEZE SUPER Coolant

-

See also

[Cooling system](#)

Braking system

Level check

- Position the vehicle on a flat surface and on the centre stand
- Check the brake fluid level via the special indicator located on the pump.



N.B.

THE LEVEL TENDS TO DROP AS THE BRAKE PADS GET WORN, A MINIMUM LEVEL SHOULD NOT BE REACHED. IF THE LEVEL IS TOO LOW, CHECK AND FIX THE SYSTEM SEALS, IF REQUIRED. TOP UP THE PUMP TANK, IF REQUIRED, CONSIDERING THAT THE "MAX." LEVEL MUST ONLY BE OBTAINED WITH NEW PADS.

Top-up

CAUTION

ONLY USE DOT 4-CLASSIFIED BRAKE FLUID.

Proceed as follows:

- Position the scooter on a flat surface and on the centre stand.
- Remove the rear-view mirrors by undoing the nut «A» and remove the plastic cover «B».



- Remove the tank cap by removing the two screws, remove the gasket and top up using only the liquid specified without exceeding the maximum level.

CAUTION

MAKE SURE THE BRAKE FLUID DOES NOT GET INTO YOUR EYES OR ON YOUR SKIN OR CLOTHES. IF THIS HAPPENS ACCIDENTALLY, WASH WITH WATER.

WARNING

BRAKE CIRCUIT FLUID IS VERY CORROSIVE; DO NOT LET IT COME INTO CONTACT WITH THE PAINTED PARTS.

WARNING

THE BRAKE FLUID IS HYGROSCOPIC, IN OTHER WORDS, IT ABSORBS MOISTURE FROM THE SURROUNDING AIR. IF THE HUMIDITY IN THE BRAKING FLUID EXCEEDS A CERTAIN



VALUE, IT WILL LEAD TO INEFFICIENT BRAKING; FOR THIS REASON, NEVER USE BRAKING FLUID FROM CONTAINERS THAT HAVE ALREADY BEEN OPENED, OR PARTIALLY USED.

Recommended products

AGIP BRAKE 4 Brake fluid

FMVSS DOT4 Synthetic fluid


Given normal climatic conditions, change fluid as indicated in the scheduled maintenance table.

N.B.

SEE THE BRAKING SYSTEM CHAPTER WITH REGARD TO THE CHANGING OF BRAKE FLUID AND THE BLEEDING OF AIR FROM THE CIRCUITS.

Headlight adjustment

- Place the scooter in use conditions, with tyres inflated to the prescribed pressure on flat ground at 10 m from a white screen placed in dim light.
- Make sure that the scooter's axle is perpendicular to the screen.
- Turn the headlight on and check that the limit of the light beam projected onto the screen does not exceed $\frac{9}{10}$ of the headlight centre height from the ground and that it is not less than $\frac{7}{10}$.

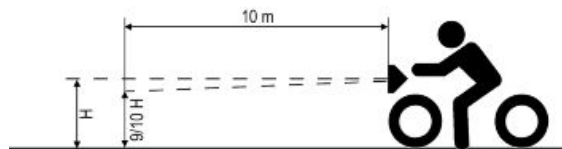

Light beam vertical adjustment

Loosen the screw «A» and rotate the light until the optimal direction is obtained.

N.B.

THE ABOVE PROCEDURE COMPLIES WITH THE EUROPEAN STANDARDS REGARDING MAXIMUM AND MINIMUM HEIGHT OF LIGHT BEAMS. REFER TO THE STATUTORY REGULATIONS IN FORCE IN EVERY COUNTRY WHERE THE vehicle IS USED.



Checking the end compression pressure

- Remove the spark plug cap with cold engine.
- Remove the ignition spark plug.
- Fit a compression test gauge into the spark plug seat using a 10 mm spark plug union at the proper tightening torque.
- Disconnect the revolution-timing sensor connector.

- Let the engine run using the starter and with the throttle body in fully open position as long as the gauge value is steady. If pressure is correct (> 11 bar), remove the tool and reinstall the spark plug, the cap and the rev counter connector.
- If the pressure is less than indicated, check the rpm at which the test is carried out; if it is less than 450 rpm, check the starter system; if not, check the following:
 - Distribution timing
 - Valve clearance
 - Check valve seal
 - Check lining seal
 - Proper compression ratio selection



Locking torques (N*m)**Fitting for compression test 10**


INDEX OF TOPICS

ELECTRICAL SYSTEM

ELE SYS

A MIU power supply device has been fitted to a first production lot. This device stabilises the voltage supplied to the injection control unit when there are potential voltage drops (e.g. at start-up). The device is located in series between fuse No.1 (7.5A) and pin No. 6 of the MIU device (ORANGE-BLACK cable). In case of faults attributable to the MIU supplied directly from the battery and upon diagnosing the ORANGE-BLACK line, consider checking the device connections. Set the multimeter on the "diode test" as shown in the picture. Connect the multimeter red lead to the device RED cable. Connect the multimeter black lead to the device ORANGE-BLACK cable. Check voltage is approx. 0.6 V. Check that no value is displayed when the leads are inverted.

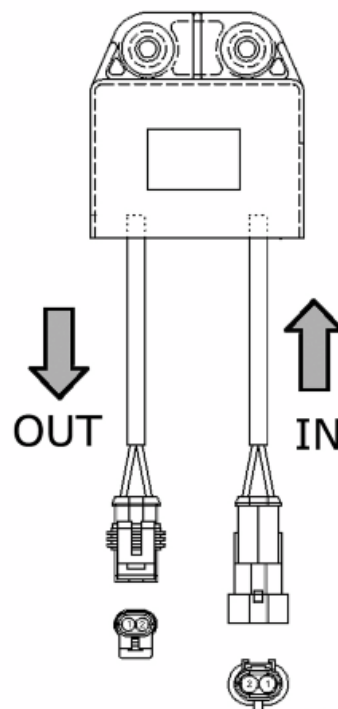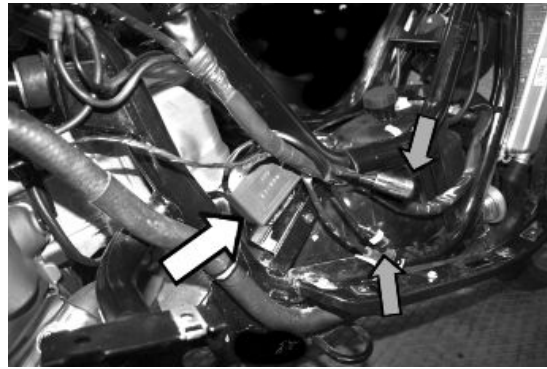

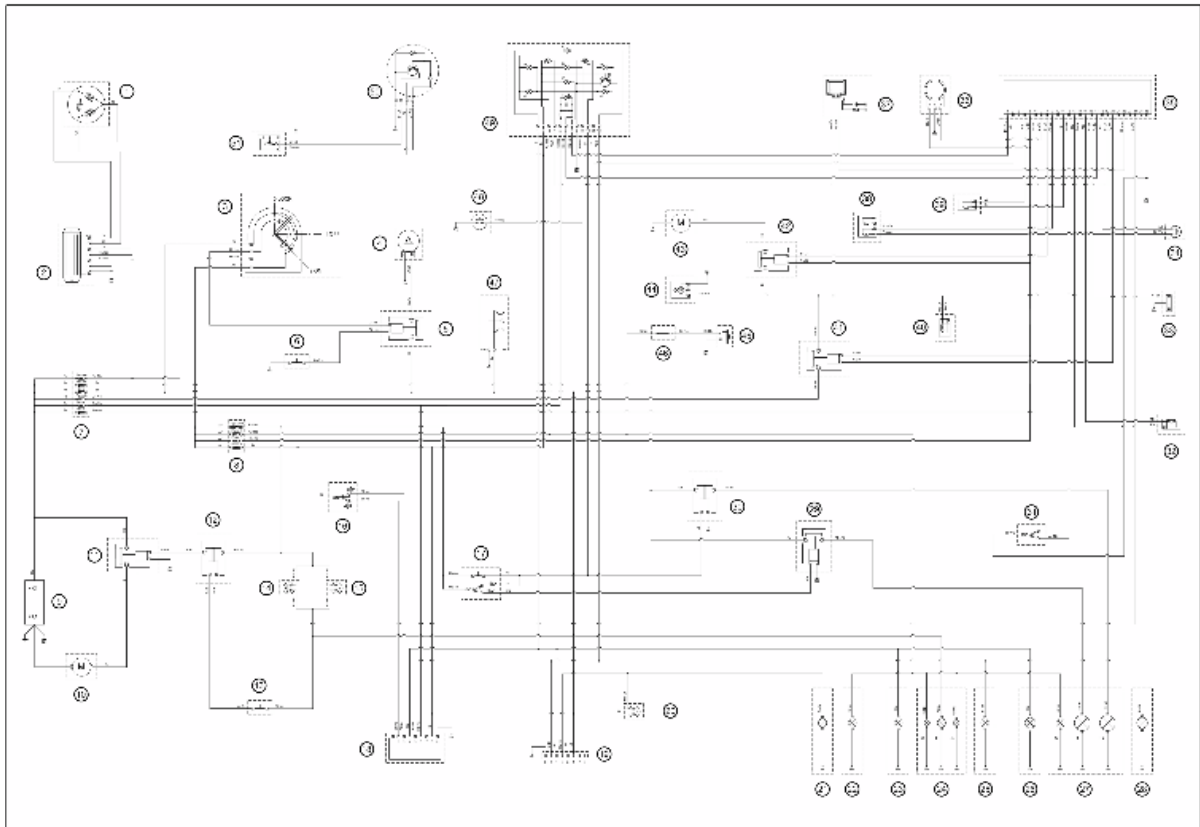

KEY

1. Magneto flywheel
2. Voltage regulator
3. Key switch
4. Saddle opening actuator
5. Relay for saddle opening
6. Saddle opening switch
7. Rear fuse unit
8. Front fuse unit
9. Battery
10. Starter motor
11. Start up remote control switch
12. Relay for the start-up remote control switch
13. Start-up button
14. Stop button on rear brake
15. Stop button on front brake
16. Turn indicator switch
17. Light switch
18. Turn indicator control device
19. Wiring for antitheft device

20. Helmet compartment light control button

21. Helmet compartment internal light

22. Licence plate light bulb

23. Rear left turn indicator

24. Rear light

A. Tail light bulbs

B. Stop light bulb

25. Rear right turn indicator

26. Front left turn indicator

27. Headlight

A. Tail light bulb

B. Low-beam light bulb

C. High-beam light bulb

28. Front right turn indicator

29. Relay low-beam light

30. Relay high-beam light

31. Engine stop switch

32. Revolution sensor

33. Diagnosis connector

34. Side stand switch

35. Injection ECU

1. Injection telltale light LED

2. Rpm indicator on instrument panel

4. Lambda probe (O2-)

5 Live

6 Power from battery

7. Immobilizer aerial

8. Relay electric fan

9. Water temperature sensor

11. Lambda probe (O2+)

12. Engine stop switch

13. Engine revolution sensor positive

14. Injector

15. Engine revolution sensor negative

16. Diagnosis

17. Immobilizer LED

18. Side stand

19. Water temperature warning light

- 20. Relay injection loads
- 22. HV coil
- 24. Start-up enabling
- 26. Ground
- 36.** Immobilizer aerial
- 37.** HV coil
- 38.** Engine temperature sensor
- 39.** Lambda probe
- 40.** Injector
- 41.** Injection load remote control
- 42.** Relay for electric fan
- 43.** Motor for electric fans
- 44.** Fuel pump
- 45.** Horn
- 46.** Horn button
- 47.** 12V -180W socket
- 48.** Oil pressure sensor
- 49.** Instrument panel
 - A. Panel lighting bulbs
 - B. Water temperature warning light
 - C. Turn indicator warning light
 - D. Oil warning light
 - E. Engine disabled warning light
 - F. Immobilizer
 - G. High-beam warning light
 - H. Rpm indicator
- 50.** Fuel gauge
- 51.** Fuel level transmitter

KEY

Ar: Orange **Az:** Sky Blue **Bi:** White **Bl:** Blue **Gi:** Yellow **Gr:** Grey **Ma:** Brown **Ne:** Black **Ro:** Pink **Rs:** Red **Ve:** Green **Vi:** Purple

Components arrangement

Component layout


Electronic control unit

It is placed on the throttle body. To reach it, remove the inspection cover inside the helmet compartment.




Voltage regulator

The voltage regulator is located in the upper part of the rear wheel compartment. To remove the regulator, loosen the two screws inside the helmet compartment.

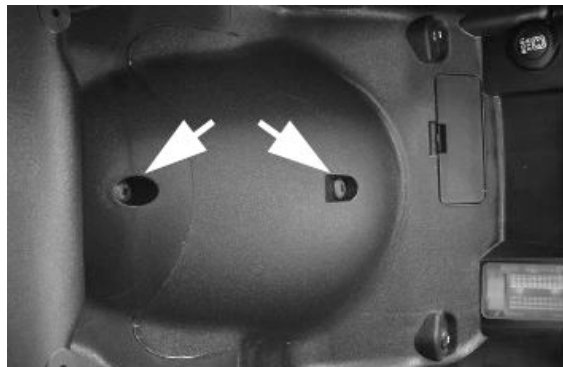


HV coil

To access the HV coil, remove the footrest on the left-hand side.

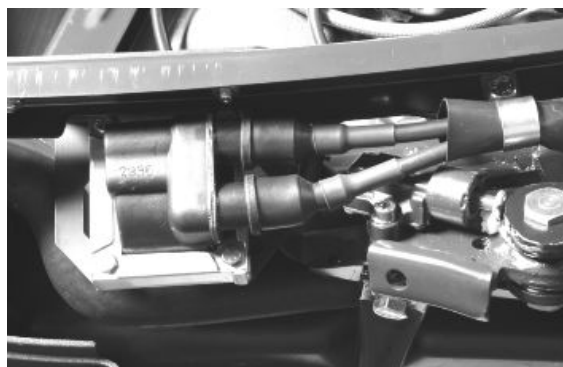

Stand switch

To access the stand switch, remove the footrest on the left-hand side.

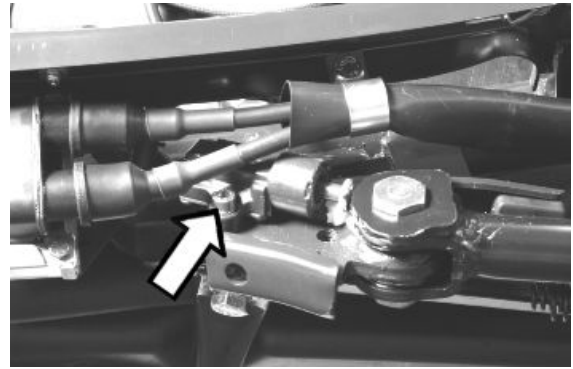**Lambda probe**

The lambda probe is mounted on the exhaust manifold

**Connectors and preparation****Diagnostic socket**

To access the diagnostic socket, remove the cover on the lower right side panel by loosening the screw.

The connector is attached to the cover.

**Antitheft connector**


To access the connector for the antitheft device, remove the front shield. The connector is on the left side of the vehicle.





Electrical system installation





Front side


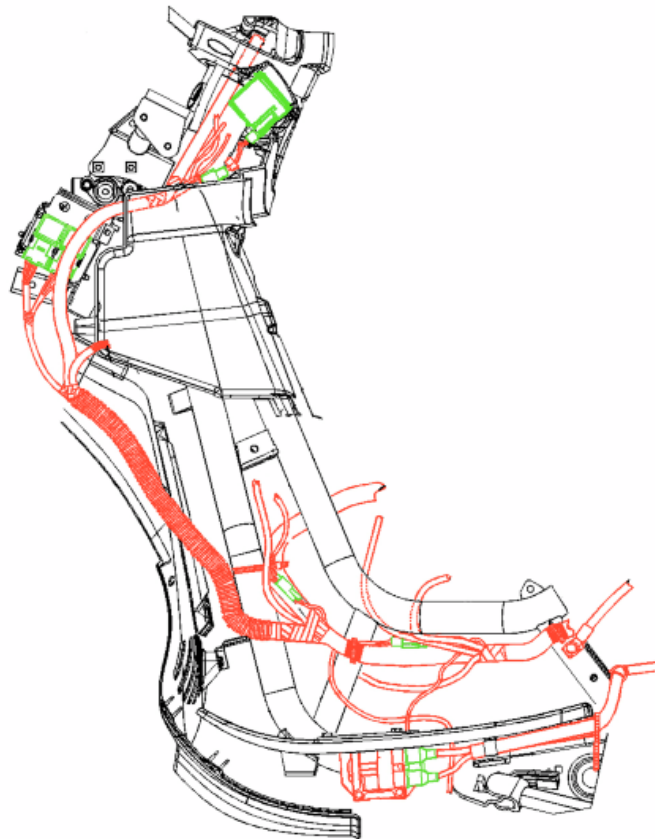


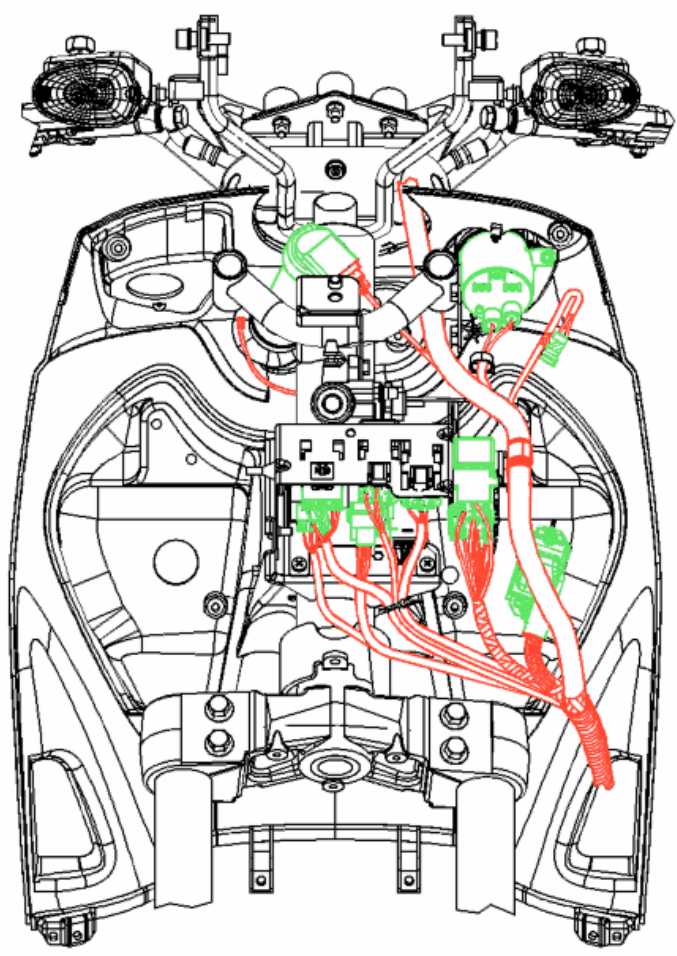


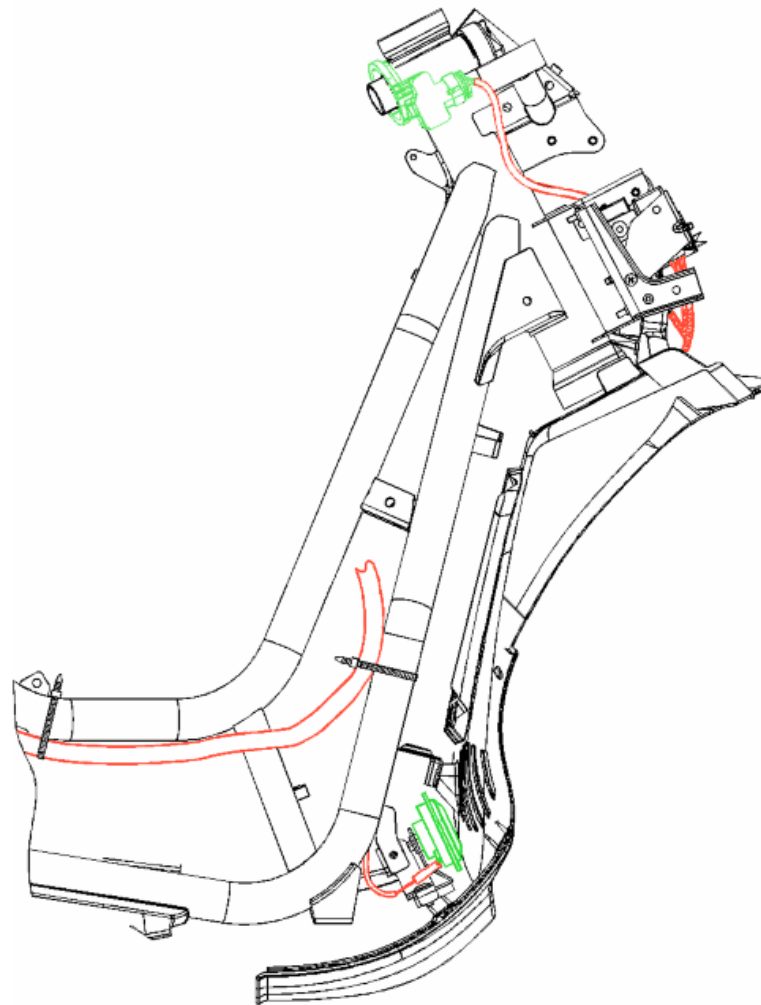

Back side

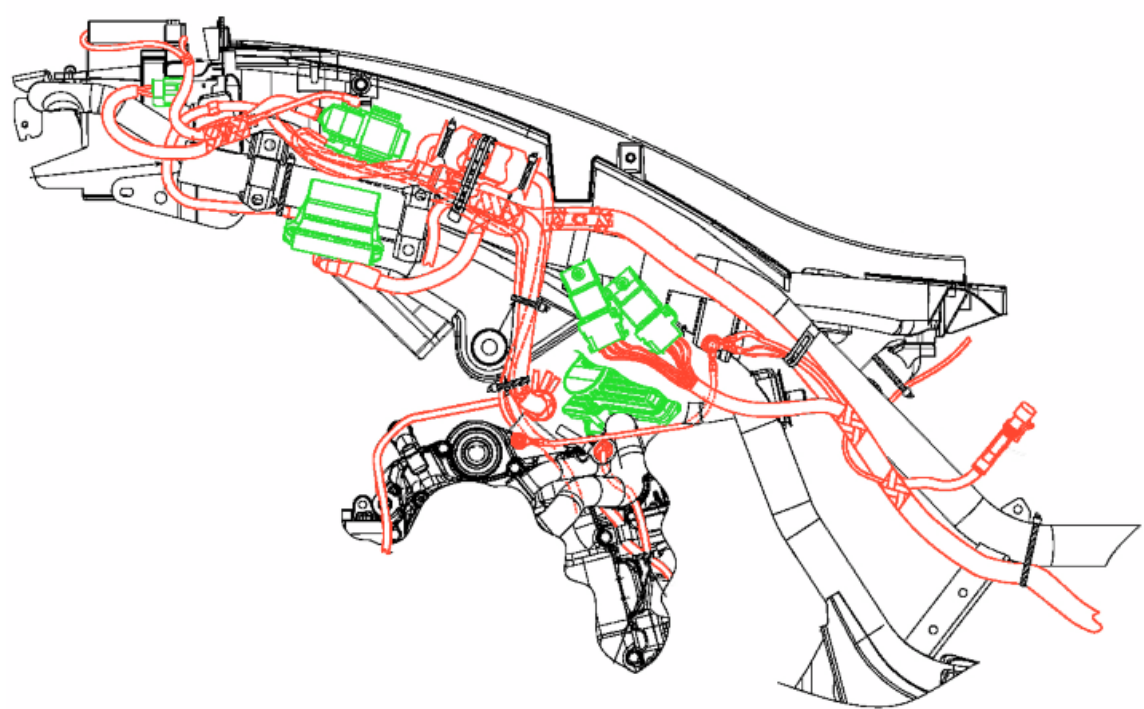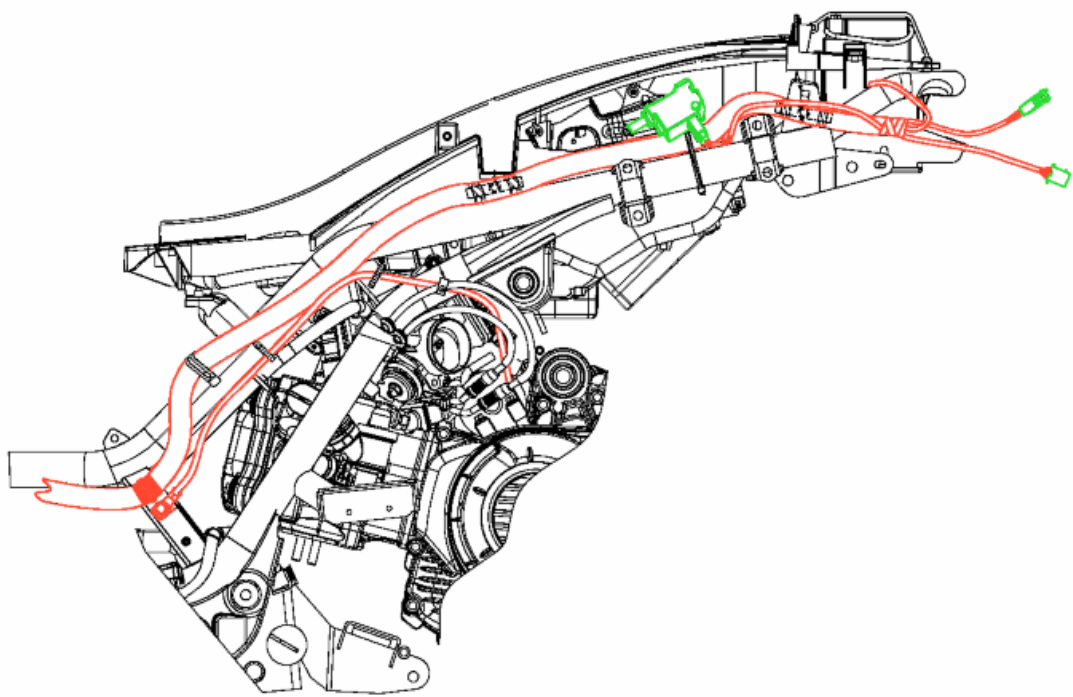


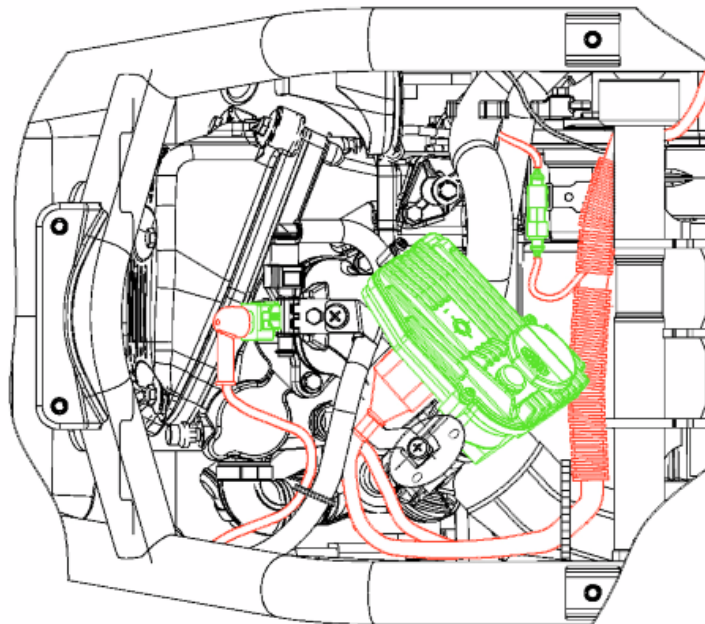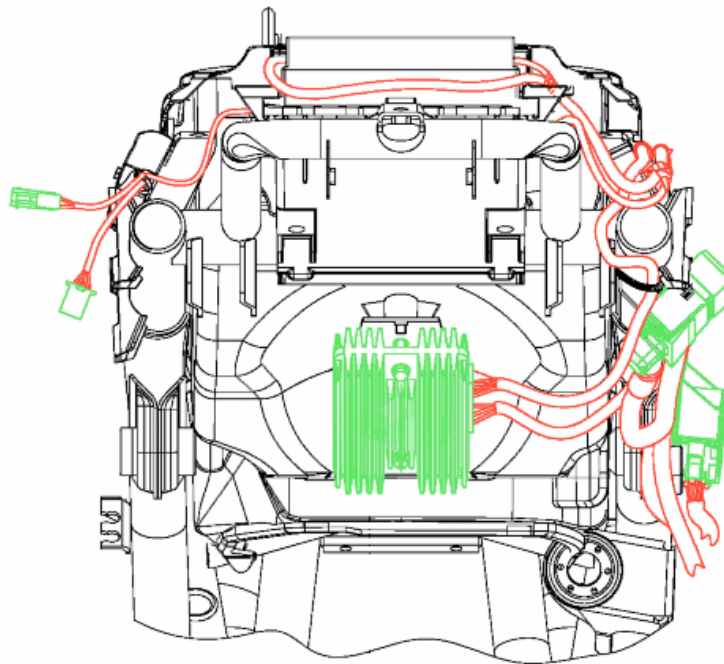

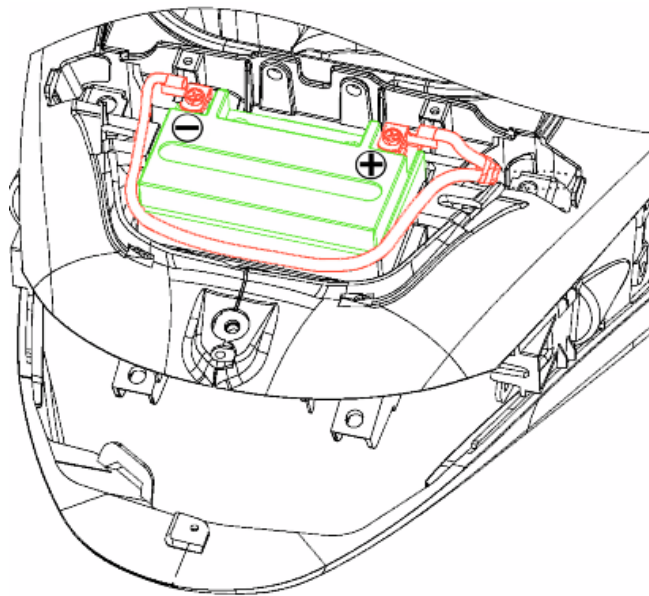

Conceptual diagrams

Ignition

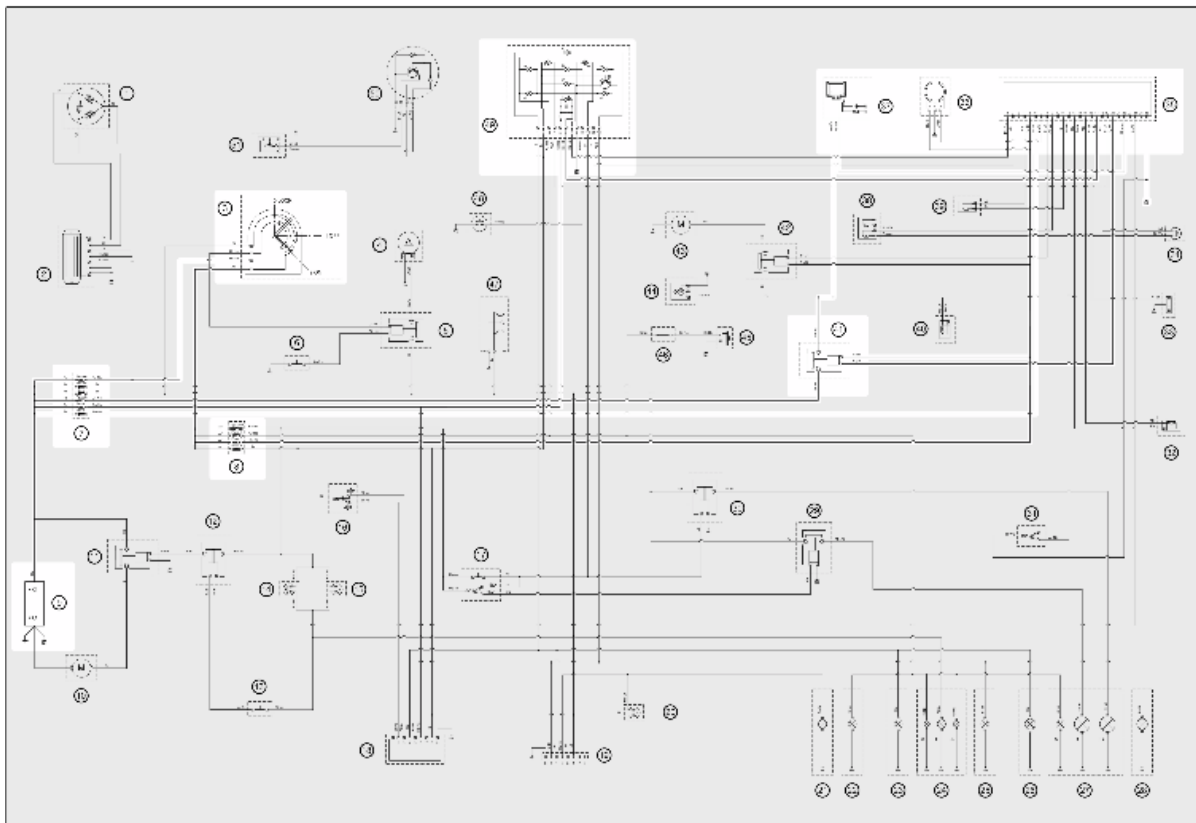


KEY

- 3. Key switch
- 7. Rear fuse unit

- 8. Front fuse unit
- 9. Battery
- 35. Injection ECU
- 5 Live
- 6 Power from battery
- 7. Immobilizer aerial
- 17. Immobilizer LED
- 20. Relay injection loads
- 22. HV coil
- 26. Ground
- 36. Immobilizer aerial
- 37. HV coil
- 41. Injection load remote control
- 49. Instrument panel
- F. Immobilizer

Battery recharge and starting

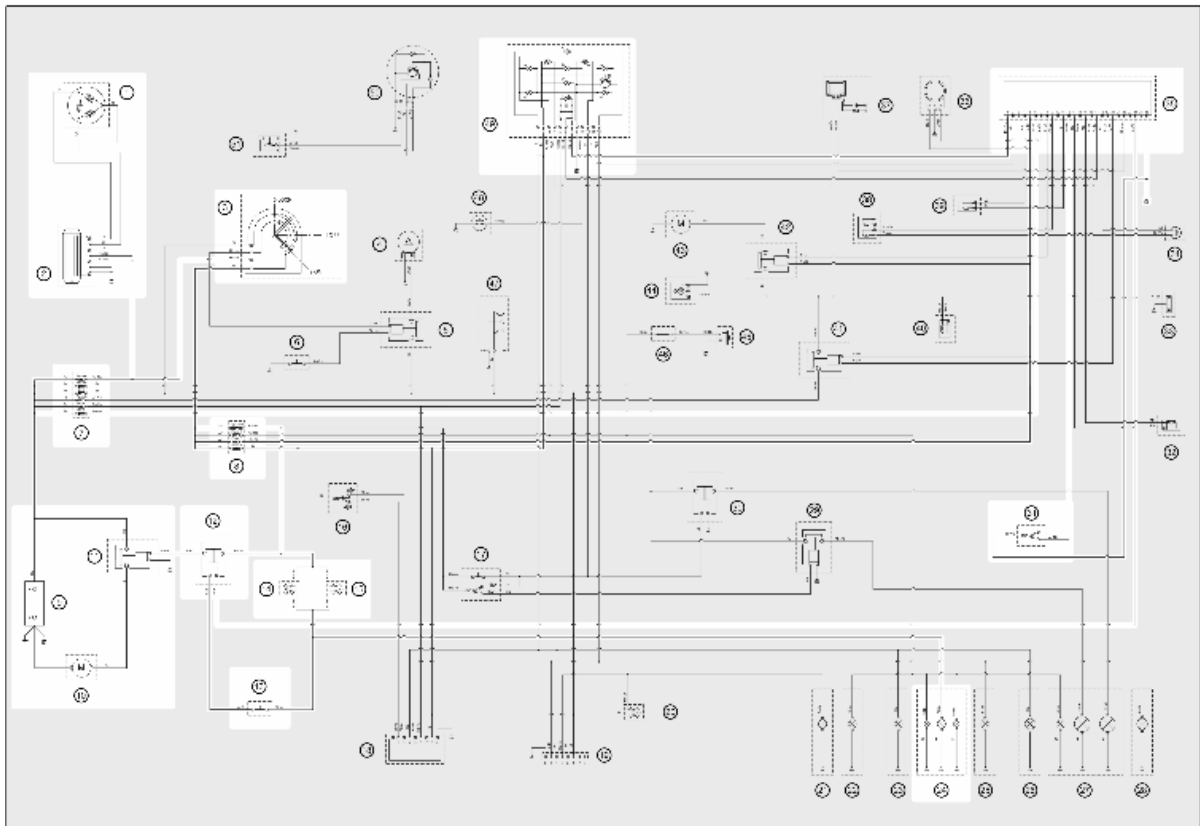


KEY

- 1. Magneto flywheel
- 2. Voltage regulator

- 3.** Key switch
 - 7.** Rear fuse unit
 - 8.** Front fuses unit
 - 9.** Battery
 - 10.** Starter motor
 - 11.** Start up remote control switch
 - 12.** Relay for the start-up remote control switch
 - 13.** Start-up button
 - 14.** Stop button on rear brake
 - 15.** Stop button on front brake
 - 24.** Rear light
 - B. Stop light bulb
 - 31.** Engine stop switch
 - 35.** Injection ECU
 - 1. Injection telltale light LED
 - 5 Live
 - 6 Power from battery
 - 12. Engine stop switch
 - 24. Start-up enabling
 - 26. Ground
 - 49.** Instrument panel
 - E. Engine disabled warning light
-

Level indicators and enable signals section

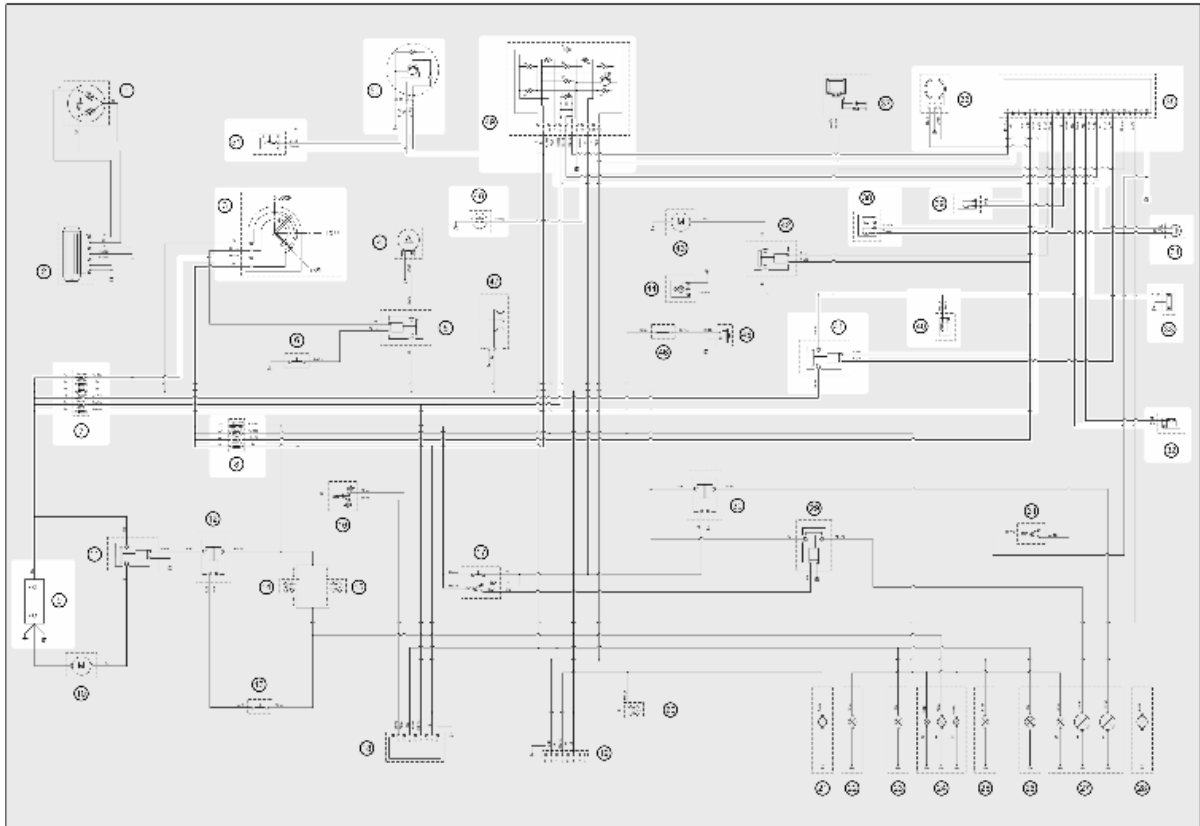


KEY

- 3. Key switch
- 7. Rear fuse unit
- 8. Front fuses unit
- 9. Battery
- 32. Revolution sensor
- 33. Diagnosis connector
- 34. Side stand switch
- 35. Injection ECU
- 1. Injection telltale light LED
- 2. Rpm indicator on instrument panel
- 4. Lambda probe (O2-)
- 5 Live
- 6 Power from battery
- 7. Immobilizer aerial
- 9. Water temperature sensor
- 11. Lambda probe (O2+)
- 13. Engine revolution sensor positive

- 14. Fuel injector
 - 15. Engine revolution sensor negative
 - 16. Diagnosis
 - 17. Immobilizer LED
 - 18. Side stand
 - 19. Water temperature warning light
 - 20. Relay injection loads
 - 26. Ground
 - 36. Immobilizer aerial**
 - 38. Engine temperature sensor**
 - 39. Lambda probe**
 - 40. Injector**
 - 41. Injection load remote control**
 - 48. Oil pressure sensor**
 - 49. Instrument panel**
 - B. Water temperature warning light
 - D. Oil warning light
 - E. Engine disabled warning light
 - F. Immobilizer
 - H. Rpm indicator
 - 50. Fuel gauge**
 - 51. Fuel level transmitter**
-

Devices and accessories

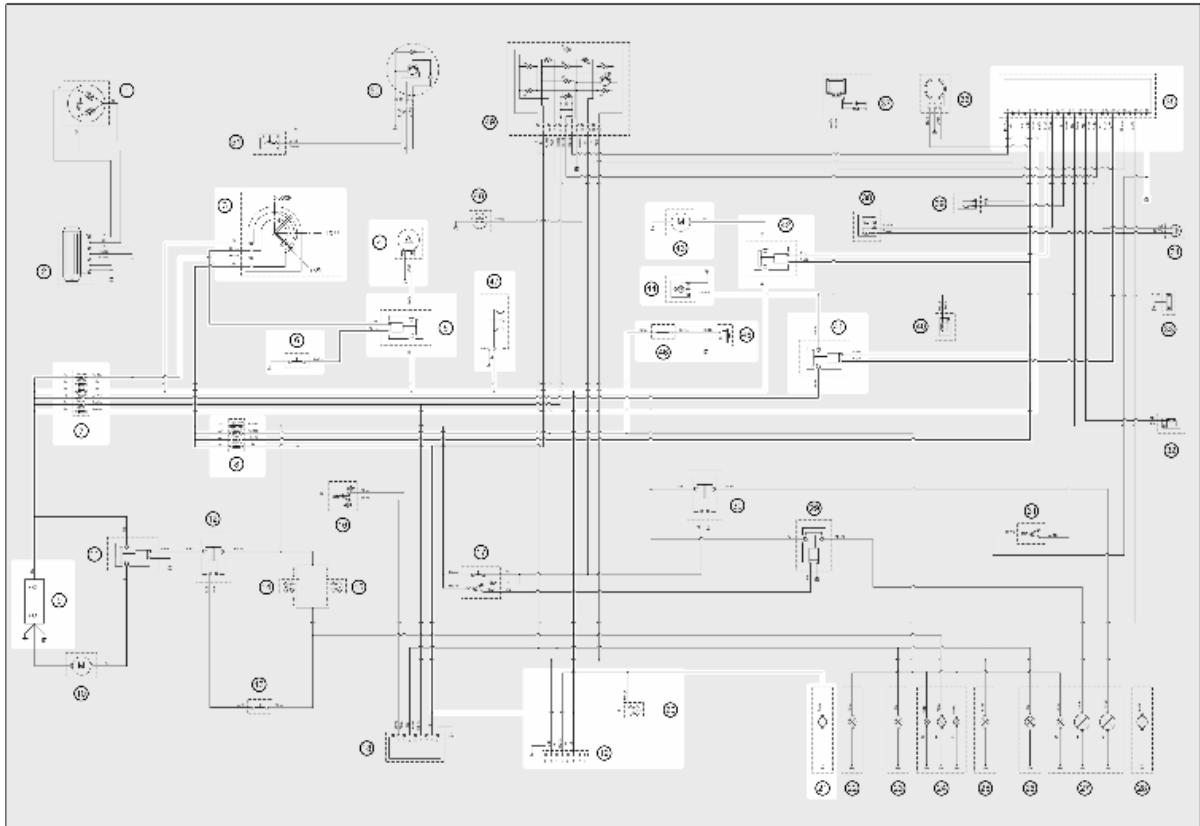


KEY

- 3. Key switch
- 4. Saddle opening actuator
- 5. Relay for saddle opening
- 6. Saddle opening switch
- 7. Rear fuse unit
- 8. Front fuses unit
- 9. Battery
- 19. Wiring for antitheft device
- 20. Helmet compartment light control button
- 21. Helmet compartment internal light
- 35. Injection ECU
- 5 Live
- 6 Power from battery
- 8. Relay electric fan
- 20. Relay injection loads
- 26. Ground
- 41. Injection load remote control

- 42. Relay for electric fan
- 43. Motor for electric fans
- 44. Fuel pump
- 45. Horn
- 46. Horn button
- 47. 12V -180W socket

Lights and turn indicators

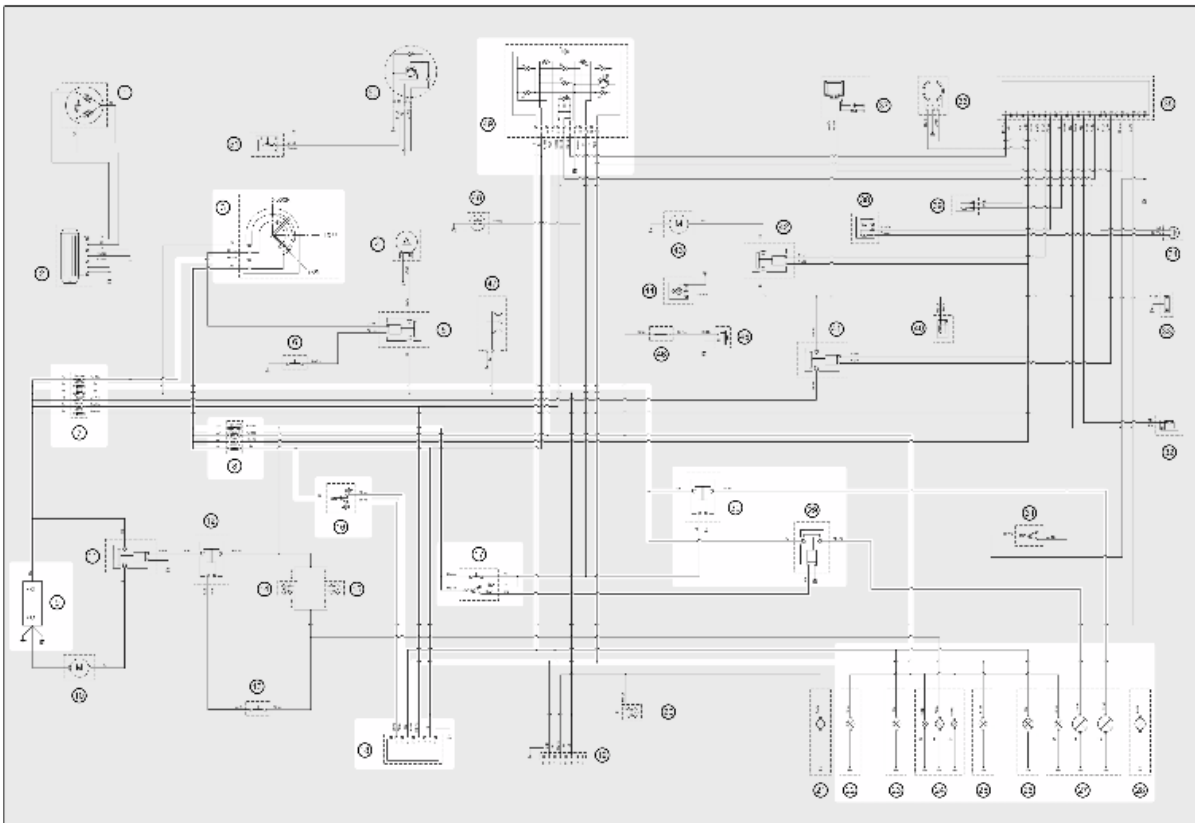

KEY

- 3. Key switch
- 7. Rear fuse unit
- 8. Front fuses unit
- 9. Battery
- 16. Turn indicator switch
- 17. Light switch
- 18. Turn indicator control device
- 22. Licence plate light bulb
- 23. Rear left turn indicator
- 24. Rear light
- A. Tail light bulbs

- 25. Rear right turn indicator
 - 26. Front left turn indicator
 - 27. Headlight
 - A. Tail light bulb
 - B. Low-beam light bulb
 - C. High-beam light bulb
 - 28. Front right turn indicator
 - 29. Relay low-beam light
 - 30. Relay high-beam light
 - 49. Instrument panel
 - A. Panel lighting bulbs
 - C. Turn indicator warning light
-

Checks and inspections

Immobiliser

The electronic ignition system is controlled by the control unit with the integrated Immobilizer system. The immobilizer is an antitheft system that allows the vehicle to be operated only when it is started with coded keys recognised by the control unit. The code is integrated in a transponder in the key block. This allows the driver clear operation without having to do anything other than just turning the key. The Immobiliser system consists of the following components:

- electronic control unit
- immobilizer aerial
- Master key with integrated transponder (brown key)
- service key with incorporated transponder (black key)
- HV coil
- Diagnosis LED

The diagnosis LED also works as a blinking light to deter theft. This function is activated every time the ignition switch is turned to the "OFF" position, or the emergency stop switch is turned to the "OFF" position. It remains activated for 48 hours in order not to affect the battery charge. When the ignition switch is turned to the "ON" position, the deterring blinker function is deactivated. Subsequently, a flash confirms the switching to the "ON" status. The duration of the flash depends on the programming of the electronic control unit. If the LED is off regardless of the position of the ignition-key switch and/or the instrument panel is not initiated, check if:

- there is battery voltage
- fuses 1, 2, 3, 6 and 8 are in working order
- there is power to the control unit as specified below:

Disconnect the connector from the control unit and gain access to the connector. Check the following conditions:

With the key switch set to OFF:

- if there is battery voltage between terminals 6-26 and terminal 6-chassis ground (fixed power supply). If there is no voltage, check that fuse 1 and its wiring are in working order.

With the key switch set to OFF:

- If there is battery voltage between terminals 5-26 and terminals 5-chassis ground (fixed power supply). If there is no voltage, check:
 - The condition of fuse 8 and the corresponding wiring harness.
 - The contacts of the key switch

If no fault is found, replace the control unit.

Virgin circuit

When the ignition system is not encrypted, any key will start the engine but limited to 2000 rpm. The keys can only be recognised if the control unit has been programmed properly. The data storage procedure for a previously unprogrammed control unit provides for the recognition of the master as the first key to be stored to memory: this becomes particularly important because it is the only key that enables the control unit to be wiped clean and reprogrammed for the memorisation of the service keys.

The master and service keys must be used to code the system as follows:

- Insert the Master key, turn it to «ON» and keep this position for two seconds (lower and upper limits 1 to 3 seconds).
- Insert the service key and turn it to «ON» for 2 seconds.
- If you have copies of the key, repeat the operation with each key.
- Insert the MASTER key again and turn it to «ON» for 2 seconds.

The maximum time to change keys is 10 seconds.

A maximum of 7 service keys can be programmed at one time.

It is essential to adhere to the times and the procedure. If you do not, start again from the beginning.

Once the system has been programmed, the master key transponder is strictly matched with the control unit. With this link established, it is now possible to encode new service keys, in the event of losses, replacements, etc. Each new programming deletes the previous one so, in order to add or eliminate keys, you must repeat the procedure using all the keys you intend to keep using.

If a service key should become un-coded, the efficiency of the high voltage circuit shielding must be thoroughly inspected: In any case it is advisable to use resistive spark plugs.

Characteristic

MASTER key:

BROWN KEY

SERVICE key.

BLACK KEY

Diagnostic codes

The immobiliser system is tested each time the ignition-key switch is turned from OFF to ON. During this diagnosis phase a number of control unit statuses can be seen and various light codes displayed. Regardless of the code transmitted, if at the end of the diagnosis the led remains off permanently, the ignition is enabled. If, however, the led remains on permanently, it means the ignition is inhibited:



1. Previously unused control unit - key inserted: a single 2 second flash is displayed, after which the LED remains off permanently. The keys can be stored to memory, the vehicle can be started but with a limitation imposed on the number of revs.

2. Previously unused control unit - transponder absent or cannot be used: The LED is permanently ON; in this condition, no operations are possible, including starting of the vehicle.

3. Programmed control unit - the service key in (normal condition of use): a single 0.7 second flash is displayed, after which the LED remains off permanently. The engine can be started.

4. Programmed control unit - Master key in: a 0.7 sec. flash is displayed followed by the LED remaining off for 2 sec. and then by short 0.46 sec. flashes the same number of times as there are keys stored in the memory including the Master key. When the diagnosis has been completed, the LED remains permanently OFF. The engine can be started.


5. Programmed control unit - fault detected: a light code is displayed according to the fault detected, after which the LED remains on permanently. The engine cannot be started. The codes that can be transmitted are:

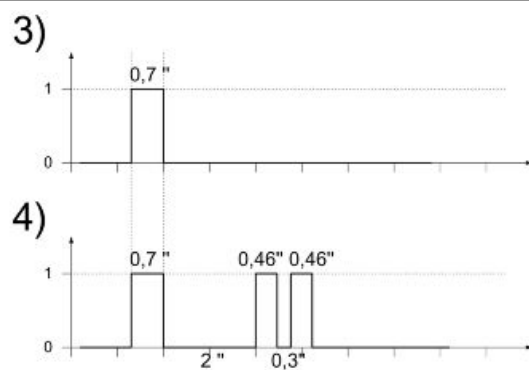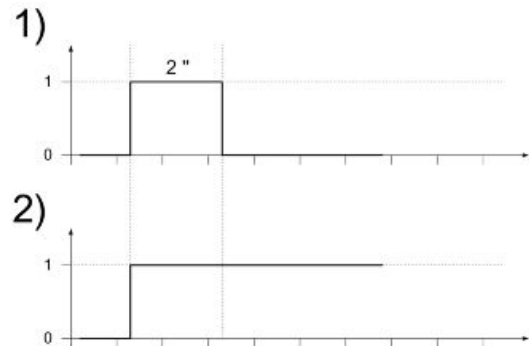

- Code 1 flash
- 2 flash code
- 3 flash code

Diagnostic code - 1 flash


The one-flash code indicates a system where the serial line is not present or is not detected. Check the Immobiliser aerial wiring and change it if necessary.

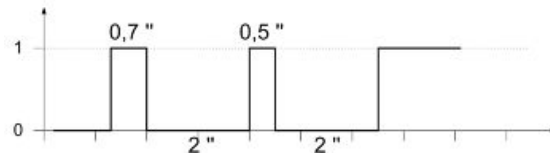

Diagnostic code - 2 flashes


Two-flash code shows a system where the control unit does not show the transponder signal. This might depend on the inefficiency of the immobiliser aerial or the transponder.

Turn the switch to ON using several keys: if the code is repeated even with the Master key, check the aerial wiring and change it if necessary. Otherwise replace the faults key and/or reprogram the decoder. Replace the control unit if the problem continues.

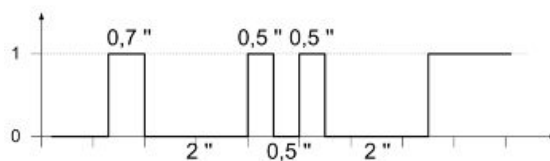

Diagnostic code - 3 flashes

The three-flash code indicates a system where the control unit does not recognise the key. Turn the switch to ON using several keys: if the error code is repeated even with the Master key, replace the control unit. If this is not the case, perform a re-programming.

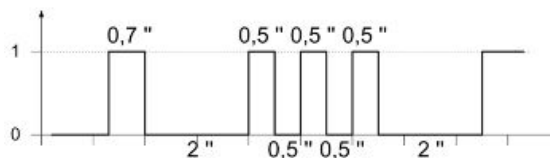

Battery recharge circuit

The recharge system is provided with a three phase alternator with permanent flywheel.
 The alternator is directly connected to the voltage regulator.
 This, in its turn, is connected directly to the ground and the battery positive terminal passing through the 30A protective fuse.
 This system therefore requires no connection to the key switch.
 The three- phase generator provides good recharge power and at low revs a good compromise is achieved between generated power and idle stability.

Stator check

Stator winding check-up

WARNING

THE CHECK-UP CAN BE MADE WITH THE STATOR PROPERLY INSTALLED.


- 1 Remove the right side panel.
- 2) Disconnect the connector between stator and regulator located next to the starter remote control.
- 3) Measure the resistance between each of the yellow terminals and the other two.

Electric characteristic

Resistance:

0.2 - 1 Ω

- 4) Check that there is insulation between the each yellow cable and the earth.
- 5) If values that are wrong are noted, replace the stator.

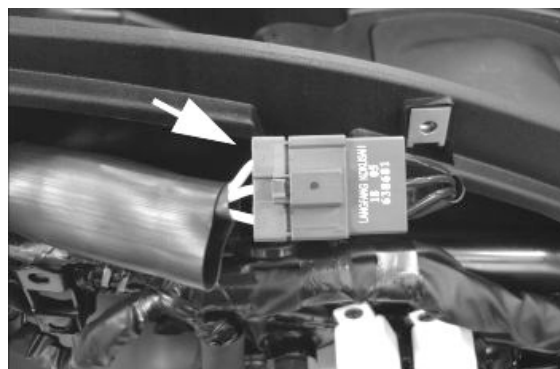

Recharge system voltage check

Maximum current output check.

- With engine off and panel set to "ON" turn on the lights and let the battery voltage set to 12V.
 - Connect ammeter pliers to the 2 recharge positive poles in output from the regulator.
 - Keep the lights on and start the engine, bring it to normal speed and read the values on the ammeter.
- With an efficient battery a value must be detected: > 20A

VOLTAGE REGULATOR/RECTIFIER

Specification	Desc./Quantity
Type	Non-adjustable three-phase transistor

Specification	Desc./Quantity
Voltage	14 ÷ 15V at 5000 rpm with lights off

Check the charging current

WARNING

BEFORE CARRYING OUT THE CHECK, MAKE SURE THAT THE BATTERY IS IN GOOD WORKING ORDER.

- 1) Place the vehicle on its centre stand
- 2) With the battery correctly connected to the circuit, place the tester terminals between the battery terminals..
- 3) Start the engine, ensure that the lights are all out, increase the engine speed and at the same time measure the voltage.

Electric characteristic

Voltage ranging between 14.0 and 15.0V at 5000 rpm.

Look for any leakage

- 1) Access the battery by removing its cover under the saddle.
- 2) Check that the battery does not show signs of losing fluid before checking the output voltage.
- 3) Turn the ignition key to position OFF, connect the terminals of the tester between the negative pole (-) of the battery and the black cable and only then disconnect the black cable from the negative pole (-) of the battery.
- 4) With ignition key still at OFF, the reading detected by the amperometer must be ≤ 0.5 mA.

Turn signals system check

The turn indicator circuit is controlled by the specific management device. If it does not work, it is necessary to:

- Check if there is voltage in the blue-black cable of the turn indicator switch. Keep the switch activated to the right and the key switch set to «ON».
- Also check the white-pink cable of the turn indicator switch for voltage. Keep the switch activated to the left.

If there is voltage, check the turn indicator management device; otherwise, check the white cable of the switch again.

If there is voltage in the cable, replace the turn indicator switch because it is faulty; otherwise, check cable harness and repeat the procedure.

Check the turn indicator management device

Check the cable harness between the turn indicator switch and the management device; restore it if damaged. Then check power supply:

- Check if there is voltage between terminals 6-9 and terminal 6-chassis ground.
- Repeat the procedure for terminals 8-9 and terminal 8-chassis ground with the key switch set to «ON».

If there is no voltage, check if fuses 2, 6 and 7, their cable harness and the key switch contacts are in working order. Otherwise:

- Check if there is intermittent voltage between terminals 4-9 and 5-9 with the key switch set to «ON» and the turn indicator switch activated.

If there is no voltage, replace the management device because it is damaged.

Lights list

The light system is supplied by two separate sections of the circuit:

- Tail lights and instrument panel lights line, protected by fuse No. 9.
 - Front light assembly high-/low-beam line, protected by fuses No. 5 and 10, by the high-beam and low-beam light remote controls.
-

Tail lights and instrument panel lights line

In the event of a malfunction, check:

- Efficiency of the bulbs
- Efficiency of fuse No. 9
- Check if there is voltage on the yellow-black cable of fuse No. 9 with the key switch set to «ON».

High-beam/low-beam light line

In the event of a malfunction, check:

- Efficiency of the bulbs
- Efficiency of fuses No. 5 and 10
- Efficiency of the light switch
- Efficiency of the high-beam light remote control
- Efficiency of the low-beam light remote control


With the key switch set to «ON», check:

- if there is voltage on the grey cable of the high-beam and low-beam light remote controls
 - if there is voltage on the red-green cable of the light switch
 - The cable harness and the bulb holder contacts
-


Fuses

The electrical system is equipped with:

- Six «A » fuses located inside the right-hand side fairing.

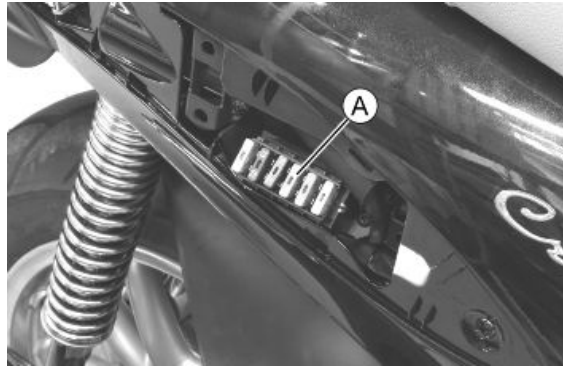

- Four «B» protection fuses for the different circuits of the electrical system located inside the glove-box on the top left-hand side of the helmet compartment.

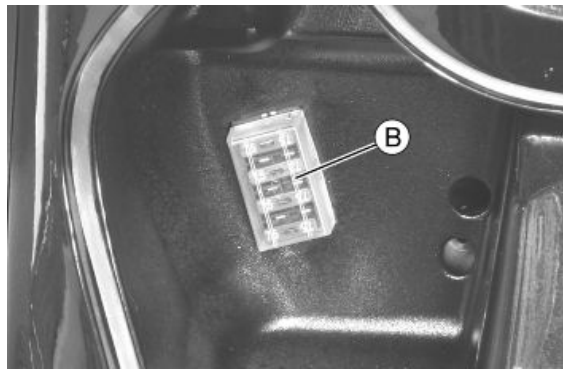

The tables show the position and characteristics of the fuses on the scooter.

CAUTION




BEFORE REPLACING THE BLOWN FUSE, SEARCH AND SOLVE THE PROBLEM THAT CAUSED IT TO BLOW.

NEVER TRY TO REPLACE A BLOWN FUSE WITH A FUSE OF A DIFFERENT RATING THAN THAT SPECIFIED OR USING OTHER MATERIAL (FOR EXAMPLE, A PIECE OF ELECTRICAL WIRE).

FUSES

	Specification	Desc./Quantity
1	Fuse No. 1	Capacity: 7.5 A Protected circuits: Injection electronic control unit
2	Fuse No. 2	Capacity: 7.5 A Protected circuits: Turn signal control device, immobilizer.
3	Fuse No. 3	Capacity: 10 A Protected circuits: Injection loads.
4	Fuse No. 4	Capacity: 15A Protected circuits: Saddle opening, 12V-180W socket, helmet compartment lighting, electrical fan, antitheft device.
5	Fuse No. 5	Capacity: 15A Protected circuits: High-beam light, low-beam light.
6	Fuse No. 6	Capacity: 30 A

	Specification	Desc./Quantity
		Protected circuits: Battery recharge circuit, protected circuits by fuses 7; 8; 9 and 10.
7	Fuse No. 7	Capacity: 7.5 A Protected circuits: Turn indicators, wiring for antitheft device, instrument panel, fuel gauge.
8	Fuse No. 8	Capacity: 7.5 A Protected circuits: Injection load remote control, electrical fan remote control, immobilizer, injection ECU.
9	Fuse No. 9	Capacity: 7.5 A Protected circuits: Instrument panel lighting, horn, tail lights, license plate light.
10	Fuse No. 10	Capacity: 7.5 A Protected circuits: High-beam light remote control, low-beam light remote control, start-up circuit, stop light.

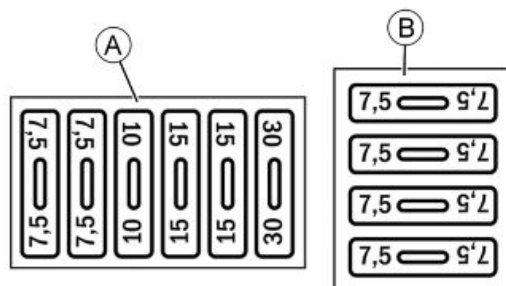

Remote control switches

The electrical system has seven remote control switches, some located below the front shield and some under the right-hand side fairing of the vehicle;

To access the five remote control switches in the front area of the scooter, proceed as follows:

- Remove the front shield.

To access the remote control switches located in the rear area of the scooter, proceed as follows:

- Remove the right-hand side fairing
- To access the start-up remote control switch, unscrew the rubber support from its metal seat and then pull out the remote control switch

Sealed battery start-up operations

If the vehicle is provided with a sealed battery, the only maintenance required is the check of its charge and recharging, if necessary. These operations should be carried out before delivering the vehicle, and on a six-month basis while the vehicle is stored in open circuit. Besides upon pre-delivery it is therefore necessary to check the battery charge and recharge it, if required, before storing the scooter and afterwards every six months.

INSTRUCTIONS FOR THE RENEWAL RECHARGE AFTER OPEN-CIRCUIT STORAGE

1. Voltage check

2. • Before installing the battery on the vehicle, check the open circuit voltage with a normal tester.
 - If voltage exceeds 12.60 V, the battery may be installed without any renewal recharge.
 - If voltage is below 12.60 V, a renewal recharge is required as explained at 2).

3. Constant-voltage battery instructions

4. • Constant voltage charge equal to 14.40-14.70V
 - Initial charge current equal to 0.3-0.5 x rated capacity
 - Charge time:
 - 10 to 12 h recommended Minimum 6 h Maximum 24 h

5. Constant-current battery charger mode

6. • Charge current equal to 1/10 of the battery rated capacity

WARNING


THE BATTERY ELECTROLYTE IS POISONOUS AS IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH THE EYES, THE SKIN AND CLOTHING. IF COMING INTO CONTACT WITH EYES OR SKIN, WASH ABUNDANTLY WITH WATER FOR APPROX. 15 MIN. AND SEEK IMMEDIATE MEDICAL ATTENTION.

IN THE EVENT OF ACCIDENTAL INGESTION OF THE LIQUID, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR MILK, MAGNESIUM MILK, BATTERED EGG OR VEGETABLE OIL. SEEK IMMEDIATE MEDICAL ATTENTION.

THE BATTERIES PRODUCE EXPLOSIVE GAS; KEEP CLEAR OF NAKED FLAMES, SPARKS OR CIGARETTES; VENTILATE THE AREA WHEN RECHARGING INDOORS.

ALWAYS WEAR EYE PROTECTION WHEN WORKING IN THE PROXIMITY OF BATTERIES. KEEP OUT OF REACH OF CHILDREN

- Remove the short closed tube and the caps, then pour sulphuric acid into the cells using the type specified for batteries with a specific gravity of 1.26, corresponding to 30 Bé at a minimum temperature of 15°C until the upper level is reached.
- Allow to stand for at least 2 hours, then top up the level with sulphuric acid.
- Within 24 hours, recharge using the special battery charger (single) or (multiple) at an intensity of about 1/10 of the battery nominal capacity and until the acid gravity is about 1.27, corresponding to 31 Bé and such values become steady.
- After charging, top up the acid (adding **distilled water**). Close and clean carefully.
- After carrying out the operations above, install the battery on the scooter, observing the connections

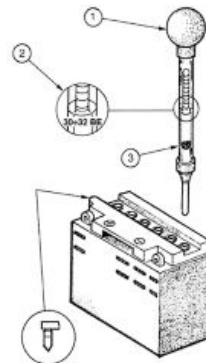

described in point 3) of paragraph "**Battery re-charge**".

Specific tooling

020333Y Single battery charger

020334Y Multiple battery charger

- 1 Keep the pipe in vertical position
- 2 Inspect visually
- 3 The float must be freed

Checking the electrolyte level

The electrolyte level must be checked frequently and must reach the upper level. Only use distilled water, to restore this level. If it is necessary to add water too frequently, check the vehicle electrical system: the battery works overcharged and is subject to quick wear.

Charging status check

After topping-up the electrolyte level, check its density using special density gauge.

When the battery is charged, you should detect a density of 30 to 32 Bé corresponding to a specific weight of 1.26 to 1.28 at a temperature of no lower than 15° C.

A density reading of less than 20° Bé indicates that the battery is completely flat and it must therefore be recharged.

If the scooter is not used for a given time (1 month or more) it will be necessary to periodically recharge the battery.

The battery runs down completely in the course of three months. When refitting the battery onto the scooter pay attention not to invert the cables, bearing in mind that the earth (**black**) wire marked with a (-) must be connected to the **negative** terminal whilst the other two **red** wires, marked with a (+) must be attached to the **positive**, + terminal.

Battery recharge

WARNING

BEFORE RECHARGING THE BATTERY, REMOVE THE PLUGS OF EACH CELL. KEEP SPARKS AND NAKED FLAMES AWAY FROM THE BATTERY WHILE RECHARGING.

Remove the battery from the vehicle removing the negative clamp first.

Normal bench charging must be performed using the special battery charger (single) or (multiple), setting the battery charge selector to the type of battery that requires recharging (i.e., at a current equal to 1/10 of the battery rated capacity). Connections to the power supply source must be implemented by connecting corresponding poles (+ to + and - to -).

Specific tooling

020333Y Single battery charger

020334Y Multiple battery charger

You are advised to keep the battery clean, especially in the upper part, and to protect the terminals with Vaseline.

CAUTION

NEVER USE FUSES WITH A CAPACITY HIGHER THAN THE RECOMMENDED CAPACITY. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.


CAUTION

ORDINARY AND DRINKING WATER CONTAINS MINERAL SALTS THAT ARE HARMFUL FOR THE BATTERY. FOR THIS REASON, YOU MUST ONLY USE DISTILLED WATER.

CAUTION

CHARGE THE BATTERY BEFORE USE TO ENSURE OPTIMUM PERFORMANCE. FAILURE TO CHARGE THE BATTERY ADEQUATELY BEFORE BEING PUT INTO OPERATION WILL LEAD TO A PREMATURE FAILURE OF THE BATTERY.

The instrument panel is equipped with a 12-pin connector shown in the figure.



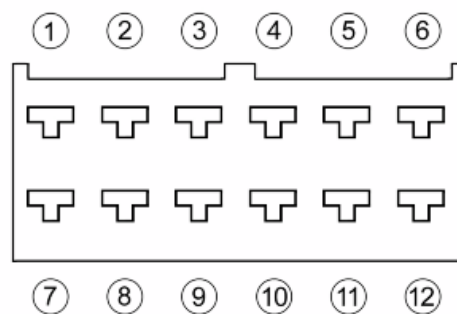
**CONNECTOR**

1. Left turn indicator warning light
2. Live positive
3. Panel lighting and headlight warning light
4. Water temperature warning light
5. Positive from battery
6. Immobilizer LED
7. Engine disabled warning light
8. Ground
9. Oil warning light
10. High-beam warning light
11. Rpm indicator
12. Right turn indicator warning light

The following table shows the functions of each remote control switch:

Remote control switch	Description
A	Electric fan remote control
B	Saddle opening remote control
C	High-beam light remote control
D	Low-beam light remote control

Remote control switch	Description
E	Relay for start-up remote control switch
F	Electronic control unit remote control
G	Starter remote control

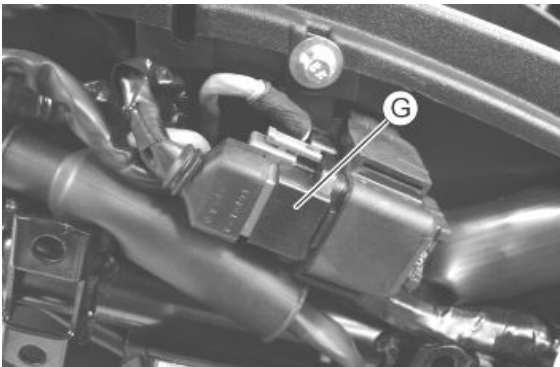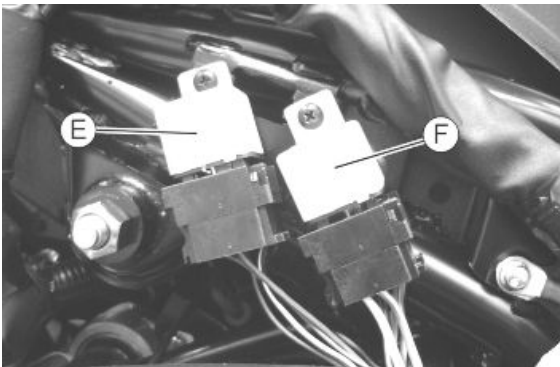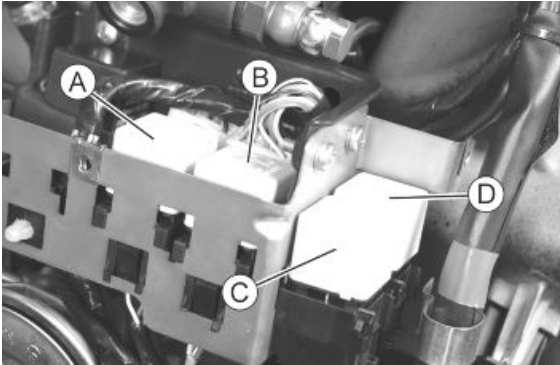

INDEX OF TOPICS

ENGINE FROM VEHICLE

ENG VE

Exhaust assy. Removal

- Undo the two exhaust manifold fixings on the head.



- Undo the screw fixing the muffler to the support arm.



- Undo the screw fixing the muffler retainer clamp.
- Disconnect the lambda probe connector.



Removal of the engine from the vehicle


- Disconnect the battery, remove the saddle, the side fairings and the helmet compartment; drain the coolant.
- Remove the whole muffler and its support, remove the rear wheel and take out the calliper.

WARNING**CARRY OUT THESE OPERATIONS WHEN THE ENGINE IS COLD.****WARNING****BE VERY CAREFUL WHEN HANDLING FUEL.****CAUTION****WHEN INSTALLING THE BATTERY, ATTACH THE POSITIVE LEAD FIRST AND THEN THE NEGATIVE LEAD.**


-
- Remove the throttle grip transmission.



-
- Remove the starter motor ground lead.

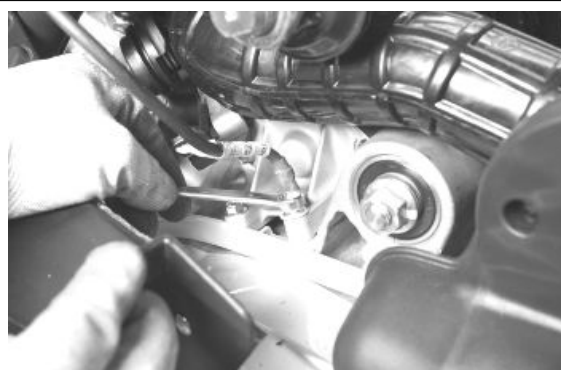


-
- Remove the water temperature sensor «A», the control unit connector «B», the injector fuel supply pipe «C», and the injector power supply connector «D».

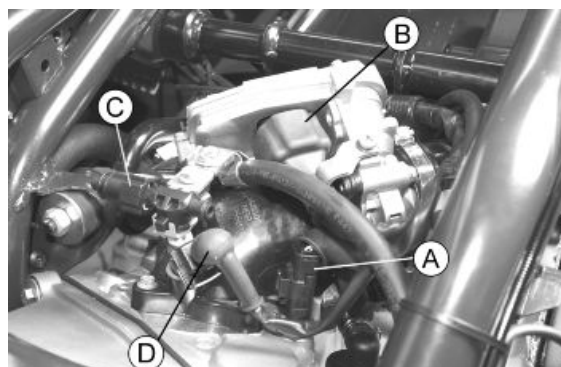

-
- Remove the spark plug tubes.




- Disconnect the oil temperature sensor.

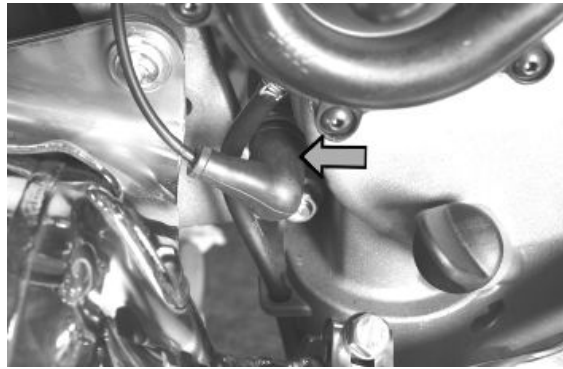

- Disconnect the generator cable harness of the electrical system.
- Disconnect the starter motor power supply cable from the start-up remote control switch.
- Remove the engine ground lead.

- Unscrew the swinging arm pin fixing nut.

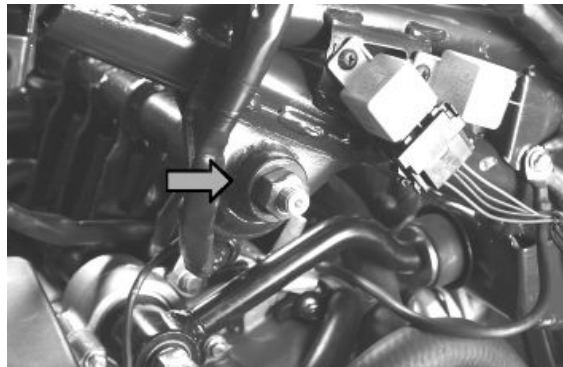

Scooter engine assembly

- Perform the operations for removal in the reverse order according to the tightening torque indicated in Chapter "Characteristics".

Check that there is a small clearance when the valve is in abutment against the set screw.

- Check the engine oil level and top up using the recommended brand, if required.
- Top up the coolant circuit.
- Check that throttle and electric devices are in good working order.

CAUTION

PAY PARTICULAR ATTENTION TO POSITIONING THE THROTTLE COMMAND TRANSMISSION PROPERLY.

INDEX OF TOPICS

ENGINE

ENG

This section describes the operations to be carried out on the engine and the tools to be used.

Automatic transmission

Transmission cover

- Loosen the 4 fastening screws
- Extract the outside plastic transmission cover.



- Using a screwdriver, remove the driven pulley axle cover near the bottom of the cap.



- Loosen the driven pulley shaft fastening nut using a misaligned wrench and prevent the pulley shaft rotation using a machine hexagon bush.
- Remove the nut and the two washers.

N.B.

DUE TO THE HIGH TIGHTENING TORQUE, USING DIFFERENT WRENCHES - SUCH AS A CONVENTIONAL POLYGONAL BUSH - MAY DAMAGE THE HEXAGON OBTAINED ON THE SHAFT OR BREAK THE BUSH ITSELF.



- Remove the six M6 screws.




- Remove the four M8 screws.
- Remove the transmission cover.
- Check that the bearing rotates freely, otherwise replace it.



Air duct


- Remove the transmission cover.
- Unscrew the two screws shown in the figure to remove the air conveyor.

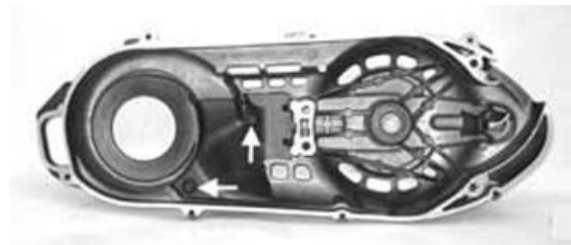

Locking torques (N*m)

Air conveyor screws 11 ÷ 12

- Remove the external transmission cover.
- Unscrew the 4 fastening screws shown in the figure to remove the external air conveyor.

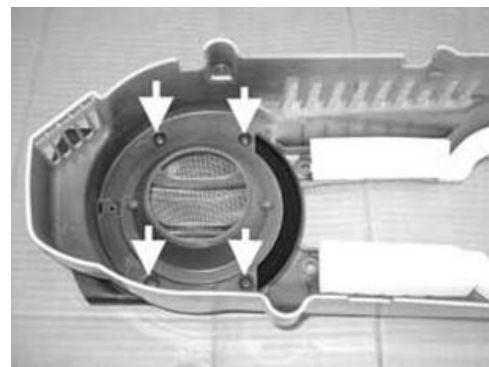

Air duct filter

- Remove the external air conveyor.
- Unscrew the 2 fastening screws shown in the figure to remove the conveyor filter.



Removing the driven pulley shaft bearing

- Remove the transmission cover.
- Remove the seeger ring.



- Place transmission cover on a wood surface and use the special tool so that it is adequately supported.
- Pull out the bearing using the special tool.



N.B.

BELL MUST BE PLACED INTO THE TRANSMISSION COVER, CLOSE TO THE BEARING SEAT AND THE WOODEN SURFACE, SINCE WITHOUT BELL THE ENTIRE COVER STRUCTURE WOULD BEND. NOT ONLY IN THE AREA OF MAXIMUM STURDINESS.

Specific tooling

001467Y002 Driver for OD 73 mm bearing

020376Y Adaptor handle

020375Y Adaptor 28 x 30 mm

020439Y 17 mm guide

Refitting the driven pulley shaft bearing

- Heat the transmission cover interior using the heat gun.

N.B.

BE CAREFUL NOT TO OVERHEAT THE COVER AS THIS WOULD DAMAGE THE OUTSIDE PAINTED SURFACE.

Specific tooling

020151Y Air heater



- Place the bearing onto the special tool with a little grease to prevent it from coming out.

- Install the new bearing using the special tool.

N.B.

PROPERLY SUPPORT THE OUTSIDE COVER TO PREVENT DAMAGING THE PAINTED SURFACE.

Specific tooling

020376Y Adaptor handle

020358Y 37x40-mm adaptor

020439Y 17 mm guide



Baffle roller

Plastic roller

- Check that the roller does not show signs of wear and that it turns freely.
- Loosen the retaining bolt using a 13 mm spanner.
- Remove the complete roller with bearing.

N.B.

IF THE ROLLER DOES NOT ROTATE FREELY, REPLACE THE COMPLETE ROLLER.



Installation of belt anti-vibration roller

- Install the anti-flapping roller with the lip facing the engine crankcase.
- Tighten the central screw to the prescribed torque.

N.B.


TURN THE DRIVEN AND/OR DRIVING PULLEY UNTIL A CORRECT TENSIONING OF THE BELT IS OBTAINED.

Locking torques (N*m)

Anti-vibration roller screw 16.7 - 19.6

Removing the driven pulley

- Remove the clutch bell.

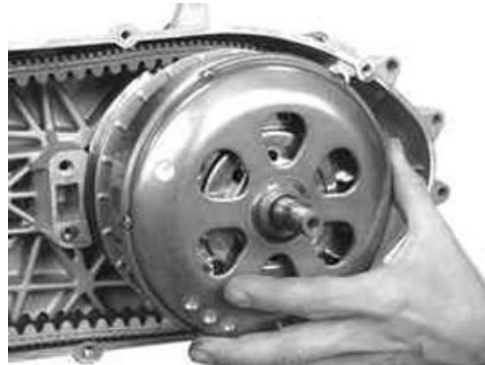

- Remove the fixed driving half-pulley.
- Remove the driven pulley assembly with the belt.



Inspecting the clutch drum

- Check that the clutch bell is not worn or damaged.
- Measure the clutch bell inside diameter.

N.B.

CHECK THE ECCENTRICITY MEASURED, 0.2 MM MAX.

Characteristic**Max. value:**

160.5 mm



Standard value:

160.2 mm



Removing the clutch

- To remove the clutch with the driven pulley it is necessary to use the special tool;
- Arrange the tool with the mean pins screwed in position "E" on the inside;
- Fit the adapter ring to the clutch assembly as shown in the photograph.
- Install the driven pulley unit onto the tool inserting the pins into the ventilation holes;
- Move the rear stop screw in abutment against the fixed driven pulley as shown in the figure.

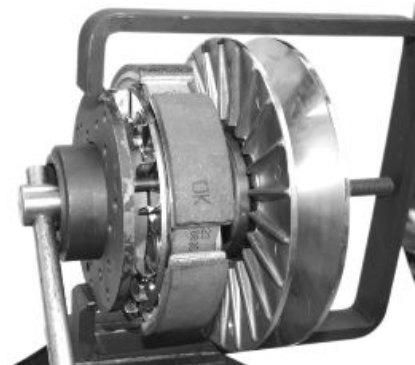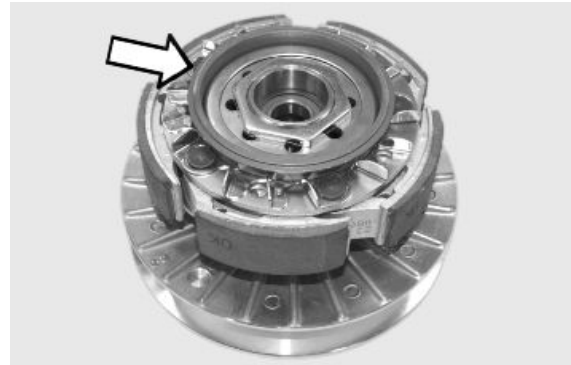

CAUTION

THE TOOL SHOULD BE FIRMLY SECURED IN A VICE USING THE SPECIAL TOOL. DO NOT TIGHTEN THE REAR SCREW TOO MUCH AS THIS COULD CAUSE AN IRREVERSIBLE TOOL DEFORMATION.

USING THE SPECIAL 55-MM WRENCH, REMOVE THE FASTENING RING NUT.

LOOSEN THE TOOL SCREW AND DISASSEMBLE THE DRIVEN PULLEY UNIT, CLUTCH, SPRING WITH SHEATH.

Specific tooling

020444Y Tool for fitting/ removing the driven pulley clutch

Inspecting the clutch

- Check the thickness of the clutch mass friction material.

Characteristic

Minimum thickness permitted:


1 mm

- The masses must not show traces of lubricants. Otherwise, check the driven pulley unit seals.

N.B.

UPON RUNNING-IN, THE MASSES MUST EXHIBIT A CENTRAL CONTACT SURFACE AND MUST NOT BE DIFFERENT FROM ONE ANOTHER. VARIOUS CONDITIONS CAN CAUSE THE CLUTCH TO TEAR.

- Do not open the masses using tools to prevent a variation in the return spring load.

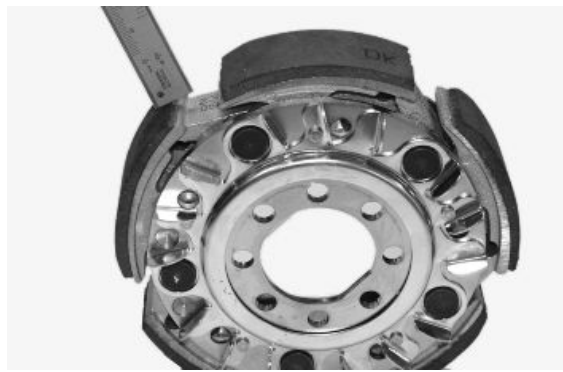

Pin retaining collar

- Extract the collar using 2 screwdrivers.



-
- Remove the 4 guide pins.
 - Extract the moving driven half-pulley.



Removing the driven half-pulley bearing

- Check that the bushing is free from wear and damage; otherwise replace the fixed driven half-pulley.
- Remove the lock ring using pliers.



- Using the special tool inserted through the roller bearing, pull out the ball bearing.

N.B.

PROPERLY SUPPORT THE PULLEY TO PREVENT DAMAGING THE THREADING.

Specific tooling

020376Y Adaptor handle

020456Y Ø 24 mm adaptor

020363Y 20 mm guide



N.B.

IF YOU NEED TO OVERHAUL THE BEARINGS ON AN ASSEMBLED DRIVEN PULLEY UNIT, IT IS NECESSARY TO SUPPORT THE UNIT BY THE BELL

Specific tooling

001467Y002 Driver for OD 73 mm bearing

- Remove the roller bearing using the special tool, supporting the fixed half-pulley with the bell.

Specific tooling

020376Y Adaptor handle

020375Y Adaptor 28 x 30 mm

020364Y 25-mm guide

001467Y002 Driver for OD 73 mm bearing



Inspecting the driven fixed half-pulley

- Check that the belt contact surface is free from wear.
- Measure the outer diameter of the pulley bushing.

Characteristic

Minimum admissible diameter

49.96 mm

Standard diameter:

49.965 mm



Inspecting the driven sliding half-pulley

- Check that the belt contact surface is free from wear.
- Remove the 2 inside sealing rings and the 2 outside O-rings.
- Measure the movable half-pulley bushing inside diameter.



Characteristic

Maximum admissible diameter:

50.08 mm

Standard diameter:

50.085 mm

Refitting the driven half-pulley bearing

- Install a new roller bearing using the special tool.

N.B.

PLACE THE BEARING WITH THE WRITINGS AND THE EMBEDDED OIL GUARD FACING OUTWARDS.

- Properly support the half-pulley to prevent damaging the threading.

If you are working on the driven pulley unit fully assembled, use the special tool.

Specific tooling

020478Y Punch for driven pulley roller casing

001467Y002 Driver for OD 73 mm bearing



- Install a new ball bearing using the special tool.

Specific tooling

020376Y Adaptor handle

020477Y Adaptor 37 mm

020363Y 20 mm guide



- Insert the seeger lock ring.

Refitting the driven pulley

- Insert the new oil guards
- Insert the new O-rings

N.B.

O-RINGS ARE OF TWO SIZES. THE LARGE ONE IS INSTALLED ON THE MACHINING END RADIUS, AT THE BASE OF THE HALF-PULLEY.

- Install the half-pulley on the bushing being careful not to damage the top sealing ring during the introduction.
- Make sure the pins and collar are not worn, re-assemble the pins and collar.



- Using a bent beak greaser, lubricate the driven pulley unit with about 10 gr. of grease, this operation should be carried out through one of the two holes into the bushing to obtain the exit of the grease from the opposite hole. This operation is necessary to avoid the presence of grease beyond the O-rings.

Recommended products

AGIP GREASE SM 2 Grease for the tone wheel revolving ring

Soap-based lithium grease containing NLGI 2 Molybdenum disulphide; ISO-L-XBCHB2, DIN KF2K-20

Inspecting the clutch spring

- Measure the length of the spring, while it is relaxed.

Characteristic**Standard length:**

125.5 mm

Admissible limit after use:

120 mm



Refitting the clutch

- Prepare the special tool as for removal;
- Preassemble the driven pulley unit with the drive belt according to its direction of rotation;
- Insert the driven pulley unit, the spring with sheath and clutch into the tool.



Specific tooling

020444Y Tool for fitting/ removing the driven pulley clutch

- Compress the spring and insert the clutch on the driven pulley bushing.

N.B.

BE CAREFUL NOT TO DAMAGE THE SHEATH OR THE BUSHING THREADED END.

- Tighten the ring nut by hand and complete the tightening using the special wrench to the prescribed torque.

Specific tooling

020444Y Tool for fitting/ removing the driven pulley clutch

Locking torques (N*m)

Clutch ring nut 65 - 75



- To facilitate reassembly on the engine, turn the moving driven pulley and insert the belt onto the smaller diameter.

Refitting the driven pulley

- Install the driven pulley assembly with belt.



Drive-belt

- Check that the driving belt is not damaged.
- Check the width of the belt.


Characteristic

Minimum width

27.5 mm

Overall width

28.7 mm

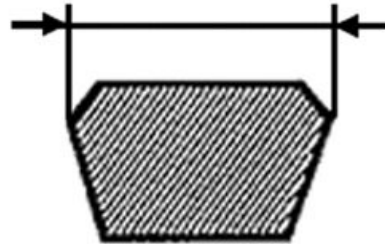

Removing the driving pulley


- Using a 27 mm wrench, turn the central pulley nut to horizontally align the central inside holes and install the special tool.

Specific tooling

020474Y Driving pulley lock wrench



- First fit the 2 retainer clamps of the special tool onto the pulley so that the splines are completely engaged.
- Then, insert the tool so as to insert the stud bolts on the ring into the holes obtained onto the tool itself.
- Tighten the two tool fixing screws, also manually.
- Loosen the central nut.
- Remove the spring washer and the flat washer.
- Remove the fixed driving half-pulley.
- Remove the bushing connection washer.

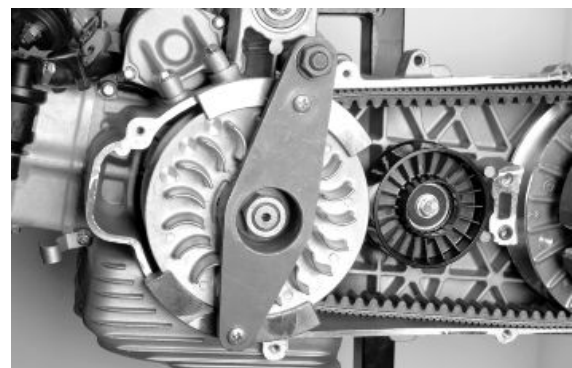

- Move the belt downwards.
- Suitable support the roller contrast and extract the mobile driving half-pulley with the relevant bushing and the rear washer, being careful not to make the rollers come out.



Inspecting the rollers case

- Check that the inside bushings shown in the figure are not worn and measure the inside diameter.

CAUTION

DO NOT LUBRICATE OR CLEAN THE BUSHINGS

Characteristic

Maximum admissible diameter:

30.12 mm

Standard diameter:

30.021 mm

- Measure the pulley sliding bushing outside diameter shown in the figure.



Characteristic

Minimum admissible diameter

Ø 29.95 mm

Standard diameter:

Ø 29.959 mm

- Check that the rollers are not damaged or worn.

Characteristic

Minimum admissible diameter

Ø 24.5 mm

Standard diameter:

Ø 24.9 mm


-
- Check the guide shoes for the variator back-plate are not worn.
 - Check the wear of the roller housings and of the belt contact surfaces on both pulley halves.



Refitting the driving pulley

Installing the roller container

- Install the spacer with the internal chamfer facing towards the inside.

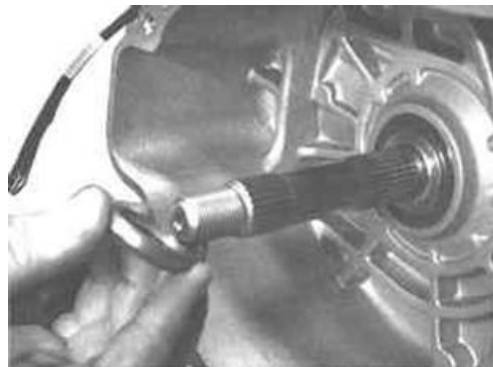


- Position the rollers on the half-pulley as shown in the figure.
- The closed side must rest on the inside thrust face of the roller container.



- Assembly the half-pulley with the roller contrast plate and sliding blocks.




- Insert the half-pulley on the crankshaft.
- Insert the spacer bushing.

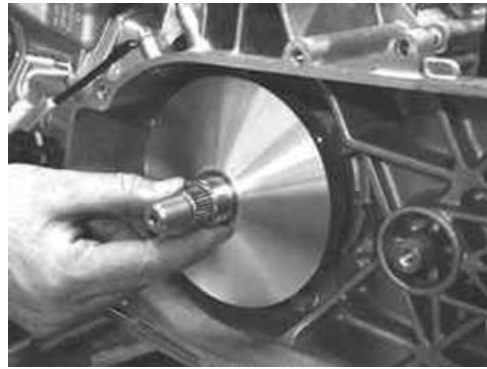

Installing the fixed driving half-pulley

- Insert the spacer.

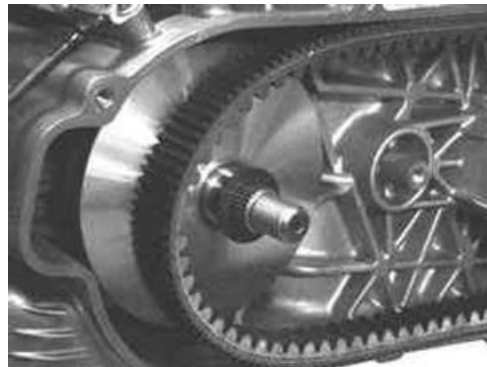


- Install the fixed driving half-pulley and check that it is in contact with the spacer and with the guide bushing of the moving driving pulley.



- Remove the flat washer and the spring washer as shown in the figure.



- Insert the nut in the original position (nut side in contact with the belleville washer).

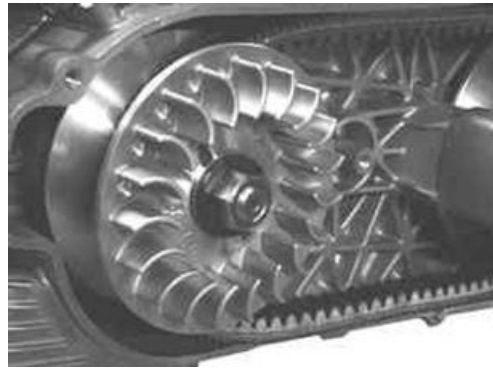

- Turn the central pulley nut to horizontally align the holes and install the special tool.

N.B.

CHECK THAT THE STOP WRENCH TOOL IS EASILY INSERTED INTO THE PULLEY AND IN THE ENGINE CRANKCASE.

Specific tooling

020474Y Driving pulley lock wrench



- Install the lock ring from the rear so that the splines are completely engaged.
- Finally install the tool by sliding the nuts by hand and ensuring the tool is resting flatly.
- Tighten the driving pulley fastening nut to the prescribed torque
- Remove the special tool.



Locking torques (N*m)

Drive pulley nut 160 - 175

Refitting the transmission cover

- Ensure the correct installation on the crankcase of the 2 centring dowels.



- Insert the transmission cover with the bearing and install the relevant retainers.
- Lock the four M8 retainers.

Locking torques (N*m)

M8 retainers for transmission cover 23 - 26



- Lock the 7 M6 retainers.

Locking torques (N*m)

M6 retainer 11 ÷ 13



- Insert the washers on the driven pulley shaft.

N.B.

INSERT THE SMALLER WASHER FIRST, THEN THE LARGER ONE.

- Insert the flanged nut.
- Prepare the torque wrench for LHS locking using a machine hexagon wrench.
- Tighten the driven pulley shaft fastening nut using an offset wrench.

N.B.

DUE TO THE HIGH TIGHTENING TORQUE, USING DIFFERENT WRENCHES - SUCH AS A CONVENTIONAL POLYGONAL BUSH - MAY DAMAGE THE HEXAGON OBTAINED ON THE SHAFT OR BREAK THE BUSH ITSELF.

Locking torques (N*m)

Driven pulley nut 92 - 100



-
- Install the driving pulley shaft cover, positioning the tooth gap on the lower part with the reference mark on the transmission crankcase.



N.B.

ENSURE THAT THE AIR INTAKE AND EXHAUST OPENINGS ARE COMPLETELY FREE.

- Install the outside plastic transmission cover.
- Tighten the 4 fastening screws to the prescribed torque.

Locking torques (N*m)


Outside transmission cover screws 7 ÷ 9



End gear

Removing the hub cover

- Drain the rear hub oil through the oil drainage cap located under the engine.
- Remove the 7 fastening screws. Remove the hub cover and the relevant gasket.

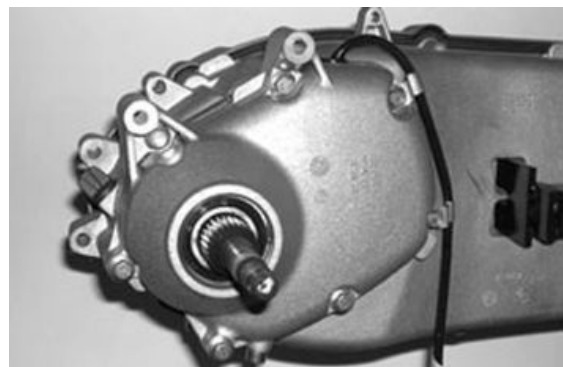

Removing the wheel axle

- Remove the countershaft.
- Remove the wheel axis complete with gear.



Removing the hub bearings

- Check all bearings (wear, clearance and noise). In case of anomalies, proceed as follows. To remove the gear shaft bearing on the engine crankcase, use the following parts.

Specific tooling

001467Y014 Pliers to extract \varnothing 15-mm bearings

001467Y034 Extraction pliers for \varnothing 15 mm bearings

001467Y031 Bell

- Use the special extractor to disassemble the bearing on the engine chassis of the countershaft.

Specific tooling

001467Y006 Pliers to extract 20 mm bearings

001467Y035 Belle for OD 47-mm bearings




- Support the hub cover using the column kit.
- Pull out the bearing using the special tool.

Specific tooling

020476Y Stud bolt set

001467Y006 Pliers to extract 20 mm bearings

001467Y007 Driver for OD 54 mm bearing

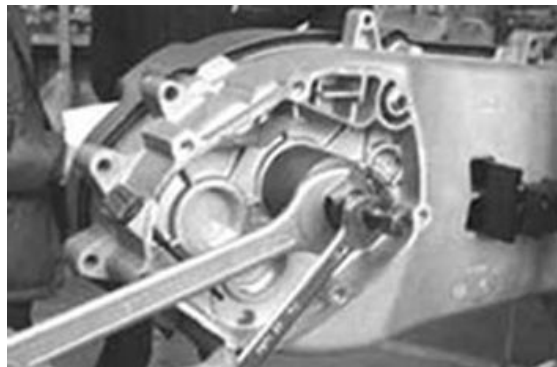

Removing the wheel axle bearings

- Take out the clip on the outside of the gearbox cover.



- Support the hub cover using the column kit.
- Pull out the bearing using the special tool.


Specific tooling

020476Y Stud bolt set

020376Y Adaptor handle

020477Y Adaptor 37 mm

020483Y 30 mm guide

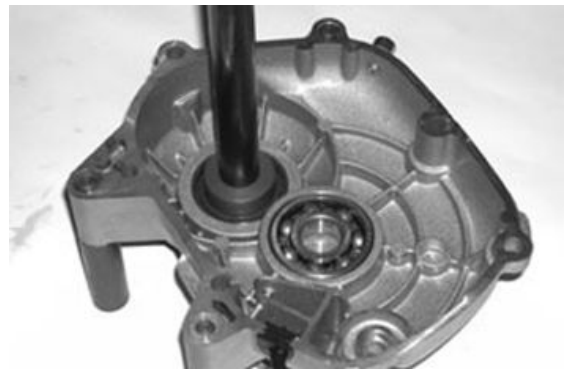

- Remove the oil guard using a screwdriver.



Removing the driven pulley shaft bearing

- If you have to remove the driven pulley shaft, the relevant bearing and the oil guard, remove the transmission cover and the clutch unit as described in the Automatic transmission chapter.
- Extract the driven pulley shaft from its bearing.
- Remove the oil guard using a screwdriver into the hub gear box.
- Remove the seeger ring shown in the figure.




- Pull out the driven pulley shaft bearing from the engine crankcase using the special tool.

Specific tooling

020376Y Adaptor handle




020358Y 37x40-mm adaptor

020364Y 25-mm guide

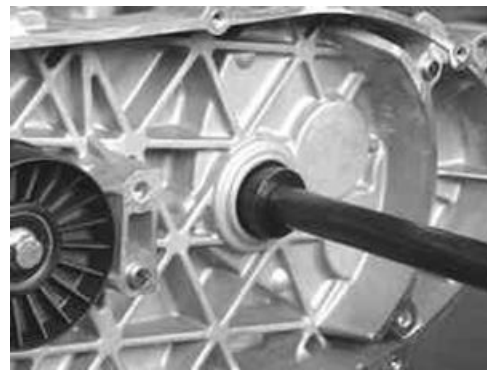

Inspecting the hub shaft

- Check that the 3 shafts exhibit no wear or deformation on the grooved surfaces, at the bearings and at the oil guards.
- In case of faults, replace the damaged parts.

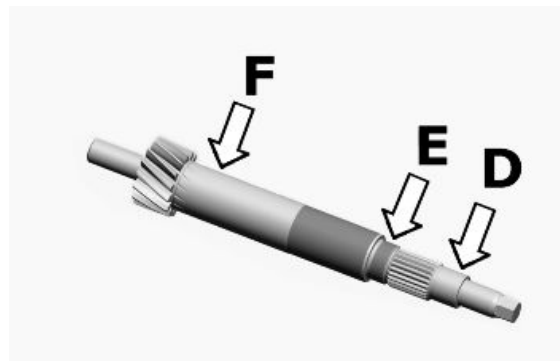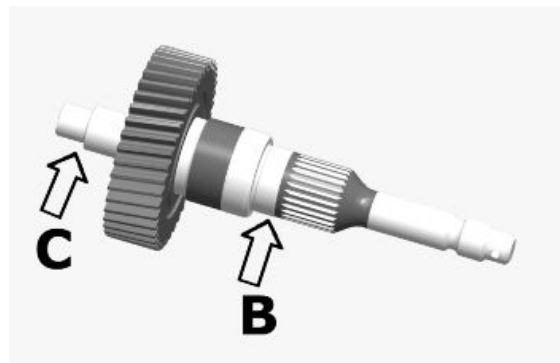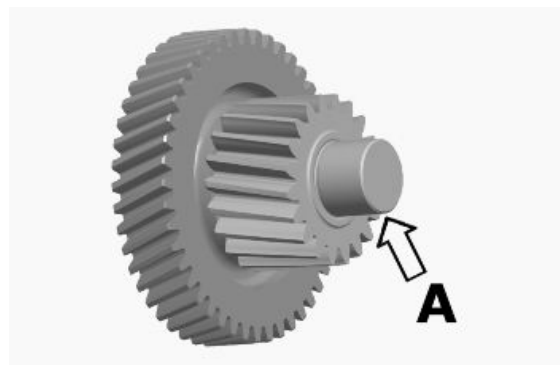

Characteristic

Connection diameter for countershaft:

A = diameter 20 - 0.01 -0.02 mm

Connection diameter for wheel shaft:

B = diameter 30 - 0.010 -0.023 mm

C = diameter 15 - 0.01 -0.02 mm

Connection diameter for shaft driven pulley:

D = diameter 17 - 0.01 -0.02 mm

E = diameter 20 - 0.01 -0.02 mm

F = diameter 25 - 0.01 -0.02 mm

Inspecting the hub cover

- Check that the mounting surface is not damaged or deformed.
- Check the bearing bearings.

In case of faults, replace the hub cover.

Refitting the driven pulley shaft bearing

- Heat the crankcase using the heat gun.

Specific tooling

020151Y Air heater



- Insert the driven pulley shaft bearing until it abuts against the bottom of the seat using the special tool.

N.B.

**PLACE IT WITH THE BALLS FACING THE HUB
(THIS APPLIES TO BEARINGS WITH PLASTIC
CAGE).**

Specific tooling

020376Y Adaptor handle

020360Y Adaptor 52 x 55 mm

020364Y 25-mm guide



- Heat the intermediate gear bearing seat.
- Insert the intermediate shaft bearing using the special tool.

N.B.


PLACE IT WITH THE BALLS FACING THE HUB (THIS APPLIES TO BEARINGS WITH PLASTIC CAGE).

Specific tooling

020376Y Adaptor handle

020359Y 42x47-mm adaptor

020363Y 20 mm guide

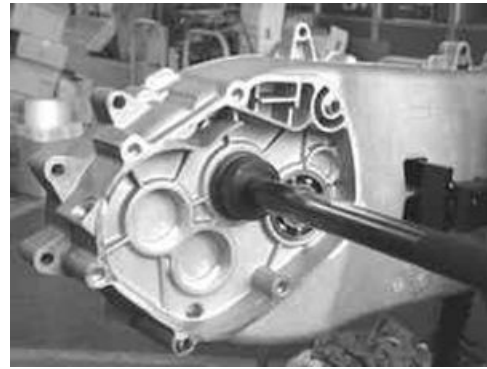

- Heat the gear shaft bearing seat on the crank-case.
- Insert the gear shaft bearing in the upper crank-case seat using the special tool.

N.B.

PLACE IT WITH THE BALLS FACING THE HUB (THIS APPLIES TO BEARINGS WITH PLASTIC CAGE).

Specific tooling

020376Y Adaptor handle

020359Y 42x47-mm adaptor

020412Y 15 mm guide



- Place the safety lock seeger ring of the driven pulley shaft bearing.

N.B.

PLACE IT IN THE POSITION SHOWN IN THE FIGURE.



- Insert the pulley shaft oil guard on the transmission side.




Refitting the hub cover bearings

- Heat the bearing seats on the cover using the heat gun.
- Support the hub cover using the column kit.

Specific tooling

020151Y Air heater

020476Y Stud bolt set

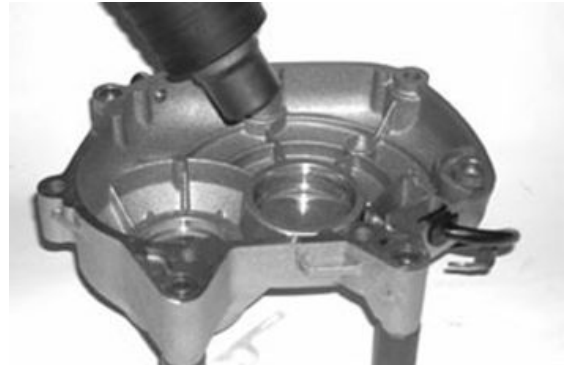

- Insert the intermediate shaft bearing on the cover using the special tool.

N.B.


PLACE IT WITH THE BALLS FACING THE HUB (THIS APPLIES TO BEARINGS WITH PLASTIC CAGE).

Specific tooling

020376Y Adaptor handle

020360Y Adaptor 52 x 55 mm

020363Y 20 mm guide

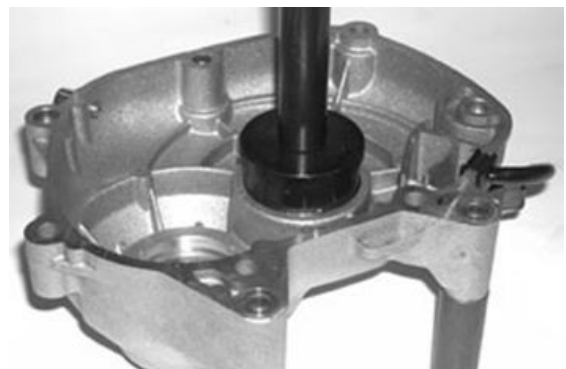

- Heat the gear shaft bearing seat from the cover outside.
- Insert the gear shaft bearing on the cover using the special punch until abutment.

Specific tooling

020376Y Adaptor handle

020360Y Adaptor 52 x 55 mm

020483Y 30 mm guide



- Replace the snap ring



- Support the hub cover using the column kit.
- Insert the wheel shaft oil guard with the sealing lip facing the inside of the cover.
- Place the oil guard flush with the crankcase.



Specific tooling

020376Y Adaptor handle

020360Y Adaptor 52 x 55 mm

020476Y Stud bolt set

Refitting the hub bearings

- Place the 3 shafts as shown in the figure.



Refitting the hub cover

- Check the proper position of the centring dowels.
- Install a new gasket.
- Fit the gearbox cover, making sure the breather pipe is in the correct position.



- Position the 7 set screws, tighten them to the prescribed torque, being careful of the position of the bands holding the vent tube, and the position of the 3 shortest screws as indicated in the figure.
- Refill with the prescribed oil to the Max. level.

Recommended products

AGIP ROTRA 80W-90 rear oil hub

SAE 80W/90 Oil that exceeds the requirements of API GL3 specifications

Characteristic

Quantity:

approx. 250 cc


Locking torques (N*m)**Rear hub cover screws 24 ÷ 27**

Flywheel cover

- Remove the three bands shown in the figure for an easier removal of the flywheel cover, remove the feed hoses and disconnect the return hose from the pump cover.

N.B.

THE BANDS MUST BE REPLACED. TO REMOVE THEM, OPEN WITH A SCREWDRIVER OR CUT THEM. BE CAREFUL NOT TO DAMAGE THE PLASTIC UNIONS.

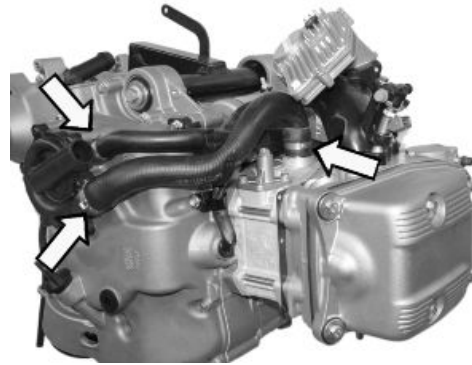

Removing the hub cover

- Drain the engine oil by removing the drainage cap.
- Prepare a suitable container to collect the oil.



- Remove the pre-filter.




- Remove the oil filter using a filter tape or shaped cup wrench.



- Loosen the 14 fastening screws.
- Remove the flywheel cover with the relevant gasket and the cooling system sleeve support.

N.B.

THE SCREWS ARE OF 4 DIFFERENT LENGTHS. NOTE THE RELEVANT POSITIONS.

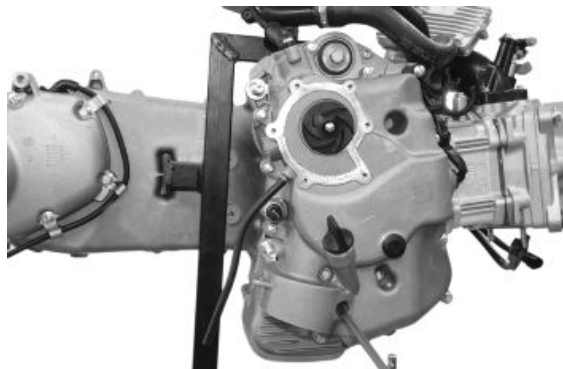

CAUTION


REMOVE THE COVER AVOIDING ANY POSSIBLE INTERFERENCE BETWEEN STATOR AND ROTOR.

CAUTION

BE CAREFUL TO PREVENT SLIPPAGE OF THE BY-PASS VALVE AND OF THE RELEVANT SPRING.

Removing the flywheel cover components

- Loosen the six mounting screws and remove the water pump cover.

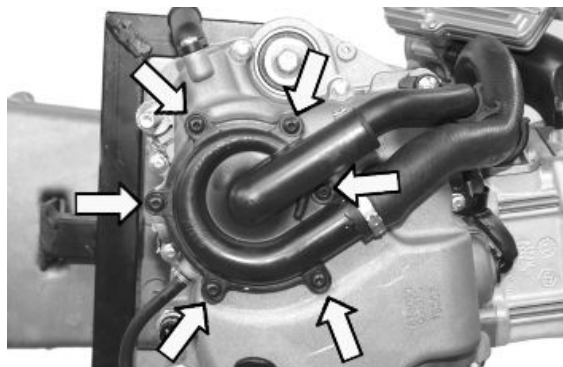


- Remove the by-pass and the relevant spring.
- Remove the oil pump seal.



Removing the stator

- Remove the two retaining screws and the cable guide bracket.

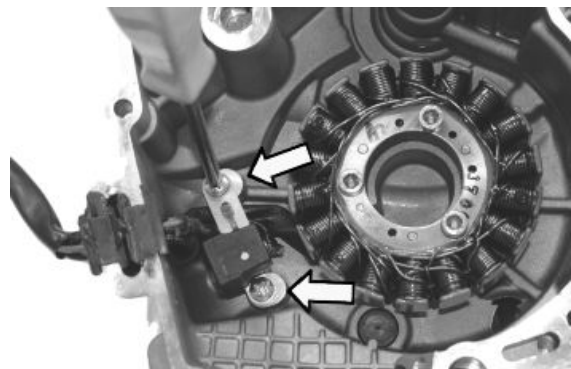

- Unscrew the 3 fastening screws and remove stator and its wiring.




Inspecting the cover components

- Loosen the two retaining screws and remove the reed valve support with bulkhead.




-
- Remove the blow-by reed valve with the relevant sealing gasket.

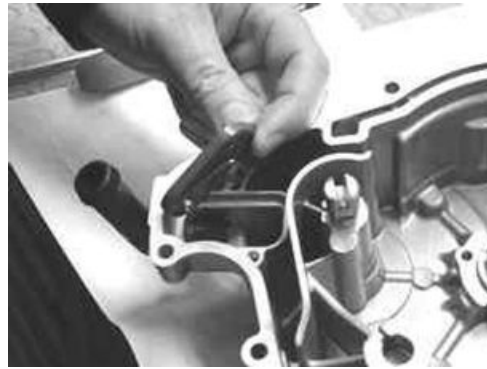

-
- Unscrew the fastening screw and remove the gas outlet union with the relevant O-ring.



-
- Check that the mounting surface of the crankcase is not worn or deformed.
 - Check that the by-pass valve seat, the torque limiter and the water pump shaft are free from wear.

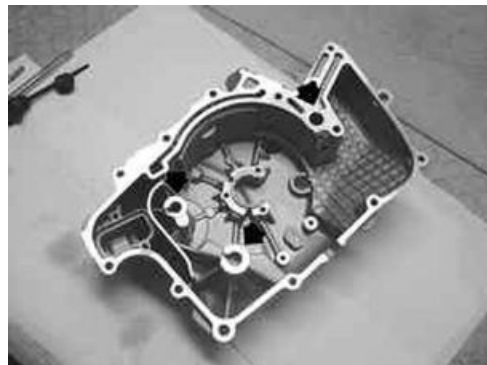

Characteristic

By-pass housing hole diameter:

13.9 mm


Connection diameter for start-up gear shaft:

12 mm

Connection diameter for pump shaft:

8 mm

-
- Check that the oil filter union and matching surface exhibit no deformations or wear.

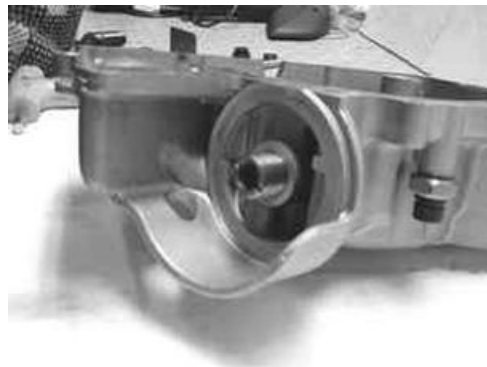

-
- Check the condition of the stator and of the respective cable harness.



-
- Check the continuity between the 3 phases.

N.B.

VALUES ARE STATED AT AMBIENT TEMPERATURE. A CHECK WITH THE STATOR AT OPERATING TEMPERATURE MAY RESULT IN VALUES HIGHER THAN THOSE STATED.

Electric characteristic

Resistance:

0.2 - 1 Ω



-
- Check the ground insulation of each phase.
 - If a fault is found, carry out a thorough check of the cable harness that contains two types of cable: Rigid cables close to the stator and flexible cables close to the connector.



-
- Check that the winding is positioned so as not to interfere with the heads of the retaining screws.



Refitting the stator


- Install the stator assembly together with the wiring harness, tightening the 3 screws to the prescribed torque.

N.B.

INSERT THE RUBBER WIRING SEALING GASKET INTO THE SPECIAL SEAT ON THE CRANKCASE.

Locking torques (N*m)


Stator retainers 8 - 10

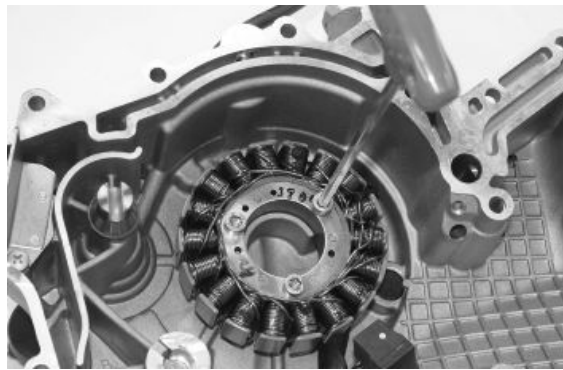

- Install the wiring guide bracket tightening the 2 screws to the prescribed torque.

Locking torques (N*m)

Stator cable harness guide bracket screws 3 - 4

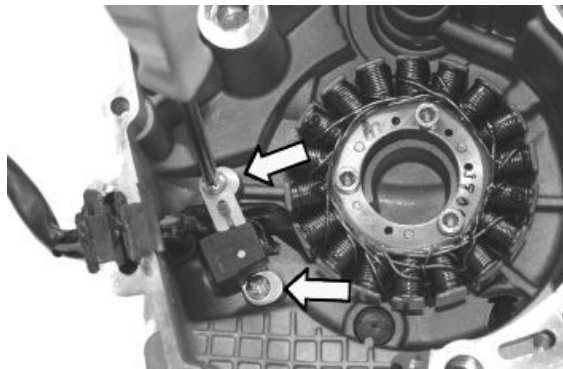

Refitting the flywheel cover components


- Before reassembling, check that all components are perfectly clean.
- For the cover, carefully check all lubrication channels, in particular:
 - The 3 by-pass channels.



- Oil pressure sensor feeding duct.



- Oil vapour decantation chamber

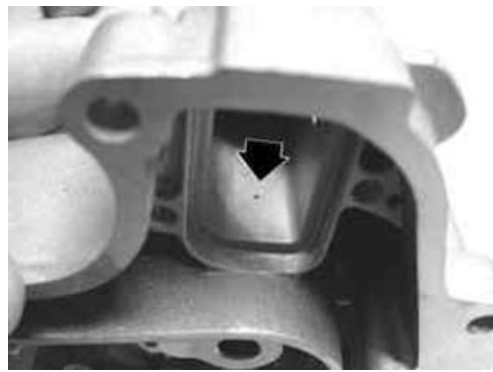

- Temporarily install the distribution timing check hole cover and the engine oil filling cap/bar.
- Insert the blow-by recovery duct using a new O-ring.
- Tighten the screws to the prescribed torque.



Locking torques (N*m)

Blow-by recovery duct fixing screws 3 - 4

- Insert the spring and the by-pass piston on the flywheel cover.

N.B.

LUBRICATE THE BY-PASS VALVE.



- Reinstall the blow-by reed valve using a new sealing gasket.
- Reinstall the support with head and tighten the screws to the prescribed torque.

Locking torques (N*m)

Supporting screws with bulkhead 0.3 - 0.4



- Correctly fit a new O-ring, do not allow it to come into contact with grease or oil.

FAILURE TO OBSERVE THIS ADVICE CAN IRRETRIEVABLY DEFORM THE O-RING.

- Refit the water pump cover and tighten the 6 fixing screws to the prescribed torque.

Locking torques (N*m)

Pump cover fixing screws: 3 ÷ 4



- Before reassembling, check that all components are perfectly clean.
- For the cover, carefully check all lubrication channels, in particular:
 - The 3 by-pass channels.

- Temporarily install the distribution timing check hole cover and the engine oil filling cap/bar.
- Insert the blow-by recovery duct using a new O-ring.
- Tighten the screws to the prescribed torque.

Locking torques (N*m)

Blow-by recovery duct fixing screws 3 - 4



- Insert the spring and the by-pass piston on the flywheel cover.

N.B.


LUBRICATE THE BY-PASS VALVE.



- Oil pressure sensor feeding duct.



- Oil vapour decantation chamber

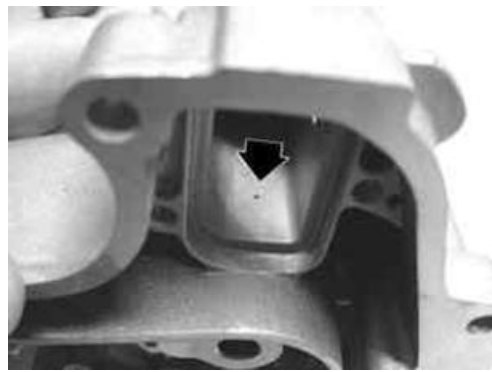

- Reinstall the blow-by reed valve using a new sealing gasket.
- Reinstall the support with head and tighten the screws to the prescribed torque.



Locking torques (N*m)

Supporting screws with bulkhead 0.3 - 0.4

Refitting the flywheel cover

- Install a new oil filter, lubricate the gasket, screw on and finally tighten to the prescribed torque.




Locking torques (N*m)

Engine oil filter 12 - 16

- Install the supply hose to the cylinder and connect the return hose to the pump cover using 3 new clamps.

N.B.

TIGHTEN THE CLAMPS USING APPROPRIATE PLIERS, PAYING ATTENTION NOT TO CONSTRICT THE HOSES BUT ALSO TAKING CARE TO TIGHTEN THE CLAMPS SUFFICIENTLY.

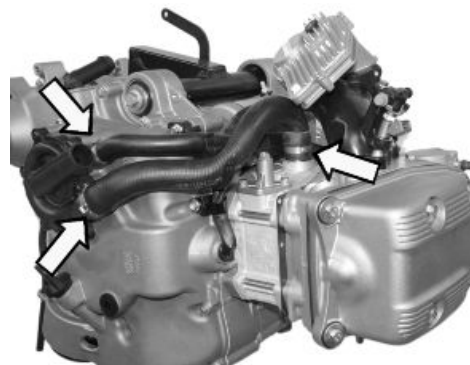

-
- Install the pre-filter again and insert the engine oil drain plug, tightening to the prescribed torque.
 - Refill the engine with the prescribed type of oil.

Recommended products**AGIP CITY HI TEC 4T Engine oil**

SAE 5W-40, API SL, ACEA A3, JASO MA Synthetic oil

Locking torques (N*m)**Engine oil drainage plug 24 ÷ 30**

-
- Lubricate the intermediate gear seat with torque limiter on the flywheel cover.
 - Align the water pump movement sensor with a reference and install the flywheel cover as described in the Flywheel cover chapter.



-
- Install a new gasket on the engine crankcase.
 - Check the presence of the three centring dowels.



-
- Turn the crankshaft in order to align the counter-shaft movement sensor with a reference point on the crankcase (see figure).



- Repeat the alignment for the water pump crankshaft using the same reference point on the engine.

N.B.

THIS PREPARATION IS USEFUL PARTICULARLY IN THE EVENT OF REPAIRS WITH THE WATER PUMP COVER INSTALLED.



- Install the flywheel cover on the engine, paying attention to avoid interference between the stator and rotor.


WARNING

FAILURE TO OBSERVE THIS INSTRUCTION MAY RESULT IN DESTRUCTION OF THE CERAMIC MAGNETS.

- Tighten the 14 retaining bolts of the cover to the prescribed torque.

N.B.

THE BOLTS HAVE FOUR LENGTHS:
 - THE 3 SHORTEST ARE INSERTED AS SHOWN IN THE FIGURE.
 - THE LONGEST IS INSERTED UNDER THE ENGINE OIL FILLER PLUG.

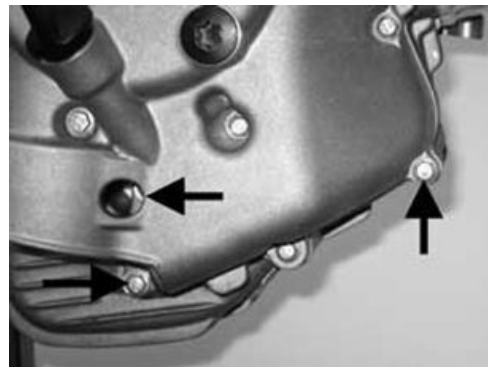

N.B.

- THE INTERMEDIATE BOLTS FOR THE REMAINING MOUNTING POINTS WITH THE EXCEPTION OF THE BOLT FOR THE MANIFOLD SUPPORT (SHOWN IN THE FIGURE) ARE SLIGHTLY LONGER.

Locking torques (N*m)

Flywheel cover screws 11 - 13




Flywheel and starting

- Remove the three bands shown in the figure for an easier removal of the flywheel cover, remove the feed hoses and disconnect the return hose from the pump cover.

N.B.

THE BANDS MUST BE REPLACED. TO REMOVE THEM, OPEN WITH A SCREWDRIVER OR CUT THEM. BE CAREFUL NOT TO DAMAGE THE PLASTIC UNIONS.

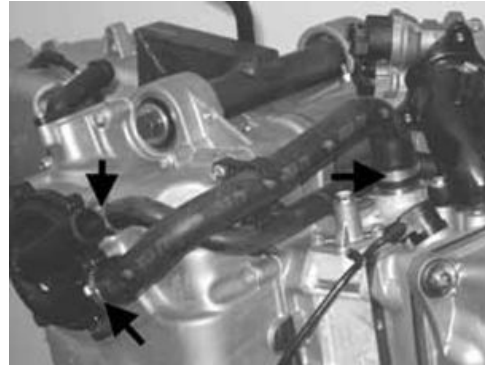

The starter is sold as a complete part.

Before deciding to replace it, carry out the following tests:

1 - Battery

Check the voltage after not running (a few hours):

Voltage >12.5V

Check the density of the electrolyte of each cell:

$Bé = 30 \div 32$

Specific weight: 1.25 - 1.26

YES go to 2 NO go to 3

2 - Make sure the negative terminals (battery negative and starter negative) are correctly connected to each other and to the frame.

YES go to 4 NO go to 5

3 - Recharge and if necessary replace the battery.

4 - Connect the diagnostic tester (see chapter "Injection system").

Connect the induction clamp of an ammeter to the positive power supply cable of the starter motor.

Remove the 10A fuse no. 12 (see "fuses" chapter).

Switch in position "ON" with interrupt switch in position "RUN" and side stand raised.

Select the "PARAMETERS" function.

Start the engine (so that it cannot move) long enough to measure the rpm and starter absorption.

N.B.

THE DECLARED RPM VALUE IS THAT INDICATED BY THE TESTER, THE RPM READING IS NOT THE REAL ONE, BUT IS VALID FOR DIAGNOSTIC PURPOSES.

Specific tooling

020460Y Scooter diagnosis and tester

Electric characteristic

Absorption at trailing speed:

80 - 120 A



Revolution speed =

approx. 300-400 rpm

YES go to 6 NO go to 7 NO go to 8 NO go to 9



5 - Restore the connections

6- The values are correct.

Finally carry out a check of the power consumption at idle speed.

Remove the starter motor (see the flywheel and starter system).

Reconnect the earth and positive and perform the test.

Electric characteristic**Current consumption at idle speed:**

<40 A

YES go to 10 NO go to 11

7- Low trailing speed**High electrical absorption**

Carry out a test of the engine rotation (example: possible melting of the bushes) and if no anomalies are found, replace the starter motor.

8- Low trailing speed**Low electrical absorption**

Repeat the test, bridging the power terminals of the starter remote control switch or even better replacing them.

Check the new values.

YES go to 12 NO go to 13

9 - High trailing speed**Low electrical absorption**

The engine turns too freely, check the compression end pressure.

If the values are not correct proceed as follows.

10 - The starter motor works properly.

11 - Check the rotation of the armature.

12 - Replace the starter remote control switch.

13 - Test the battery again and if necessary replace the starter motor.

N.B.

IF THE TRAILING SPEED OF THE CRANKSHAFT IS LOW AND COMBINED WITH STRANGE NOISE, CHECK THE FREEWHEEL OF THE TORQUE LIMITER (SEE THE "FLYWHEEL AND STARTER SYSTEM" CHAPTER).

STARTER MOTOR

Specification	Desc./Quantity
Type	Mitsuba sm13d
Power	0.9 kW

BATTERY

Specification	Desc./Quantity
Capacity	14 Ah
Starting current	125 A

START-UP REMOTE CONTROL SWITCH

Specification	Desc./Quantity
Type	SEALED
Maximum load	150 A continuous

STARTER TRANSMISSION

Specification	Desc./Quantity
Ring gear and freewheel coaxial to the flywheel.	Intermediate gear with built-in torque limiter.

The starter system has a transmission between the motor armature and engine shaft equipped with freewheel coaxial to the flywheel and torque limiter on the intermediate shaft.

The limiter is calibrated to 10 kgm (100 Nm); this component protects the structure of the engine and the starter kinematic mechanism in the event of incorrect starting with consequent inverse rotations.

The freewheel is used for a sufficiently silent starting.

The starter control (energised remote control) is slaved to enabling signals by the side stand and the emergency OFF/RUN switch, which does not allow starting given dangerous conditions.

The starter control circuit is not controlled by the immobilizer system, therefore before insisting on the starter system, check the consensus of the immobilizer.

As for checking the consensus circuit, see the "Electrical system" chapter, while for checking the engine shaft control transmission, follow what is described in the "Flywheel and starter system" chapter.

Removing the starter motor

N.B.

THIS OPERATION MAY ALSO BE CARRIED OUT WITH FLYWHEEL COVER ASSEMBLED.

- Loosen the two fastening screws.
- Extract the complete starter motor.




Removing the flywheel magneto


N.B.

IF YOU MUST REMOVE THE FLYWHEEL, IT IS NECESSARY TO REMOVE THE CHAIN GUIDE SLIDING BLOCK RETAIN PLATE FIRST.

- Unscrew the 3 fastening screws and remove the chain guide sliding block retain plate and the start-up rim.

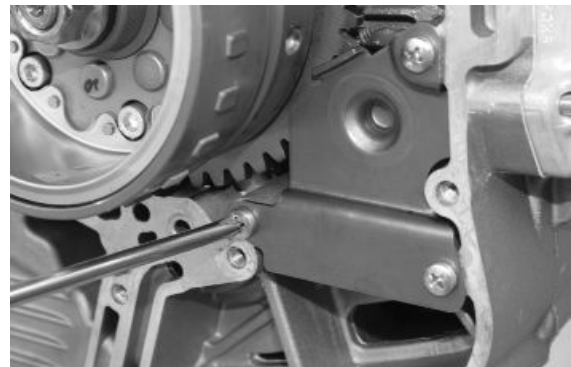


- Align the holes obtained on the flywheel with the crankcase housing to allow the introduction of the special tool.

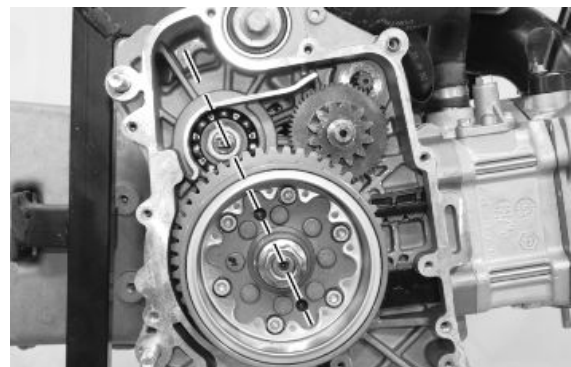

- Tighten the bushing of the flywheel lock tool on the removing tool threading.



-
- Insert the special tool as shown in the figure, making sure that the pins are perfectly inserted into the previously aligned holes and that it is perfectly abutted and almost flush with the flywheel.

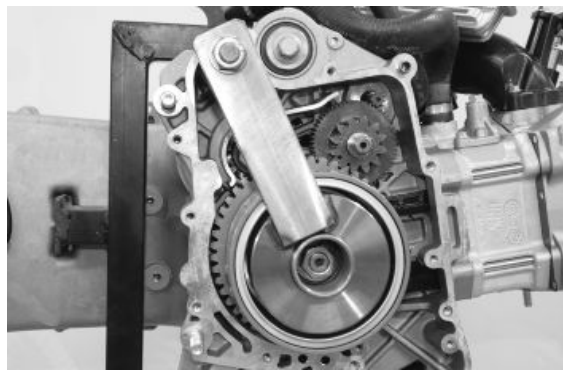Specific tooling**020472Y Flywheel lock wrench**

-
- Loosen the magneto flywheel fastening nut.
 - Remove the special tool and the fastening nut.



-
- Remove the washer.




-
- Insert the nut again so as to slightly uncover the shaft and free the space that was occupied by the washer.

CAUTION

THIS OPERATION IS REQUIRED AS THE FLYWHEEL IS STRONGLY LOCKED; THE CONE DETACHMENT MAY THEREFORE CAUSE THE ROTOR SLIPPAGE, WITH THE CONSEQUENT BREAKAGE OF THE MAGNETS.



- Insert the special removing tool.
- Using a 27-mm wrench and a 19-mm bushing, release the flywheel.

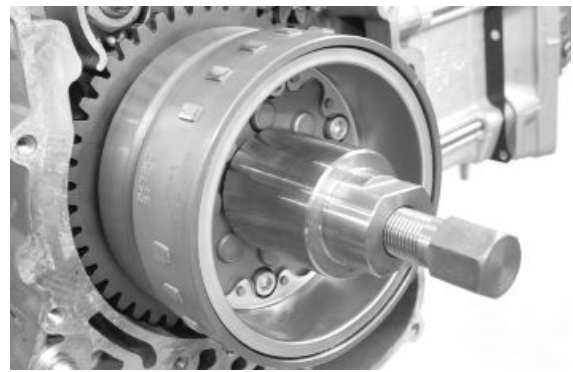Specific tooling**020467Y Flywheel extractor**

- Remove the extractor.
- Remove the nut and extract the flywheel with the start-up rim.
- Remove the crankshaft key.



- To remove the start-up rim from the freewheel it is necessary to turn it clockwise and pull it out.



- Remove the freewheel from the flywheel by loosening the 6 fastening screws.

SINCE THE FREEWHEEL MUST BE REMOVED, IT IS ADVISABLE TO LOOSEN THE 6 FASTENING SCREWS IN ADVANCE WITH THE FLYWHEEL STILL INSTALLED ON THE CRANKSHAFT.



- The freewheel is coupled to the flywheel with high precision; if removal is difficult, use 2 screws as gripping points and as removing tools, if required.



- Extract the intermediate gear provided with torque limiter.



Inspecting the flywheel components

- Check the integrity of the magnets.
- Check that the magnet support cage is free from deformation or cracks.
- Check that the flywheel splines exhibit no loosening.




Starter gear rim

- Check that there is no wear or abnormal impressions on the "rollers" of the freewheel and on the surface of the starter ring gear hub.
- Check the hub outside diameter.

Characteristic

Hub outside diameter:

Diameter $45.665 + 0.008 + 0.005$ mm

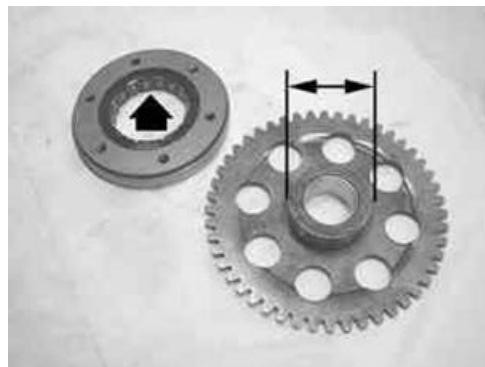

- Check the inside diameter of the bushing of the starter gearing.
- Check that the tothing is not worn.



Characteristic

Inside diameter of the bushing:

Diameter 27 + 0.020 +0.041 mm

N.B.

IF THE FAULTS DISCOVERED AFFECT THE HUB, REPLACE THE STARTER RING GEAR AND FREEWHEEL.

IF ONLY THE BUSHING IS WORN, IT IS POSSIBLE TO REPLACE ONLY THE COMPLETE START-UP RIM. IN THAT CASE, CHECK ALSO THE DIAMETER AND THE SURFACE OF THE CONNECTION ON THE CRANKSHAFT. IN CASE OR IRREGULARITIES, REPLACE THE CRANKSHAFT.

Intermediate gear

- Check that the tothing is not worn.
- Check the diameter of the two bearings.




Characteristic

Gear bearing diameter:

12 - 0 0.011 mm

Also check the shaft diameter on the flywheel cover and on the engine crankcase.

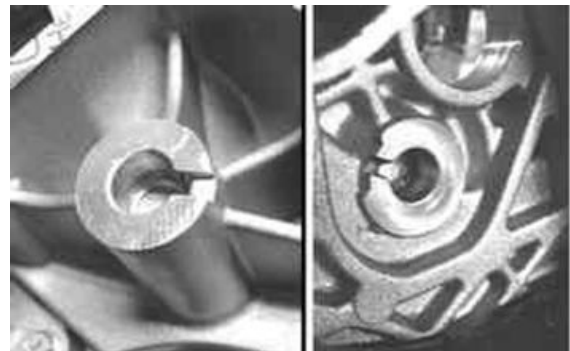

Characteristic

Bearing diameter on the flywheel cover

12 + 0.034 -0.016 mm

Bearing diameter on the engine crankcase:

12 + 0.034 -0.016 mm

N.B.

THE TORQUE LIMITER IS PROVIDED WITH 4 GEARS THAT HAVE THE FUNCTION OF CLUTCH DRIVE PLATES.

Driven plates consist of 4 Belleville springs provided with grooved profiles; this assembly allows transmitting torque lower than 10 kgm.

In case of incorrect start-up manoeuvres, the limiter prevents any kicks, with consequent reversal of direction of the crankshaft which would impair the engine structure.



The limiter assembly cannot be overhauled. In case of irregularities on the toothed discs, replace the assembly.

Refitting the free wheel

- Make sure the free wheel contact surfaces are in good condition.
- Thoroughly clean the free wheel to remove LOCTITE residue.
- Degrease the threading of the holes in the free wheel and the clamping screws.
- Apply the recommended product to the end of the screws.

Recommended products

Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock


- Fit the freewheel on the magneto flywheel making sure that the ground side is in contact with the flywheel itself, i.e. with wheel seeger ring visible.
- Lock the six clamping screws in criss-cross fashion to the prescribed torque.



Locking torques (N*m)

Screw fixing freewheel to flywheel 13 ÷ 15

- Oil the free wheel "rollers".

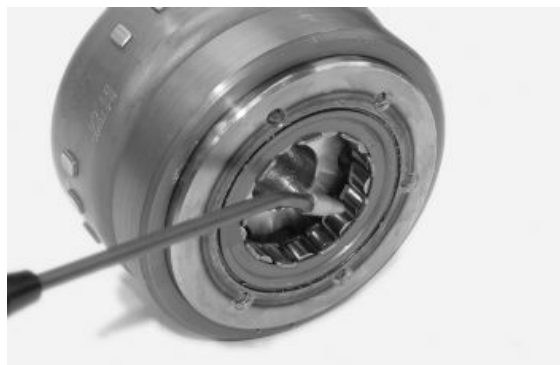

Refitting the intermediate gear

- Lubricate the gear housing on the engine crank-case.



-
- Insert the intermediate gear with torque limiter



-
- Lubricate the inside bushing and the starter ring gear hub surface.



-
- Install the start-up rim on the flywheel turning it clockwise and inserting at the same time.



Refitting the flywheel magneto

- Insert the key on the crankshaft.
- Install the flywheel checking the proper insertion of the key and engaging the torque limiter gear with the start-up rim.



- Insert washer and nut on the crankshaft.



- Tighten thoroughly the guide bushing of the flywheel lock tool and loosen by 1/4 turn.

N.B.


FAILURE TO OBSERVE THIS RULE CAUSES THE LOCKING OF THE GUIDE ON THE FLYWHEEL.

Specific tooling


020472Y Flywheel lock wrench



- Align the 2 holes of the flywheel with the case housing to allow the introduction of the special tool.

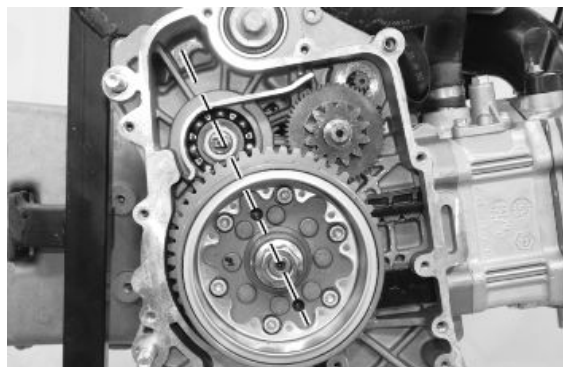

- Insert the special tool checking that the pins are perfectly introduced into the seat.

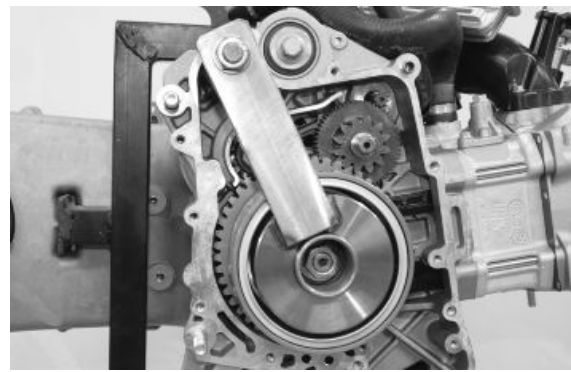

Specific tooling

020472Y Flywheel lock wrench


- Tighten the flywheel lock nut to the prescribed torque.



Locking torques (N*m)

Flywheel fixing nut 115 - 125

- Install the chain guide retain plate tightening the 3 screws to the prescribed torque.

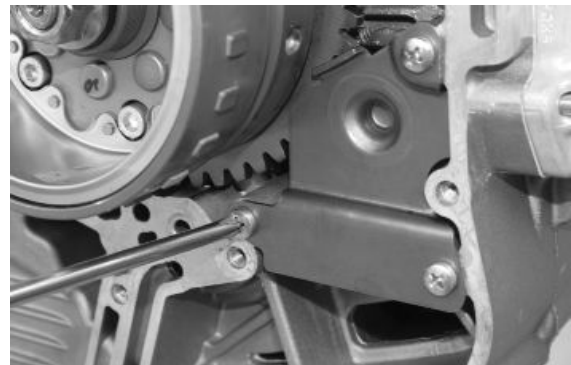

N.B.

BEFORE TIGHTENING THE SCREWS, MOVE THE START-UP RIM IN CONTACT WITH THE CRANKCASE AND CHECK THAT IT IS FREE TO ROTATE IN ANTICLOCKWISE DIRECTION.

Locking torques (N*m)

Chain guide sliding block retain plate fastening screws 3 ÷ 4

Refitting the starter motor

- Check that the O-ring is in good working order and lubricate it.
- Insert the starter motor.
- Tighten the 2 fastening screws to the prescribed torque.



Locking torques (N*m)


Starter motor screws 11 ÷ 13

Cylinder assy. and timing system

- Remove the external and internal transmission cover.




- Remove the flywheel cover, the flywheel and the torque limiter.

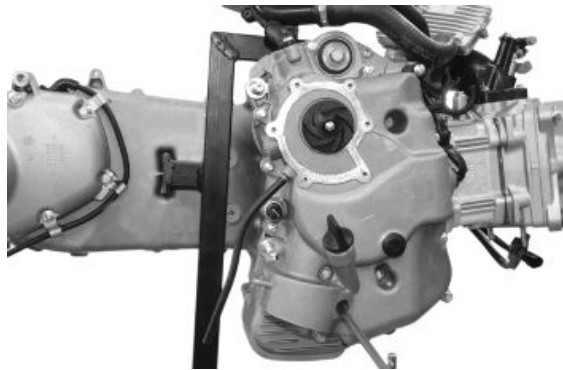


Removing the intake manifold

- Remove the 3 mounting screws.
- Remove the intake manifold unit.

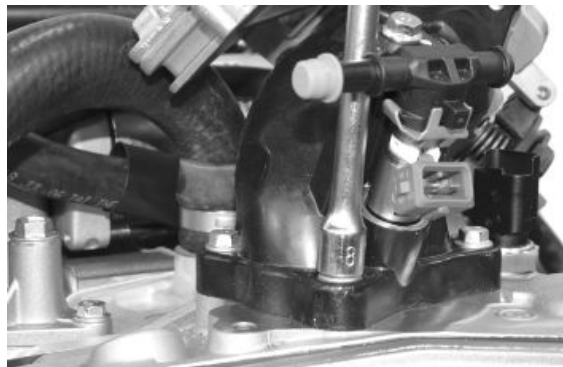

Removing the rocker-arms cover

- Loosen the 6 special screws with stop and the relevant rubber gaskets.
- Remove the tappet cover with relevant gasket.

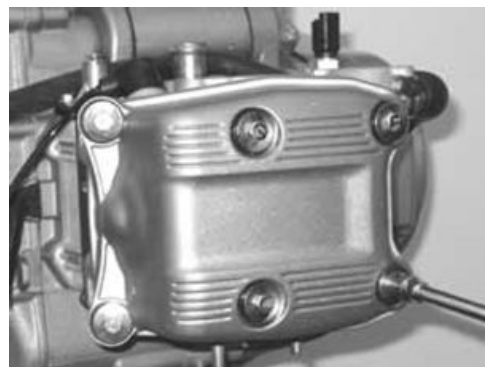

Removing the timing system drive


- Turn the engine to close the intake valves.



- Remove the central screw and the valve lifting device mass stop bell using the special tool.

Specific tooling


020565Y Flywheel lock calliper spanner

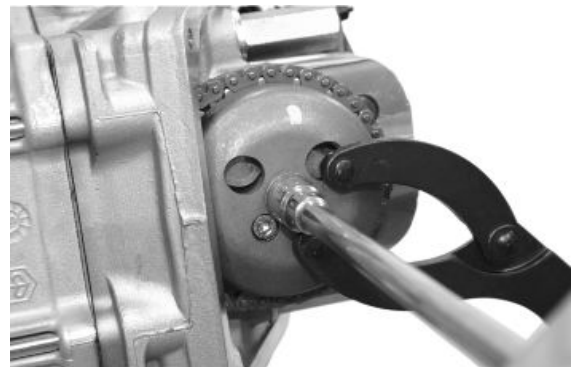

- Remove the return spring and the valve lifting mass with relevant travel end washer.

N.B.


BE CAREFUL NOT TO ALLOW THE WASHER AND SPRING TO FALL INTO THE ENGINE THROUGH THE CHAIN COMPARTMENT.

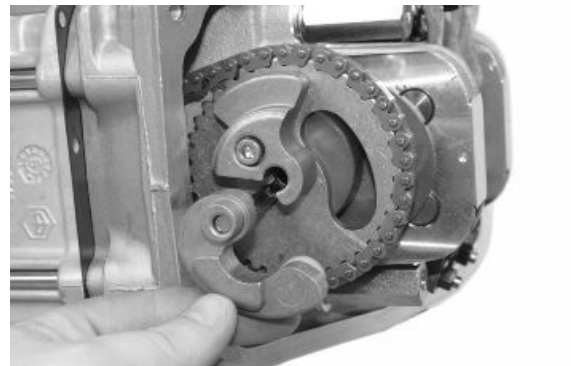


- Align the reference marks on the timing chain rim with those on the head.




- Loosen the central screw on the tensioner first.
- Unscrew the 2 fastening screws and remove the tensioner with relevant gasket.

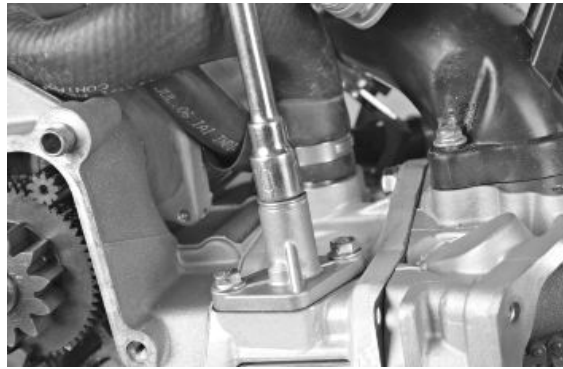

Remove the inside hexagon screw and the counterweight as shown in the figure.

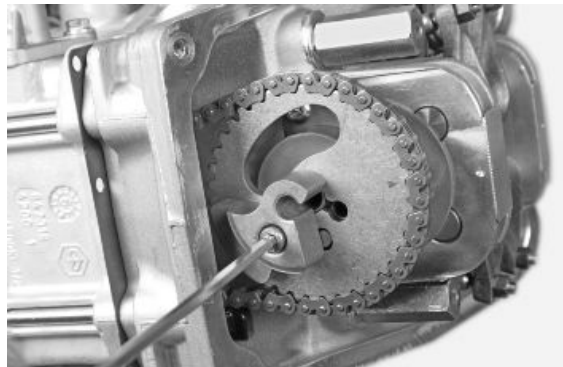

- Remove the timing belt rim from the camshaft.
- Remove the timing belt rim.

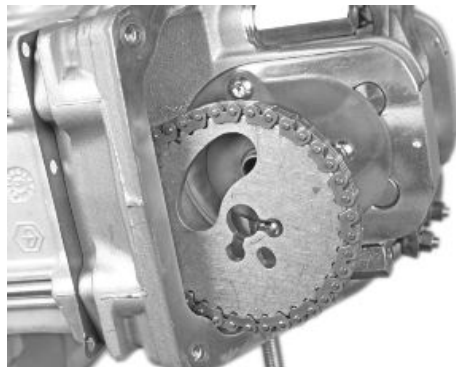


Removing the cam shaft

- Unscrew the 3 fastening screws and remove camshaft retaining bracket.

N.B.


REMOVING THE FASTENING SCREWS MAY BE DIFFICULT. BE CAREFUL NOT TO DAMAGE THE INSIDE HEXAGON. IF NECESSARY, SEPARATE THE THREADS IN ADVANCE.

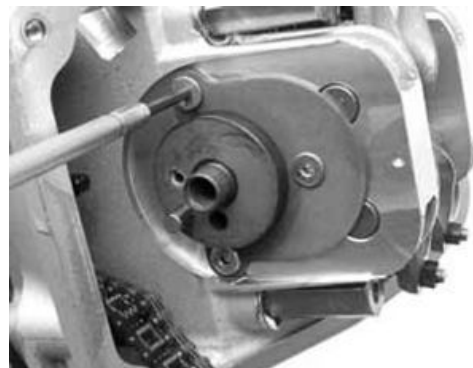

-
- Remove the cam shaft.



-
- Remove pins and rocking levers by the transmission side holes.

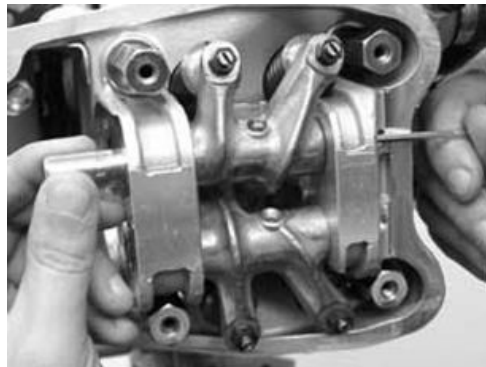

Removing the cylinder head

-
- Remove the spark plugs.
 - Remove the cooling system outlet sleeve with thermostat.




-
- Remove the coolant temperature sensor.

N.B.


THE SENSOR CONTROLS BOTH INJECTION AND THE ANALOGUE INSTRUMENT ON THE PANEL. TO CHECK THIS COMPONENT, SEE THE INJECTION CHAPTER.



- Remove the 2 fastening nuts on the head, on the exhaust and on the intake side.

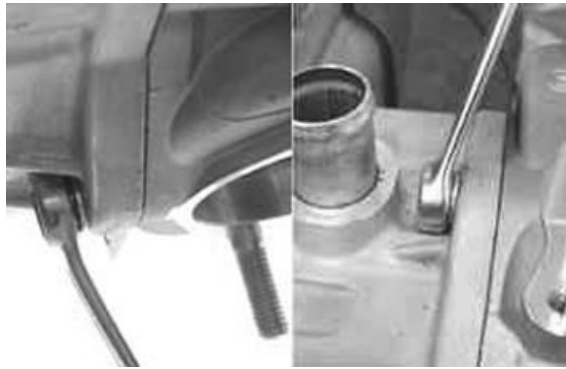

- Remove the two M6 screws into the distribution channel and the M6 screw on the spark plug side with the thermostat support.

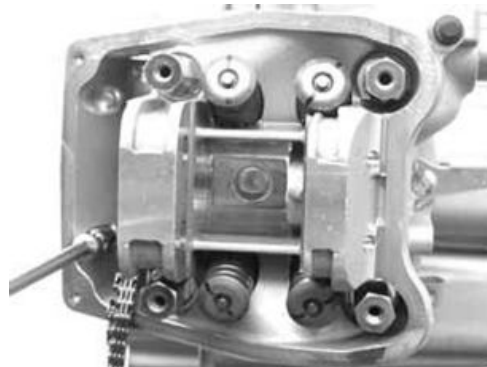**N.B.**

THE HEAD MAY BE REMOVED WITH THE CAMSHAFT, ROCKING LEVER PINS AND FITTING BRACKET IF NECESSARY.

- Loosen the 4 head-cylinder fastening nuts in 2 or 3 times and in a crossed sequence.
- Remove the head, the 2 centring dowels, the gasket and the lower chain guide sliding block.

N.B.

DO NOT REMOVE THE DOWELS IF THEY ARE FORCED INTO THEIR SEAT.

**CAUTION**

WHEN YOU HAVE TO REMOVE THE HEAD, PREPARE A SUITABLE CONTAINER SINCE THE THERMAL UNIT CONTAINS COOLANT.


Removing the valves

- Using the appropriate tool fitted with an adaptor, remove the cotters, caps, springs and valves.

Specific tooling

020382Y Valve cotters equipped with part 012 removal tool

020382Y012 bush (valve removing tool)

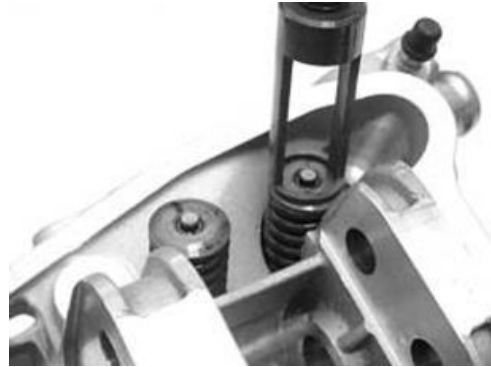**CAUTION**

ARRANGE THE VALVES SO AS TO RECOGNISE THE ORIGINAL POSITION ON THE HEAD (FLY-WHEEL SIDE AND TRANSMISSION SIDE).

- Remove the oil guards using the special tool.

Specific tooling

020431Y Valve oil seal extractor



- Remove the spring supports.

N.B.

BLOW THE SEATS WITH COMPRESSED AIR TO FACILITATE THE SPRING SUPPORT REMOVAL.



Removing the cylinder - piston assy.

- Remove the timing chain.
- Loosen the fastening screw and remove the spacer and the tightening sliding block.

N.B.

IT IS ADVISABLE TO MARK THE CHAIN IN ORDER TO ENSURE THAT THE INITIAL DIRECTION OF ROTATION IS MAINTAINED.




- Extract the cylinder with the relevant gasket and the centring dowel.

N.B.

THE SECOND CENTRING IS ENSURED BY A PIN SET INTO THE CYLINDER.

CAUTION

TO PREVENT DAMAGES TO THE PISTON, SUPPORT IT WHILE REMOVING THE CYLINDER.

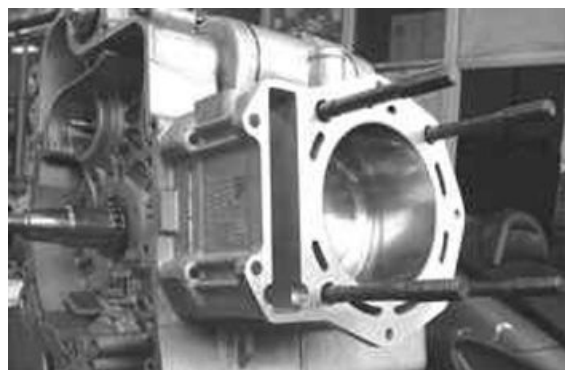

- Remove the 2 piston pin locking rings by the specific housings.
- Extract the pin and remove the piston.

N.B.

USE PAPER OR A CLOTH TO CLOSE THE CYLINDER HOUSING MOUTH ON THE CRANKCASE TO PREVENT SLIPPAGE OF ONE OF THE PIN LOCKING RINGS INTO THE CASE.



- Remove the piston sealing rings and the oil scraper.

CAUTION

NOTE THE ASSEMBLY POSITIONS OF THE LININGS TO PREVENT INVERTING THE POSITION IN CASE OF REUSE.

N.B.

BE CAREFUL NOT TO DAMAGE THE SEALING RINGS DURING REMOVAL.



Inspecting the small end

- Using a bore gauge, measure the connecting rod small end diameter.


N.B.

IF THE CONNECTING ROD SMALL END DIAMETER EXCEEDS THE STANDARD DIAMETER, EXHIBITS WEAR OR OVERHEATING, PROCEED TO REPLACE THE CRANKSHAFT AS DESCRIBED IN CHAPTER CRANKCASE AND CRANKSHAFT.

Characteristic

Standard diameter:

22 + 0.025 +0.015 mm

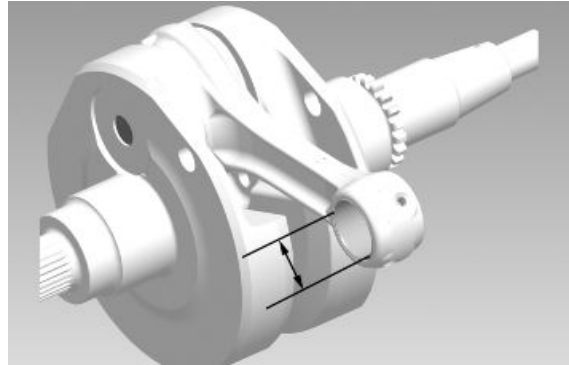

Inspecting the wrist pin

- Check the pin outside diameter using a micrometer.

Characteristic

Standard diameter:


22 0 - -0.004 mm

- Calculate the coupling clearance between pin and connecting rod end.

Characteristic

Standard clearance:

0.015 ÷ 0.029 mm

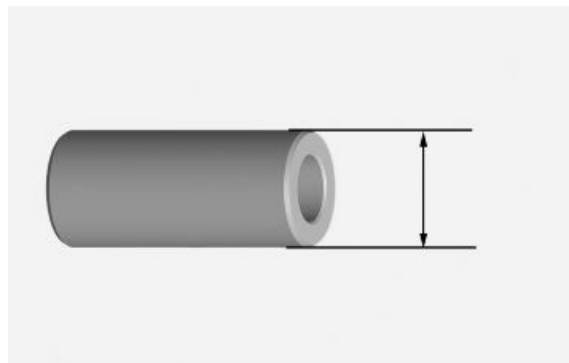


Inspecting the piston

- Measure the capacity diameter on the piston.

Characteristic

Standard diameter:

22 + 0.006 + 0.001 mm

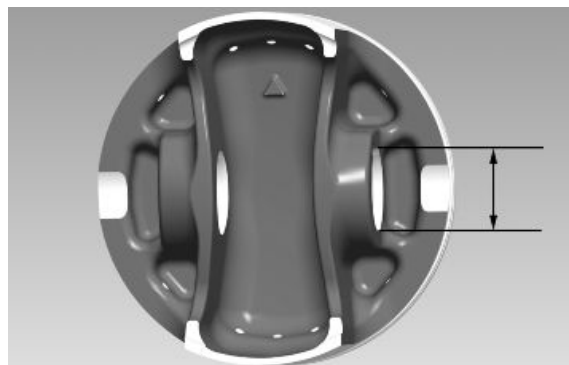

- Calculate the piston pin coupling clearance.

N.B.


THE PIN HOUSINGS HAVE 2 LUBRICATION CHANNELS. FOR THIS REASON, MEASUREMENT MUST BE MADE ACCORDING TO THE PISTON AXIS.

Characteristic

Standard clearance:

0.001 ÷ 0.010 mm

- Measure the outside diameter of the piston, perpendicular to the gudgeon pin axis.
- Take the measurement in the position shown in the figure.

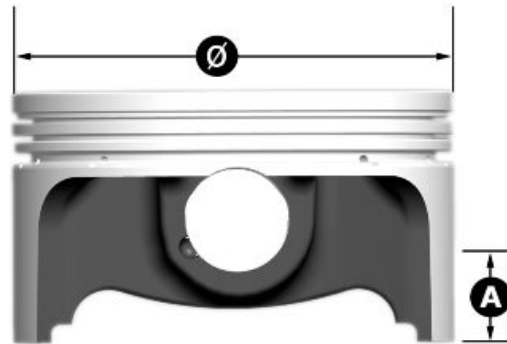

N.B.

REFER TO THE «SPECIFICATIONS» SECTION FOR THE SIZES OF THE PISTON AND THE CYLINDER-PISTON COUPLING CLEARANCES.

Characteristic


A:

10 mm

Piston diameter:

94 mm nominal value

- Using a bore meter, measure the cylinder inner diameter at a given height according to the directions shown in the figure.

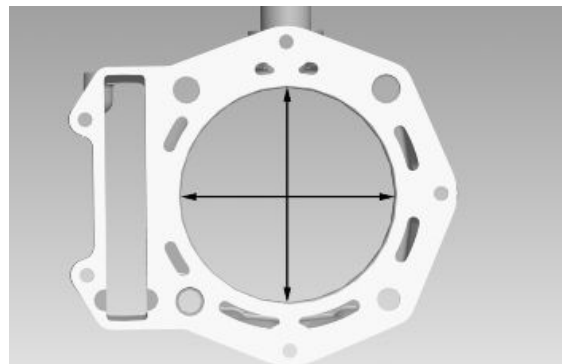


Characteristic

B:

43 mm

Standard diameter:

94 mm nominal value

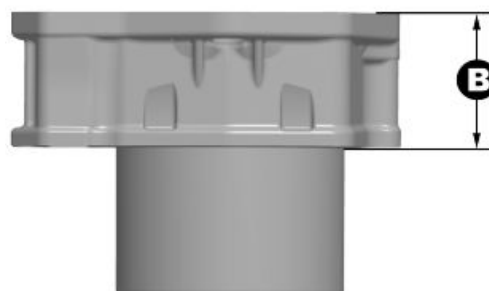

- Check that coating is free from flakes.
- Check that the head matching surface exhibits no deformations or wear.

Characteristic

Maximum allowable run-out:

0.05 mm

- Pistons and cylinders are classified into categories based on their diameter. The coupling is carried out in pairs (A-A, B-B, C-C, D-D).

N.B.

REFER TO THE «SPECIFICATIONS» SECTION FOR THE SIZES OF THE CYLINDER AND THE CYLINDER-PISTON COUPLING CLEARANCES.

Inspecting the piston rings

- Alternately insert the three sealing rings into the cylinder, in the area where it retains its original diameter. Using the piston, insert the rings perpendicularly to the cylinder axis.
- Make sure that each single sealing ring evenly adheres to the cylinder liner. If it does not, this means the ring is worn. Replace it.
- Measure the opening (see figure) of the sealing rings using a feeler gauge.
- If higher values than those prescribed are measured, replace the linings.



Check the size of the sealing ring opening:

Compression ring: 0.15 ÷ 0.35 mm. Max. value 0.5 mm

Oil scraper ring: 0.25 ÷ 0.50 mm. Max. value 0.65 mm

Oil scraper ring: 0.25 ÷ 0.50 mm. Max. value 0.65 mm

Rings/housing coupling clearances:

Carefully clean the sealing ring housings.
Place a thickness gauge between the ring and the housing as shown in the drawing and check the coupling clearances.

Top ring Standard coupling clearance:

0.01÷0.06 mm

Maximum clearances allowed after use: 0.10 mm


Intermediate ring Standard coupling clearance:

0.02÷0.07 mm

Maximum clearances allowed after use: 0.10 mm

Oil scraper ring Standard coupling clearance:

0.01÷0.06 mm

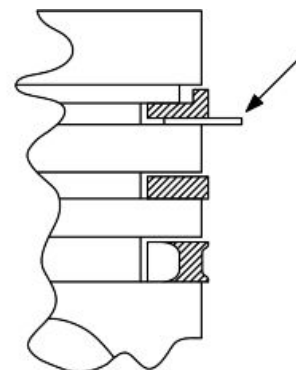

Maximum clearances allowed after use: 0.10 mm

Replace the piston if clearances exceed the maximum limits specified in the table.

Removing the piston

- Install piston and wrist pin onto the connecting rod, aligning the piston arrow the arrow facing towards the exhaust.




- Insert the locking ring into the special tool, with the opening in the position indicated on the tool.

S = left

D= right



- Place the wrist pin stop ring into position using a punch

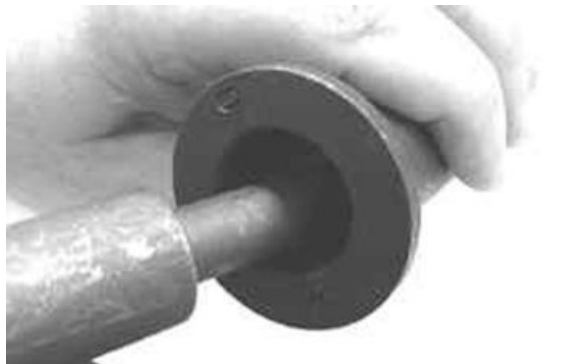

- Install the pin lock using the key shown in the figure.



Specific tooling

020470Y Pin retainers installation tool

N.B.

THE TOOL FOR INSTALLING THE STOP RINGS MUST BE USED MANUALLY.

CAUTION

USING A HAMMER MIGHT DAMAGE THE STOPS' HOUSING.


Choosing the gasket

- Provisionally fit the piston into the cylinder, without any base gasket.
- Install a comparator on the special tool using the short union, as shown in the figure.

Specific tooling

020475Y Piston position checking tool

- Using an abutment plane, reset the comparator with a preload of a few millimetres.
- Finally fix the comparator.
- Check the perfect sliding of the feeler pin.
- Install the tool on the cylinder without changing the comparator position.
- Lock the tool using the original head fixing nuts.
- Rotate the crankshaft until TDC (the inverted point of the dial gauge rotation)
- Measure the deviation from the reset value.

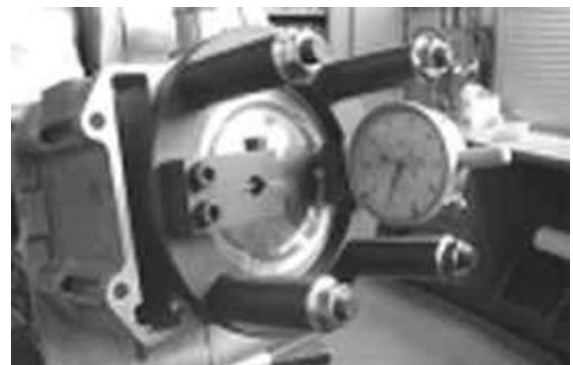

- Identify the thickness of the cylinder base gasket to be used for reassembly by the table below. Correctly identify the cylinder base gasket thickness to keep the correct compression ratio.
- Remove the special tool and the cylinder.

N.B.

IF DEVIATIONS (OR RECESSES OR PROJECTIONS) CLOSE TO THE CHANGE OF CATEGORY ARE MEASURED, REPEAT THE MEASUREMENT AT THE OPPOSED SIDE. TO DO SO, REPEAT THE TOOL INSTALLATION BY INVERTING ITS POSITION.

Characteristic

Recess / Projection measured 1

- 0.185 - - 0.10

Gasket thickness 1

0.4 ± 0.05

Recess / Projection measured 2

- 0.10 - + 0.10

Gasket thickness 2

0.6 ± 0.05

Recess / Projection measured 3

+ 0.10 - + 0.185

Gasket thickness 3

0.8 ± 0.05

Refitting the piston rings

- Place the scraper ring spring on the piston.
- Install the scraper ring keeping the opening opposed to the spring junction and with the writing "top" facing the piston top. The chamfered side of the oil scraper ring should always be facing the piston crown.
- Fit the second lining with the identification letter or the writing "top" facing the piston crown. In any case, the step must be facing opposite the piston top.
- Install the first compression lining in the direction imposed by the housing.
- It is advisable to use a fitter to facilitate the installation of the linings.



N.B.

THE TWO PISTON RINGS ARE MADE WITH A TAPERED CYLINDRICAL CONTACT CROSS-SECTION. THIS IS TO ACHIEVE A BETTER BEDDING.

- Misalign the lining openings at 120° as shown in the figure.
- Lubricate the components with engine oil.
- The engine uses the first compression lining with an L section.

Refitting the cylinder

- Insert the cylinder base gasket with the thickness determined above.
- Using the fork and the ring clamp, fit the cylinder as shown in the figure.

N.B.

BEFORE FITTING THE CYLINDER, CAREFULLY BLOW THE LUBRICATION DUCT AND LUBRICATE THE CYLINDER LINER. CHECK THE PRESENCE OF THE TWO REFERENCE DOWELS.



Specific tooling

020468Y Piston fitting ring

020512Y Piston fitting fork

Inspecting the cylinder head

- Using a trued bar and feeler gauge check that the cylinder head surface is not worn or distorted.

Characteristic

Maximum allowable run-out:

0.1 mm

- In case of irregularities, replace the head.
- Check the sealing surfaces for the intake and exhaust manifold.
- Check that the camshaft and the rocker pin capacities exhibit no wear.
- Check that the head cover surface is not worn.
- Check that the coolant sealing pad exhibits no oxidation.



Inspecting the timing system components

- Check that the guide shoe and the tensioner shoe are not worn out.

- Check that the crankshaft pinion and the camshaft timing gear and crankshaft pinion exhibit no wear.

In case of wear of the sliding blocks, replace them.

In case of wear of the chain or rim, replace the entire unit.



N.B.

IF THE CHAIN HAS DAMAGED THE PINION, REPLACE THE CRANKSHAFT AS DESCRIBED IN CHAPTER CRANKCASE AND CRANKSHAFT.

Chain tensioner:

- Remove the centre screw with the washer and the tensioner spring. Check that the one-way mechanism is not worn.

- Check the condition of the tensioner spring.

- If examples of wear are found, replace the whole assembly.



Inspecting the valve sealings

- Visually inspect the valve sealing surface.

CAUTION

DO NOT REVERSE THE FITTING POSITIONS OF THE VALVES (RIGHT - LEFT).

- If the sealing surface of the valve is found to be interrupted at one or more points or is not flat, replace the valve.



- Insert the valves into the cylinder head.
- Alternatively check the intake and exhaust valves.
- The test is carried out by filling the manifold with petrol and checking that the head does not ooze through the valves when these are just pressed with the fingers.



Inspecting the valve housings

- Clean the valve seats of any carbon residues.
- Using the Prussian blue, check the width of the impression on the valve seat "V".


Characteristic

Standard value:

1 - 1.3 mm

Admissible limit:

1.6 mm

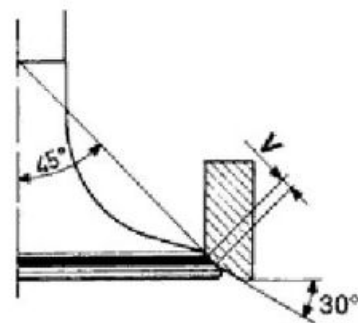

- If the impression width on the valve seat is larger than the prescribed limits, true the seats with a 45° mill and then grind.
- In case of excessive wear or damages, replace the head.

Inspecting the valves

- Measure the diameter of the valve stems in the three positions indicated in the diagram.


STANDARD DIAMETER

Specification	Desc./Quantity
Inlet:	4.987 - 4.972 mm
Outlet:	4.975 - 4.960 mm

MINIMUM ADMISSIBLE DIAMETER


Specification	Desc./Quantity
Inlet:	4.96 mm
Outlet:	4.945 mm

- Calculate the clearance between valve and valve guide.

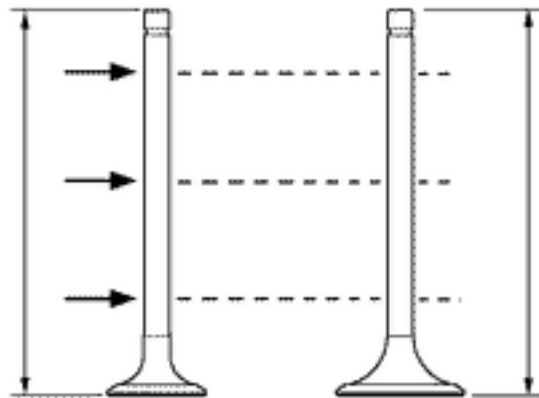


- Check the deviation of the valve stem by resting it on a "V" shaped abutment and measuring the extent of the deformation with a comparator.

Characteristic
Limit values admitted:
 0.1 mm

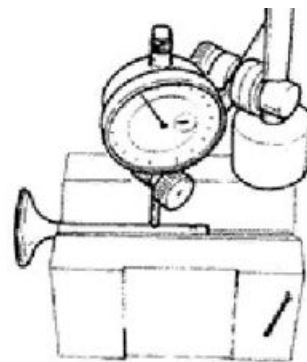

- Check the concentricity of the valve head by arranging a comparator at right angle relative to the valve head and rotate it on a "V" shaped abutment.

Characteristic
Admissible limit:
 0.03 mm

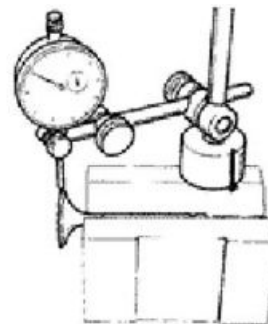

Inspecting the valve stem guide clearance

- After measuring the valve guide diameter and the valve stem diameter, check the clearance between guide and stem.

INLET

Specification	Desc./Quantity
Standard clearance:	0.013 - 0.04 mm
Admissible limit:	0.08 mm

OUTLET

Specification	Desc./Quantity
Standard clearance:	0.025 ÷ 0.052 mm


Specification	Desc./Quantity
Admissible limit:	0.09 mm



STANDARD VALVE LENGTH

Specification	Desc./Quantity
Inlet:	95.0 ± 0.3 mm
Outlet:	94.2 ± 0.3 mm

- Check that there are no signs of wear on the surface of contact with the articulated register terminal.

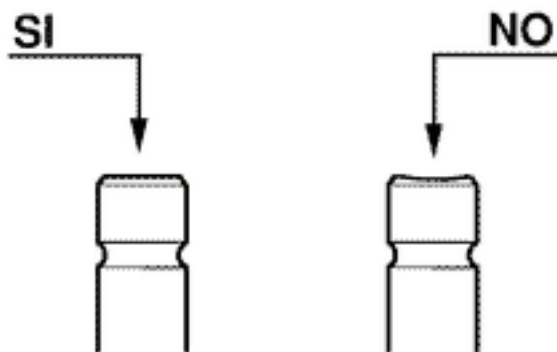

- If the checks above give no failures, you can use the same valves. To obtain better sealing performance, grind the valve seats. Grind the valves gently with a fine-grained lapping compound. During the grinding, keep the cylinder head with the valve axes in a horizontal position. This will prevent the lapping compound residues from penetrating between the valve stem and the guide (see figure).



CAUTION

TO AVOID SCORING THE CONTACT SURFACE, DO NOT KEEP ROTATING THE VALVE WHEN NO LAPPING COMPOUND IS LEFT. CAREFULLY WASH THE CYLINDER HEAD AND THE VALVES WITH A SUITABLE PRODUCT FOR THE TYPE OF LAPPING COMPOUND BEING USED.

CAUTION

DO NOT REVERSE THE FITTING POSITIONS OF THE VALVES (RIGHT - LEFT).

Inspecting the springs and half-cones

- Check that the upper and lower supporting spring washers, the cotters and the oil seal show exhibit no signs of abnormal wear. Replace a component when worn.



- Measure the unloaded spring length.

Characteristic

Standard length:

44.4 mm

Admissible limit after use:

42.4 mm



Refitting the valves

- Place the valve spring support washers on the head.
- Alternately insert the 4 oil guards using the special tool.
- Lubricate the oil guards and the valve guides.

Specific tooling

020306Y Punch for assembling valve seal rings



- Fit the valves, the springs and the spring retaining washers. Using the appropriate tool with adapter, compress the springs and insert the cotters in their seats.

Specific tooling

020382Y Valve cotters equipped with part 012 removal tool

020382Y012 bush (valve removing tool)

N.B.



DO NOT CHANGE THE VALVE FITTING POSITION. FIT THE VALVE SPRINGS WITH THE REFERENCE COLOUR ON COTTER SIDE (TURNS WITH GREATER PITCH).

- Place the valve spring support washers on the head.
- Alternately insert the 4 oil guards using the special tool.
- Lubricate the oil guards and the valve guides.



Specific tooling

020306Y Punch for assembling valve seal rings

- Fit the valves, the springs and the spring retaining washers. Using the appropriate tool with adapter, compress the springs and insert the cotters in their seats.



Specific tooling

020382Y Valve cotters equipped with part 012 removal tool

020382Y012 bush (valve removing tool)

N.B.

DO NOT CHANGE THE VALVE FITTING POSITION. FIT THE VALVE SPRINGS WITH THE REFERENCE COLOUR ON COTTER SIDE (TURNS WITH GREATER PITCH).

Inspecting the cam shaft


- Check that the camshaft ends exhibit no scores or irregular wear.
- Using a micrometer, measure the camshaft capacity.

STANDARD DIAMETER

Specification	Desc./Quantity
Bearing A Ø:	42 - 0.060 -0.085 mm
Bearing B diameter:	20 - 0.020 -0.041 mm

MINIMUM ADMISSIBLE DIAMETER

Specification	Desc./Quantity
Bearing A Ø:	41.910 mm
Bearing B diameter:	19.940 mm

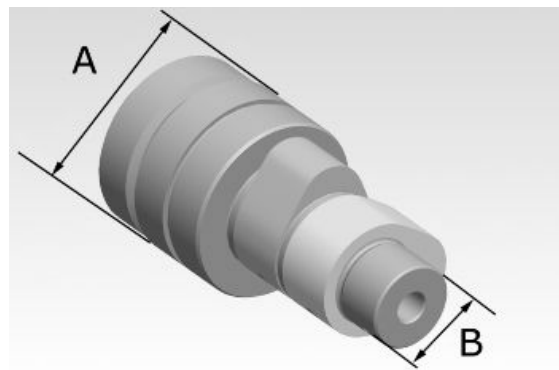


-Using a gauge, measure the cam height.

STANDARD HEIGHT

Specification	Desc./Quantity
intake	33.774 mm
discharge	33.273


ADMISSIBLE LIMITS

Specification	Desc./Quantity
intake	33.526 mm
discharge	33.026 mm
Standard axial clearance:	0 - 0.22 mm
Maximum admissible axial clearance:	0.3 mm

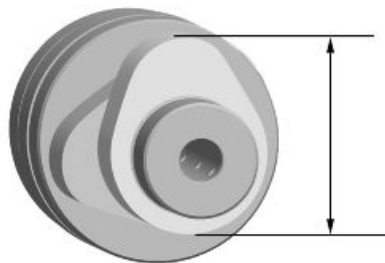

- If any of the above dimensions are outside the specified limits, or there are signs of excessive wear, replace the defective components with new ones.

- Check that the retaining plate seat shown in the figure exhibits no wear.

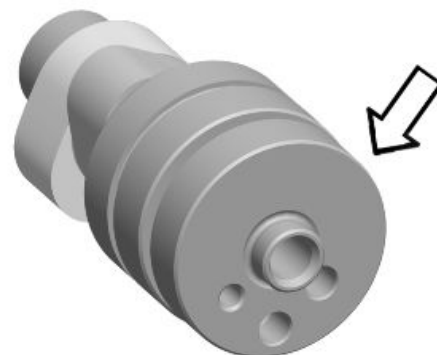

- Check that the automatic valve lifting device cam, the travel end roller and the rubber abutment on the containment bell are free from wear.
- Check that the valve lifting spring has not yielded.
- Replace any defective or worn components.



- Check that the rocking lever pins exhibit no scores or wear.

Characteristic

Standard diameter:

13 - 0.010 -0.018 mm

- Measure the inside diameter of each rocking lever.



Characteristic

Standard diameter:

13 + 0.026 +0.015 mm

- Check that the cam contact sliding block and the articulated register plate is free from wear.
- In case of wear, replace the component.

Refitting the head and timing system components


- Insert the chain guide sliding block.
- Insert the two centring dowels between head and cylinder.
- Install the head gasket.



N.B.

THE FIGURE SHOWS THE INSERTION POSITION OF THE TWO CENTRING DOWELS BETWEEN HEAD AND CYLINDER. THE DIRECTION OF INSTALLATION FOR THE GASKET IS FORCED BY THE DOWELS.

- The head gasket is made of steel and has a standard thickness.

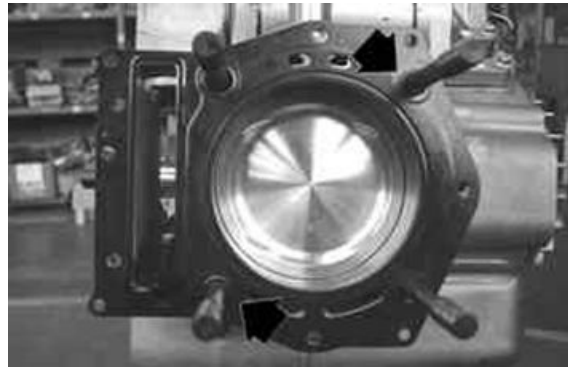

- Check that the head lubrication channel is perfectly clean. Clean with compressed air jets, if required.
- Insert the head.
- Lubricate the stud bolts and the 4 fixing stud bolts.




- Tighten the 4 fixing stud bolts crosswise to the prescribed torque as shown in the figure.

Locking torques (N*m)

Head fixing stud bolts: ***


- *** Apply a preliminary torque of 7 Nm in a crossed sequence.
- Tighten by 90° in a crossed sequence.
- Tighten again by 90° in a crossed sequence.

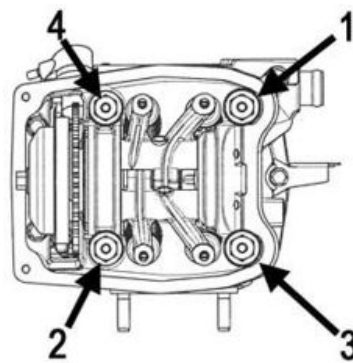

- Tighten the fastening nuts on the exhaust and on the intake side to the prescribed torque.

Locking torques (N*m)


Exhaust / intake head fixing nuts: 10 - 12

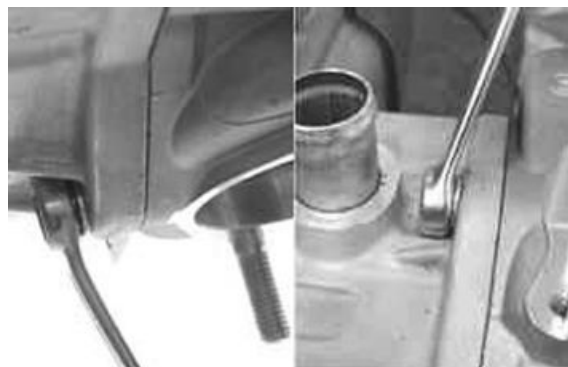

- Tighten the 3 side screws to the prescribed torque.

Locking torques (N*m)

Head fixing screws 10 - 12

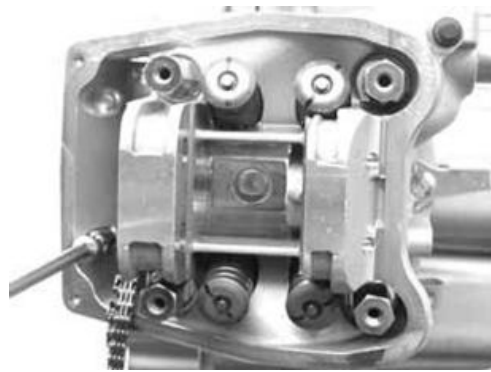

- Install the coolant temperature sensor with the washer and tighten to the prescribed torque.

CAUTION

FAILURE TO OBSERVE THE TIGHTENING TORQUE CAN DAMAGE THE SENSOR.

Locking torques (N*m)

coolant temperature sensor: 10 - 12



- Fit the spark plugs and tighten them to the prescribed torque.

Locking torques (N*m)

Spark plug 12 ÷ 14

- Insert the timing control belt on the crankshaft according to the initial direction of rotation.
- Install the tensioner shoe with its spacer, tightening the bolt to the prescribed torque, using the recommended product.

Recommended products

Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock



Locking torques (N*m)

Tensioner sliding block fixing screw: 10 - 14


- Insert pins and rocking levers on the flywheel side.
- Lubricate the two rocking levers through the holes at the top.



- Clean the camshaft by blowing with little compressed air jets, especially the retaining plate housing.
- Lubricate the 2 shafts.
- Insert the camshaft into the head with the cams opposite the rocking levers.



- Remove any LOCTITE residues from the screws fixing the camshaft retaining bracket using a brush.
- Apply the recommended product to the fixing screws and tighten to the prescribed torque.

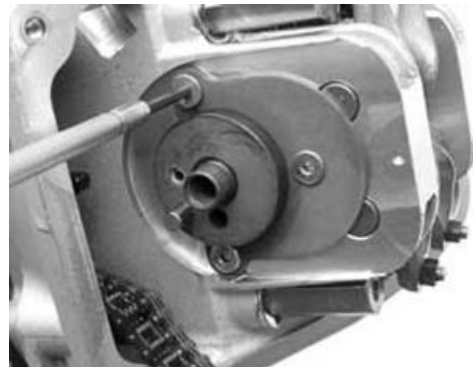

Recommended products

Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock

- Insert the camshaft retain bracket with visible countersinks and tighten the 3 fastening screws to the prescribed torque, being careful not to damage the inside hexagon.


Locking torques (N*m)

Camshaft retaining bracket screws: 4 ÷ 6

- Install the intermediate gear with torque limiter, the flywheel and its cover, as described in Chapter "Flywheel and start-up system", and in Chapter "Flywheel cover".

N.B.

FOR MORE CONVENIENCE, INSTALL THE FLYWHEEL COVER WITHOUT THE COOLING SYSTEM SLEEVES.

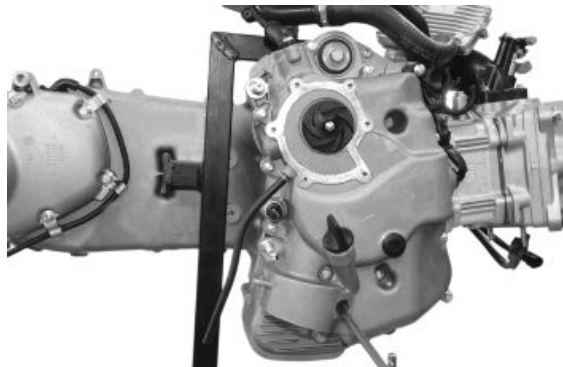

- Using the TORX wrench, remove the timing check cap.



- Insert the belt on the camshaft control timing rim.
- Insert the timing rim on the camshaft checking that the references are aligned.

N.B.

DURING THE STROKE CHECK, KEEP THE BELT TENSIONED BY PRESSING ON THE TIGHTENER COMPARTMENT SIDE.



- Keeping the belt slightly pulled, turn the crankshaft using the driving pulley to make the reference on the magnet support collimate with that on the flywheel cover.



- Install the counterweight mass.
- Centre using the bell fastening screw.
- Lock the mass fixing screws to the prescribed torque, using the recommended product.

Recommended products



Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock


Locking torques (N*m)

Counterweight screw 7 ÷ 8.5


- Remove the central screw.
- Install the valve lifting mass being careful to the proper positioning of the travel end ring.
- Lubricate the mass and de-compressor control pin.

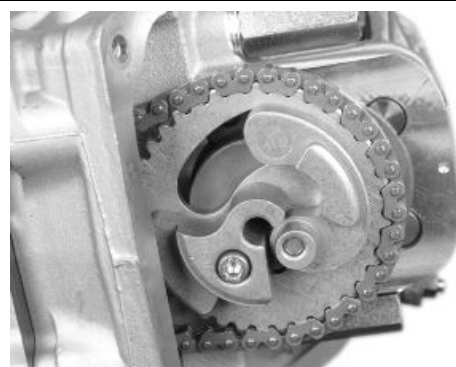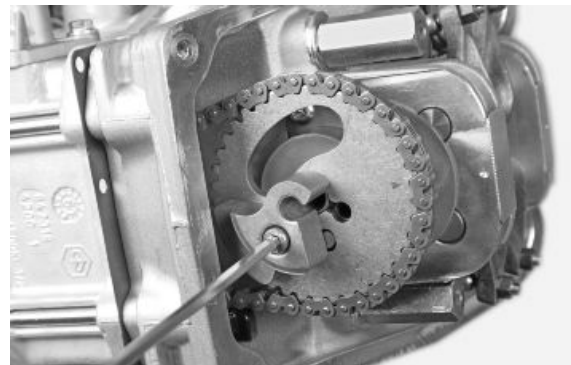

- Install the return spring and load it by about 3/4 turn.

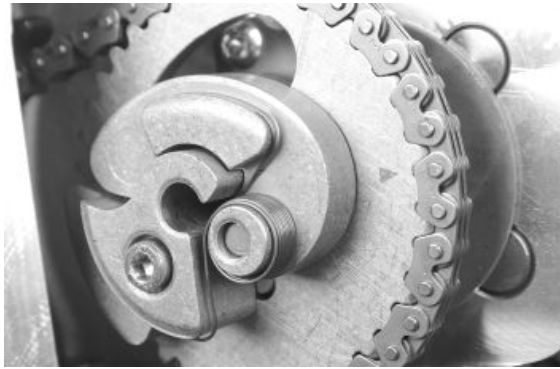

- Turn the engine to move the references to the top as shown in the figure (intake end).

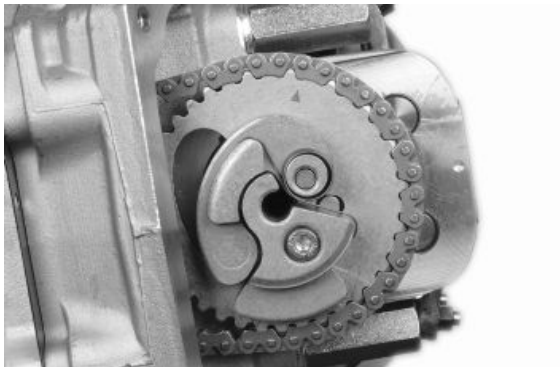

- Insert the valve lifting device mass stop bell.
- Tighten the retaining screw to the prescribed torque, using the recommended product.

N.B.

THE BELL TIMING IS ENSURED BY THE COUNTERWEIGHT MASS FASTENING SCREW HEAD.

Recommended products


Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock


- Check that the decompression mass is free and that it is pulled by the spring.

Locking torques (N*m)


Valve lifter mass stop bell fixing screws: 30 - 35

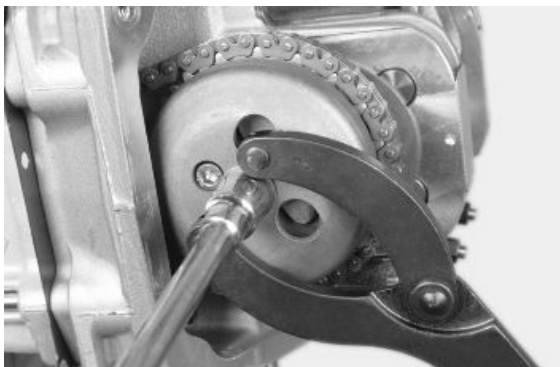

- Place the tightener cursor in the rest position, keeping the retain tab pressed.

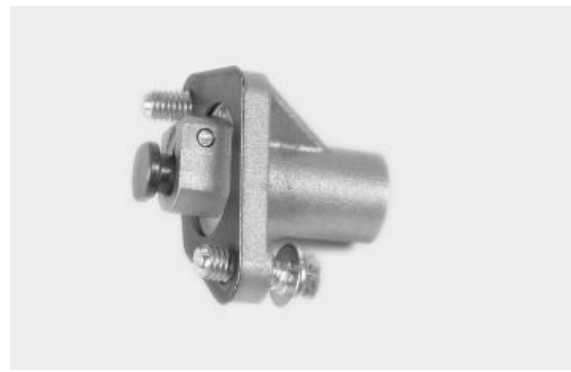

- Install a new tightener on the cylinder using a new gasket.
- Tighten the two fastening screws to the prescribed torque.

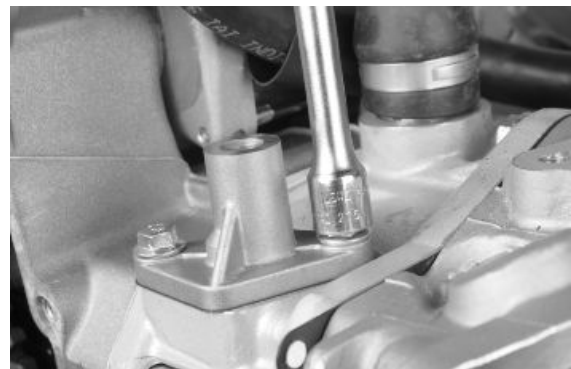

Locking torques (N*m)

Tightener fastening screws: 11 ÷ 13

- Insert the spring with the central screw and the washer.
- Tighten the central screw to the prescribed torque.



Locking torques (N*m)


Tightener screw: 5 - 6

- Place the engine with the valve clearance adjustment timing references aligned with the head.
- Check the clearance between valve and rocking lever using a thickness gauge.

PRESCRIBED CLEARANCE

Specification	Desc./Quantity
Inlet	0.15 mm (engine cold)
drainage	0.15 mm (engine cold)

-
- In case different values are found, adjust by loosening the lock nut and use a screwdriver for the set screw as shown in the figure.

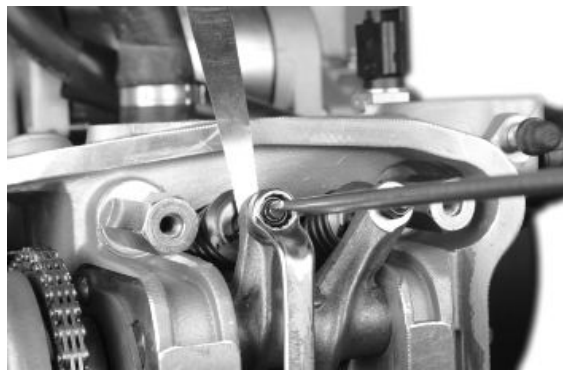

Refitting the timing chain

The ignition advance is determined electronically on the basis of parameters known by the control unit. For this reason it is not possible to declare the reference values based on the engine rpm.

The ignition timing value is detectable any time using the diagnostic tester.

It is possible to check whether the ignition advance determined by the system does in fact correspond with the value actually activated on the engine, by means of the stroboscopic light.

Specific tooling

020460Y Scooter diagnosis and tester

020330Y Stroboscopic light for timing control

Proceed as follows:

- Remove the outside transmission cover as described in the automatic transmission chapter.



- Remove the TDC reference inspection cap between flywheel and crankcase cover. See the flywheel cover chapter.



-
- By the driving pulley, turn the engine to find the alignment of the references to identify the TDC.



-
- Repeat for the reference between driving pulley and transmission housing.



-
- Replace the inspection cap on the flywheel side.
 - Connect the diagnostic tester.
 - Start the engine.
 - Select the menu on the "parameter" function.
 - Select the stroboscopic light command in the traditional four-stroke engine position (1 spark 2 revs).
 - Check that the real values of rpm and ignition advance match those measured using the diagnostic tester.



Specific tooling


020460Y Scooter diagnosis and tester

If the values do not match, check:


- distribution timing
 - revolution-timing sensor
 - Injection control unit
-

Refitting the rocker-arms cover

- Check that the gasket is in good working order.

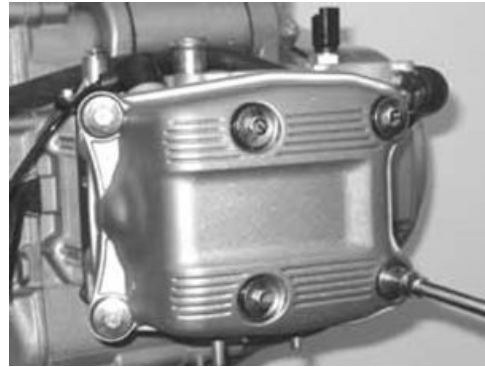

- Tighten the two screws indicated in the figure with "1" and "2" to limit the reciprocal sliding of the cover surface with the head surface.
- Tighten the remaining 4 screws in a crossed sequence (3, 4, 5, 6).

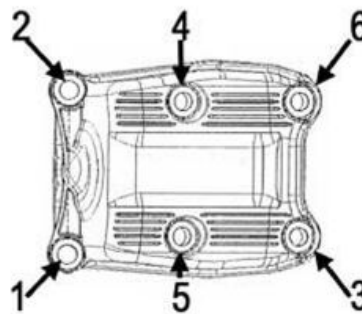

N.B.

CHECK THE PROPER POSITION OF THE GASKET.


Locking torques (N*m)

Tappet cover fixing screws: 7 - 9

- Install the transmission cover and the relevant net filter and the outside transmission cover as described in the "Automatic transmission" chapter.



- Install the cooling system sleeves using new bands, as described in the "Flywheel cover" chapter.

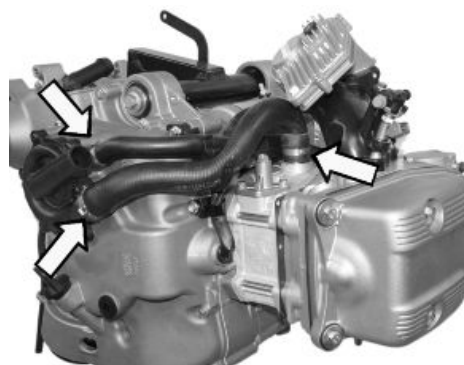


Refitting the intake manifold

- Install the intake manifold on the engine.
- Insert the 3 fastening screws, one of which with a support band for the cooling system sleeve, and tighten to the prescribed torque.

Locking torques (N*m)

Inlet manifold screws 11 ÷ 13

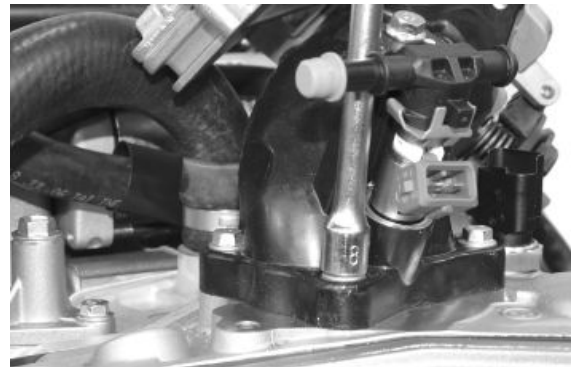

Crankcase - crankshaft

- Remove the outside and inside transmission cover and the complete driving pulley as described in "Automatic transmission".
- Remove the flywheel cover with the cooling system sleeves, as described in the "Flywheel cover" chapter.
- Remove the flywheel with the starting system following the instruction given in "Flywheel and Starting system".
- Remove the thermal unit (cylinder, head, piston) as described in the Thermal unit and timing system chapter.
- Before opening the crankcase, check the crankshaft axial clearance.

For this purpose, use a plate (e.g. the special tool) and a support with special tool comparator.

Specific tooling

020262Y Crankcase splitting strip

020335Y Magnetic support for dial gauge

Characteristic

Standard clearance:

0.10 - 0.50 mm

Admissible increase limit after use:

0.60 mm



- Upper clearances are an indication of wear on the surfaces of the crankshaft casing support.
- To carry out an accurate measurement, measure the clearance in both directions between crankcase and crankshaft.

- Remove the outside and inside transmission cover and the complete driving pulley as described in "Automatic transmission".

- Remove the flywheel cover with the cooling system sleeves, as described in the "Flywheel cover" chapter.

- Remove the flywheel with the starting system following the instruction given in "Flywheel and Starting system".
 - Remove the thermal unit (cylinder, head, piston) as described in the Thermal unit and timing system chapter.
 - Before opening the crankcase, check the crankshaft axial clearance.
- For this purpose, use a plate (e.g. the special tool) and a support with special tool comparator.

Specific tooling

020262Y Crankcase splitting strip

020335Y Magnetic support for dial gauge


Characteristic

Standard clearance:

0.10 - 0.50 mm

Admissible increase limit after use:

0.60 mm

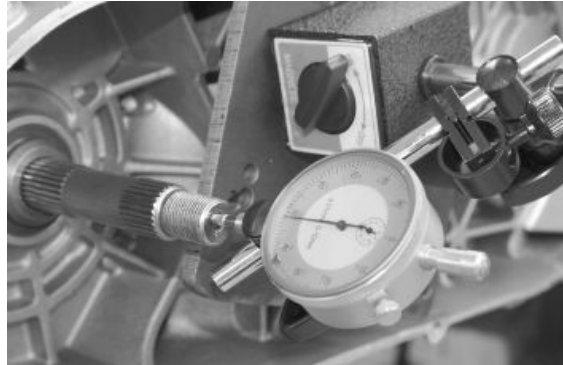

- Upper clearances are an indication of wear on the surfaces of the crankshaft casing support.
- To carry out an accurate measurement, measure the clearance in both directions between crankcase and crankshaft.

Splitting the crankcase halves

- Remove the engine support retain screw on the flywheel side half-crankcase.



- Remove the 14 crankcase coupling screws.

N.B.


THE FASTENING SCREWS ARE OF 3 DIFFERENT LENGTHS. NOTE THEIR CORRECT POSITION.



- Split the crankcases while keeping the crankshaft inserted on the flywheel side half-crankcase.
- Remove the coupling gasket.

N.B.

THE BUSHING SUPPORT CAN BE LEFT IN THE FLYWHEEL SIDE HALF-CRANKCASE.

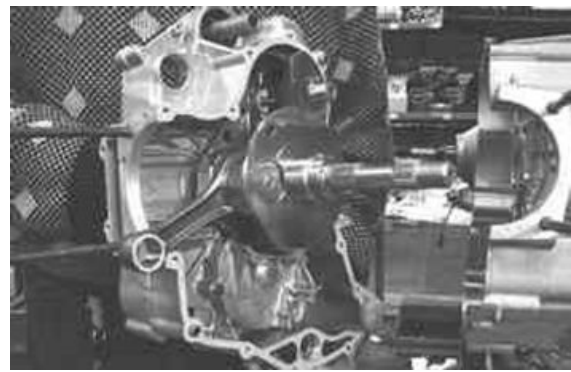

Removing the crankshaft

- Before removing the crankshaft, check the timing with the countershaft. To carry out this check, turn the crankshaft to align the two holes obtained on the crankshaft with the hole on the countershaft control gear.

This is an optimal position also to remove the crankshaft.



- Remove the crankshaft with the shim adjustment washer on the flywheel side.

CAUTION

WHILE OPENING THE CRANKCASE AND REMOVING THE CRANKSHAFT, CHECK THAT THE SHAFT THREADED ENDS DO NOT INTERFERE WITH THE MAIN BEARINGS. FAILURE TO OBSERVE THIS PRECAUTION CAN DAMAGE THE MAIN BEARING.



Removing the oil pump and countershaft control gear.

- To remove the control gear, loosen the 4 fastening screws.

Remove the gear only if actually required.

CAUTION

THE SCREWS HAVE A COUNTERSUNK HEAD AND THEIR THREADING IS LOCKED BY LOC-TITE. BE CAREFUL NOT TO DAMAGE THE CONTROL HEXAGON. TO OBTAIN BETTER RESULTS IT IS PREFERABLE TO USE AN INSIDE HEXAGON SOCKET WRENCH.



Removing the countershaft

- Place the special tool as shown in the figure.

Specific tooling

020479Y Countershaft lock wrench



- Remove the fastening nut with relevant washer.



- Remove the special tool and extract the countershaft with the control gear.



Replacing the countershaft bearings

- Check that the bearings are free from irregular noise or clearance. If it is, replace it.

Flywheel-side half-crankcase

- Remove the inside seeger ring.



- Upturn the half-crankcase.
- Remove the bearing from the flywheel side half-crankcase using the special tool and a mallet.

Specific tooling

020376Y Adaptor handle

020358Y 37x40-mm adaptor

020439Y 17 mm guide



- Remove the bearing from the transmission side half-crankcase using the special tool.

Specific tooling

001467Y008 Pliers to extract 17 mm ø bearings

001467Y007 Driver for OD 54 mm bearing



- Before installing a new bearing, heat the flywheel side half-crankcase using the special tool.
- Place the half-crankcase on a wooden base.

Specific tooling

020151Y Air heater



- Insert a new bearing on the special tool after greasing the guide seat.
- Install the new bearing on the half-crankcase using the special tool.

N.B.

IF A BEARING WITH PLASTIC CAGE IS USED, KEEP THE BALLS VISIBLE FROM THE CRANKCASE INTERNAL SIDE.

Specific tooling

020376Y Adaptor handle

020359Y 42x47-mm adaptor

020439Y 17 mm guide



-
- Fit the seeger ring.



-
- Before installing the new bearing on the transmission side crankcase, heat the seat using the special tool.

Specific tooling

020151Y Air heater



-
- Insert a new bearing on the special tool after greasing the guide seat.
 - Install the new bearing on the engine crankcase using the special tool.

N.B.

IF A BEARING WITH PLASTIC CAGE IS USED, KEEP THE BALLS VISIBLE FROM THE CRANKCASE INTERNAL SIDE.



Specific tooling

020376Y Adaptor handle

020359Y 42x47-mm adaptor

020439Y 17 mm guide

Inspecting the crankshaft components

- Check the axial clearance on the connecting rod.

Characteristic

Standard clearance:

0.20 ÷ 0.40 mm




- Check the connecting rod diametrical clearance.

Characteristic

Standard clearance:

0.046 ÷ 0.076 mm

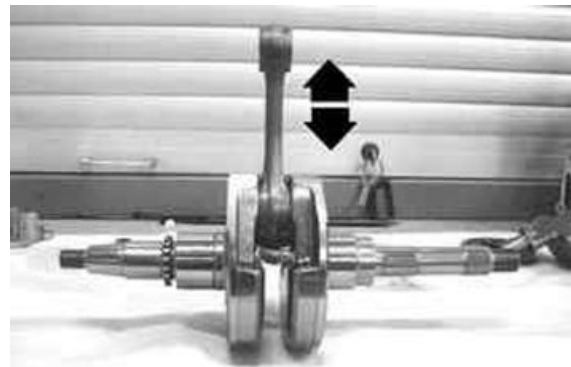

- Check the surfaces that limit the axial free-play are not scored and measure the width of the crankshaft between these surfaces, as shown in the diagram.


N.B.

BE CAREFUL NOT TO LET THE MEASUREMENT BE AFFECTED BY THE UNIONS WITH THE CRANKSHAFT ENDS.

Characteristic

Standard dimensions:

63.6 - 63.45 mm

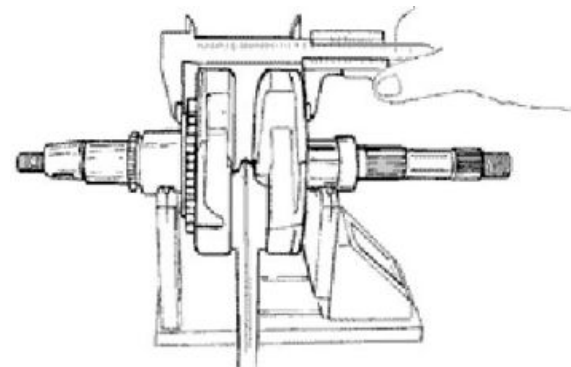

CAUTION

THE CRANKSHAFT CAN BE REUSED WHEN THE WIDTH FALLS WITHIN THE STANDARD VALUES AND THE SURFACES ARE FREE FROM SCRATCHES.

Shimming

- Check the overall height of the crankshaft - shoulders - gear assembly.

Characteristic

Standard thickness:

71.804 - 72.000 mm

- Check that shim adjustment is free from scratches.

N.B.


IN CASE OF NEW UTILISATION, MAINTAIN THE FIRST FITTING POSITION.

Specific tooling

020074Y Support base for checking crankshaft alignment

- If the crankshaft - crankcase axial clearance is higher than the standard value and the crankshaft exhibits no irregularity, the problem is caused by wear or by a wrong machining on the engine crankcase.

- Check the diameters of both the bearings of the crankshaft in accordance with the axes and surfaces shown in the figure. Half-shafts are classified into two categories, Cat. 1 and Cat. 2.

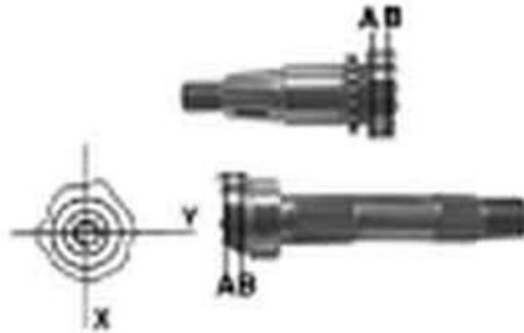

STANDARD DIAMETER

Specification	Desc./Quantity
Cat. 1	40.010 ÷ 40.016
Cat. 2	40.016 ÷ 40.022

Inspecting the crankshaft alignment


- Install the crankshaft on the support and measure the displacement at the 4 points shown in the figure.

Specific tooling

020074Y Support base for checking crankshaft alignment

MAX ADMISSIBLE DISPLACEMENT:

Specification	Desc./Quantity
A	= 0.15 mm
B	= 0.01 mm
C	= 0.01 mm
D	= 0.10 mm

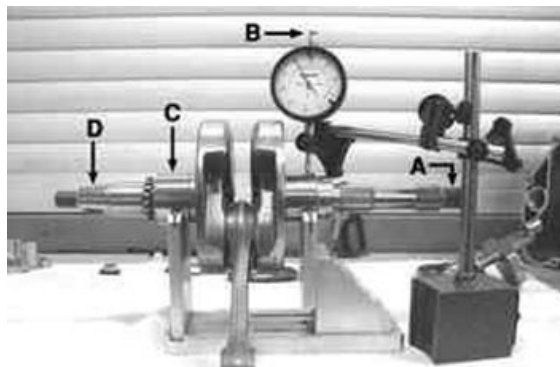

- Check that the driving shaft cone, the tab seat, the oil seal capacity, the toothed gear and the threaded tangs are in good working order.

- In case of failures, replace the crankshaft.

N.B.

MAIN BEARINGS CANNOT BE MODIFIED.


The connecting rod cannot be replaced. To check the connecting rod small end diameter, see chapter "Thermal unit and timing system".

- When cleaning the crankshaft, be careful to prevent any impurity from entering into the shaft lubrication hole.

N.B.

IN CASE OF REPLACEMENT OF A CRANKSHAFT CONSISTING OF TWO HALF-SHAFTS OF DIFFERENT CATEGORY, REPLACE THE TWO HALF-CRANKCASES AS WELL, COUPLING THE TWO COMPONENTS (SHAFT AND CRANKCASE) WITH THE SAME CATEGORY.

- To check the gearing of the crankshaft, see section "Thermal unit and timing system".

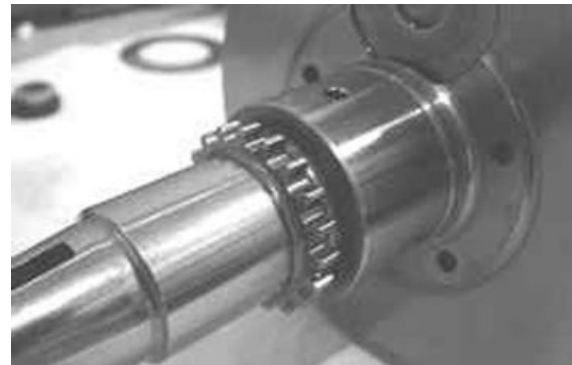

See also

[Cylinder assy. and timing system](#)

Inspecting the crankcase halves


- Before proceeding to check the crankcase halves, thoroughly clean the all surfaces and oil ducts.

- For the transmission-side half-crankcase, special attention should be given to the bushings, to the cooling jet on the transmission side (see figure) and to the lubrication duct.



N.B.


THE JET IS FED THROUGH THE MAIN BUSHINGS. PROPER OPERATION OF THIS COMPONENT IMPROVES PISTON CROWN COOLING. CLOGGING HAS EFFECTS THAT ARE DIFFICULT TO DETECT (PISTON TEMPERATURE INCREASE). FAILURE OR LEAKS CAN CAUSE A CONSIDERABLE DROP IN THE LUBRICATION PRESSURE FOR MAIN BUSHINGS AND CONNECTING ROD .

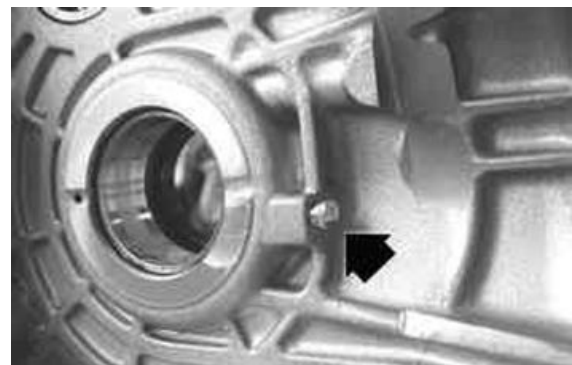

- For the flywheel side half-crankcase, special attention should be given to the lubrication channels for the main bearings and to the compartment and the channels for the oil pump, as well as to the duct for the by-pass located on the flywheel cover.

N.B.

AS ALREADY DESCRIBED IN THE "LUBRICATION" CHAPTER, IT IS ESPECIALLY IMPORTANT THAT THE BY-PASS HOUSING ON THE FLYWHEEL COVER IS FREE FROM WEAR THAT MAY IMPAIR THE PROPER SEALING OF THE LUBRICATION PRESSURE ADJUSTMENT PISTON. THE HEAD LUBRICATION CHANNEL IS PROVIDED WITH A SHUTTER JET; THIS GIVES A "LOW PRESSURE" HEAD LUBRICATION. THIS CHOICE WAS MADE TO REDUCE THE OIL TEMPERATURE IN THE SUMP.

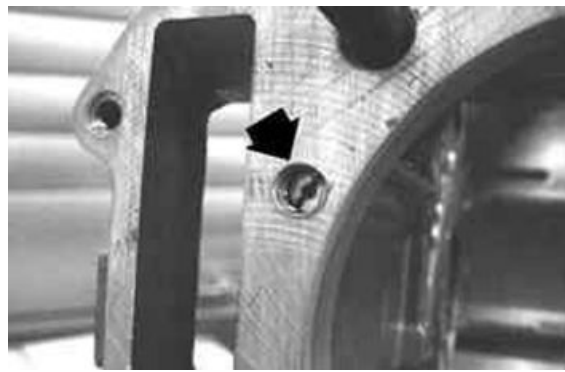

The jet clogging impairs the head lubrication and the timing mechanisms.


A jet failure causes a decrease of the main bearing and connecting rod lubrication pressure.

- Check that the surfaces are free from dents or deformations, with special attention to the crankcase coupling and the crankcase-cylinder surfaces.
- Any defects in the crankcase gasket or matching surfaces (see Flywheel cover coupling) can cause pressurised oil leaks, thereby affecting the connecting rod and main bearing lubrication pressure.
- Check the main bearing seats that limit axial clearance in the crankshaft show no signs of wear. For the dimensional check, refer to the instructions relating to the axial clearance and dimensions check on the crankshaft

Inspecting the crankshaft plain bearings

- To obtain a good bushing lubrication it is necessary to have both an optimal lubricating pressure (4 bar) and a good oil flow rate; the bushings must be correctly positioned so as not to obstruct the oil supply channels.

- The main bushings are comprised of two half-bearings, one with holes and channels for lubrication whereas the other is solid.

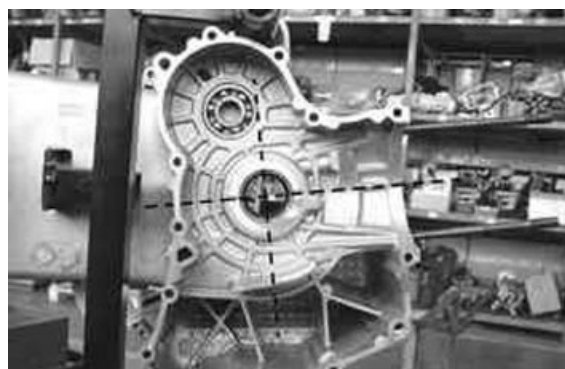

- The solid half-bearing is intended to stand the thrusts caused by combustion, and for this reason it is arranged opposite the cylinder.


- To prevent obstructions in the oil feeding channels, the matching surface of the two half-bearings must be perfectly perpendicular to the cylinder axis, as shown in the figure.

- The oil feeding channel section is also affected by the bushings driving depth compared with the crankshaft axial clearance of the limiting surface.

N.B.

TO KEEP THE BUSHINGS ON THE CRANKCASE IN SUCH POSITION, DRIVING IS FORCED ON CAST-IRON RINGS INSERTED IN THE CASTING OF BOTH CRANKCASE HALVES.

- Check the inside diameter of the main bushings in the three directions indicated in the diagram.
- Repeat the measurements for the other bushing half. see diagram.

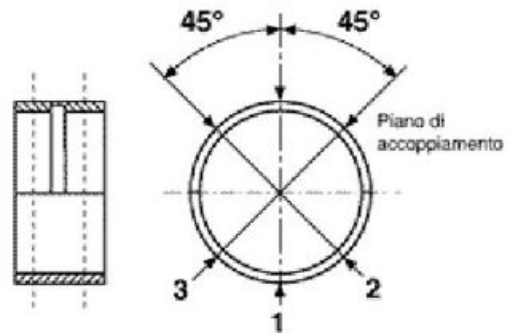

N.B.

DO NOT TAKE THE MEASUREMENT ON THE TWO HALF-SHELL COUPLING SURFACE SINCE THE ENDS ARE RELIEVED TO ALLOW BENDING DURING THE DRIVING OPERATION.

Before assembling, check that the clearance between the engine crankcase bushing and the crankshaft is within the predetermined limits.

Characteristic

Crankshaft-bushing maximum clearance admitted:

0.08 mm

- The standard bushing diameter after driving is variable on the basis of a coupling selection.
- The crankcase bushing seats are classified into 3 categories while the crankshaft ones, into 2 categories.
- Bushings are subdivided into 4 categories according to their thickness (see the table).

CHECK THE BENCH BUSH

Name	Description	Dimensions	Initials	Quantity
Type A - Red		1.971 ÷ 1.974		
Type B - Blue		1.974 ÷ 1.977		
Type C - Yellow		1.977 ÷ 1.980		
Type D - Green		1.980 ÷ 1.983		

Coupling chart

The following kinds of bushings indicated in the table must be used according to the kind of coupling between the crankshaft and the crankcase.

		X	
		1	2
Y	1	B	A
	2	C	B
	3	D	C

KEY

X = Crankshaft category

Y = Crankcase half-shell category

A = Red

B = Blue

C = Yellow

D = Green

In case of breakdown, crankcases are together with bushings and are classified according to the centre to centre distance of the countershaft. Find below the possible couplings.

- Complete FC1 type crankcase equipped with bushings for housing a category 1 crankshaft and a countershaft with centre to centre distance A.
- Complete FC2 type crankcase equipped with bushings for housing a category 2 crankshaft and a countershaft with centre to centre distance A.
- Complete FC3 type crankcase equipped with bushings for housing a category 1 crankshaft and a countershaft with centre to centre distance B.
- Complete FC4 type crankcase equipped with bushings for housing a category 2 crankshaft and a countershaft with centre to centre distance B.

N.B.

THE CRANKSHAFT CATEGORY IS STAMPED ON THE COUNTERWEIGHT SHOULDER.

A spare crankcase cannot be combined with a driving shaft with mixed categories. Spare shafts have half-shafts of the same category.

N.B.

TO REPLACE THE HALF-SHAFTS, REMOVE THE COUNTERSHAFT BEARINGS AS DESCRIBED ABOVE. REMOVE THE COMPLETE DRIVEN PULLEY AND THE ANTI-FLAPPING ROLLER FROM

THE TRANSMISSION SIDE HALF-CRANKCASE, AS DESCRIBED IN CHAPTER "AUTOMATIC TRANSMISSION", AND THE HUB COVER WITH THE RELEVANT GEARS AND BEARINGS AS DESCRIBED IN CHAPTER "FINAL REDUCTION".


Countershaft

- Using a micrometer, measure the 2 bearings of the countershaft as shown in the figure.

Characteristic

Standard diameter:

17 - 0.01 - 0.02 mm

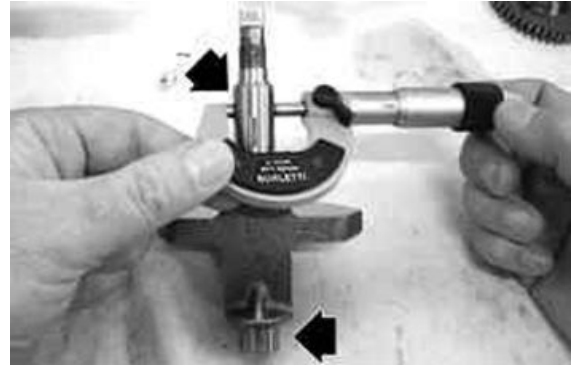

- Check that the water pump drive is not worn.

Refitting the crankshaft

- Check that the oil pump and countershaft control gear are free from deformations or dents. Replace, if required.

N.B.

IF YOU HAVE TO REPLACE THE OIL PUMP AND COUNTERSHAFT CONTROL GEAR IT IS NECESSARY TO REPLACE THE COUNTERSHAFT GEAR AS WELL.

- Before installing the gear on the crankshaft, carefully clean the two matching surfaces removing any residues of LOCTITE from the holes using a brush.



Blow with compressed air and degrease the mounting holes on both surfaces to make the new LOCTITE grip.

Apply the recommended product to the holes again.

Recommended products

Loctite 243 Medium strength threadlock

Loctite 243 medium-strength threadlock

- Repeat the same procedure for the 4 fastening screws.
- Insert the control gear on the crankshaft with the hole countersink visible.
- Tighten the 4 fastening screws to the prescribed torque.

N.B.

TO AVOID DAMAGING THE SCREW CONTROL HEXAGON, IT IS PREFERABLE TO USE AN INSIDE HEXAGON SOCKET WRENCH.

Locking torques (N*m)

Gear mounting on crankshaft screws 10 -12

- Lubricate the main bearing on the flywheel side half-crankcase.
- Lubricate the shim adjustment washer.
- Insert the shim adjustment washer on the crankshaft in its original position.
- Insert the special timing tool in the hole on the countershaft.



Specific tooling

020471Y Pin for countershaft timing

- Insert the crankshaft on the pin and into the bushing.
- Before inserting thoroughly, make the oil pump gear align with the control gear.
- Insert thoroughly and remove the special tool.



N.B.

WHEN INSERTING THE SHAFT ON THE HALF-CRANKCASE, BE CAREFUL NOT TO DAMAGE THE MAIN BEARING WITH THE THREADED TANG OF THE CRANKSHAFT AND WITH THE TIMING CONTROL TOOTHED PINION.

- Install the oil pump closing plate.
- Tighten the 2 flanged fastening screws to the prescribed torque.



Locking torques (N*m)

Bulkhead screws for oil pump housing cover 8 - 10

Refitting the crankcase halves

- Remove the oil guard from the transmission side half-crankcase using a screwdriver.



- Install a new oil guard after lubricating it, using the special tool, arranging it at a 0.5 mm recess from the crankcase plane.

CAUTION

A WRONG POSITIONING OF THE OIL GUARD AFFECTS THE LUBRICATION OIL CIRCULATION.

Specific tooling

020360Y Adaptor 52 x 55 mm

020376Y Adaptor handle



- Insert the gasket on the flywheel side half-crankcase.



- Lubricate the main bearing on the transmission side half-crankcase.

- Couple the 2 half-crankcases being careful not to damage the bushing on the transmission side half-crankcase with the threaded tang of the crankshaft.

- Insert the engine support retain screw on the flywheel side half-crankcase without tightening.



- Insert the 14 fastening screws by arranging the single shorter screw "A" and the single longer screw "B" as shown in the figure.
- Tighten the screws thoroughly and tighten to the prescribed torque.
- Check that the crankshaft rotates freely.

N.B.

REMOVE ANY EXCESS FROM THE CRANKCASE COUPLING GASKET ON THE CYLINDER PLANE, TO ENSURE BETTER SEALING PERFORMANCE.

Locking torques (N*m)

Engine-crankcase coupling screws 11 ÷ 13

- Install the thermal unit (cylinder, head, piston) as described in section "Thermal unit and timing system".
- Install the flywheel with start-up control as described in the "Flywheel and start-up" chapter.
- Install the flywheel cover with the cooling system sleeves, as described in the "Flywheel cover chapter".
- Install the complete driving pulley, the transmission cover and the relevant mesh filter and the outside transmission cover as described in the section "Automatic transmission".

See also

[Cylinder assy. and timing system](#)

[Flywheel cover](#)

Lubrication

TECHNICAL SPECIFICATIONS

SUMP CAPACITY

Specification	Desc./Quantity
Overhaul	1.7 l
Oil and filter replacement	1.5 l

RECOMMENDED ENGINE OIL

Product	Description	Specifications
AGIP CITY HI TEC 4T	Engine oil	SAE 5W-40, API SL, ACEA A3, JASO MA Synthetic oil

OIL PUMP

Specification	Desc./Quantity
Type	Trochoidal
Rotor thickness	8 mm
Assembly clearances	Lobe ends 0.05-0.008 mm
Outside rotor radial clearance	0.05- 0.12 mm
Rotor axial clearance	0.025 - 0.065 mm

BY-PASS

Specification	Desc./Quantity
Type	with piston

Specification	Desc./Quantity
Plunger diameter	13.9 - 0.039 -0.057 mm
Spring free length	62.5 mm
Calibration pressure	4 bar

PRE-FILTER

Specification	Desc./Quantity
Type	mesh, plastic

OIL FILTER

Specification	Desc./Quantity
Type	Paper with pressure relief and anti-drain back by-pass valves

OIL MINIMUM PRESSURE INDICATOR LIGHT SWITCH

Specification	Desc./Quantity
Calibration	0.3 - 0.6 bar

HEAD LUBRICATION CONTROL JET

Specification	Desc./Quantity
Diameter	1 ± 0.05 mm *

* *Tightening torque* 5÷7 N·m


PISTON COOLING NOZZLE

Specification	Desc./Quantity
Diameter	0.8 ± 0.05 mm

CRANKCASE VENTILATION CHECK

Specification	Desc./Quantity
Device	metal reed valve and decantation chamber

Conceptual diagrams

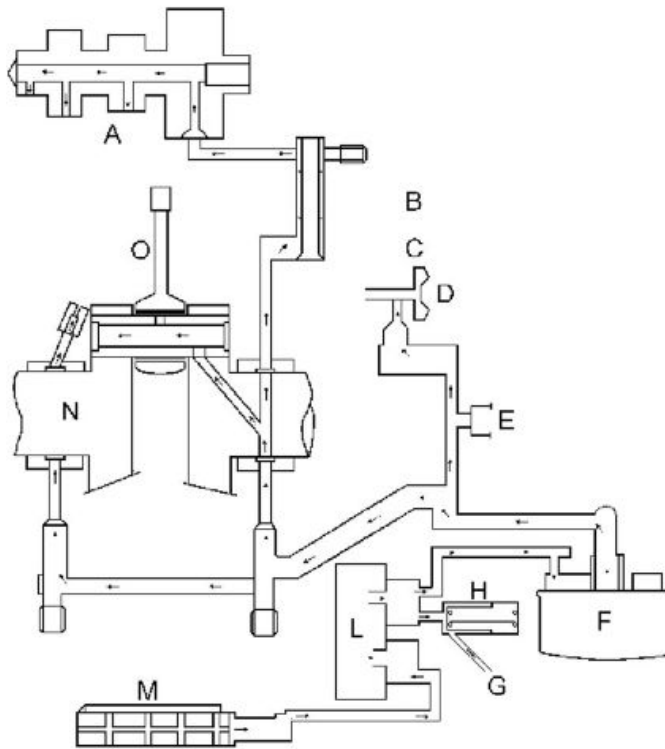

PRINCIPLE DIAGRAM

Specification	Desc./Quantity
A	Camshaft
B	Cylinder-head plane
C	Cylinder-crankcase plane
D	Water pump impeller
E	Minimum oil pressure sensor
F	Oil filter cartridge
G	To the oil sump
H	By-pass valve
L	Oil pump
M	Mesh pre-filter
N	Crankshaft
O	Connecting rod

General characteristics

Lubrication circuit is split into two sections:

- **High pressure**
- **Low pressure**

The high pressure section includes all components located on the engine crankcase, while the low pressure section only refers to the thermal unit.

The trochoidal pump is installed into the sump and is controlled through a couple of gears.

To guarantee the integrity of the pump, a pre-filter is installed.

The pre-filter is of the screw-in type and the plug serves at the same time as an engine oil drain plug.

The pump is controlled by means of a piston by-pass calibrated to 4 bar. This is located before the cartridge filter and both are installed on the flywheel cover, so that the seal of the filter is subject to the pressure of the circuit.

The by-pass located before the cartridge filter improves the operating conditions for the filter proper, particularly with cold oil.

The filter is equipped with an anti-cavitation valve and a pressure relief valve; the latter intervenes when the filtering element causes a pressure drop exceeding 1 ± 0.2 bar.

These conditions naturally occur only with cold oil and at high engine revs or if the filter is clogged.

The filtered oil is used to lubricate the shaft of the water pump and once at the engine crankcase, to lubricate the crankcase bearings, the connecting rod head and the piston cooling nozzle located on the bearings on the transmission side.

The crankcase bearing on the transmission side is provided with an oil seal and the respective drain line.

The supply line for the timing system comes from the flywheel-side bearing; the supply to the head is controlled by the respective spray jets in the engine crankcase.

The components of the timing system function with low-pressure oil.

The camshaft bearings are marked directly on the aluminium of the head; the axial clearance of the camshaft is partly compensated by the oil supplied to the small end bearings.

The camshaft supplies the lubricant to the rocking levers via the bores provided; these are installed in a position to ensure that the lubrication is maintained even after the scooter has stopped. This is achieved when the camshaft reaches its most usual and likely position when the engine is switched off.

The oil used to lubricate the head returns to the sump via the ducts in the chain casing and hence also provides lubrication for the chain.

In order to avoid the gas collecting in the bottom of the tank carrying oil out of the housing, a non-return valve and a decantation chamber are used. The one-way valve is of metal sheet design; the decantation chamber is provided with a drainage bore. If they fail oil can get into the pipe supplying air to the engine. Excessive oil vapours may result in a blockage in the ducts of the throttle body.

In order to signal low oil pressure in the circuit, a pressure switch is used, located immediately after the oil filter outlet.

The lubrication circuit does not include the countershaft; its lubrication comes from the oil transported by the gearing or by the centrifugal effect of the crankshaft.

The same applies to the piston or the pin, but in this case the cooling nozzle is particularly important.

Diagnosis guide

1 - Minimum oil pressure warning light on with hot engine.

AHEAD - go to 2

2 - Remove the minimum pressure switch electric connector.

Check that the warning light turns off.

YES - go to 3 NO go to 11

3 Check the actual oil pressure.

AHEAD - go to 4

4 - Remove the switch and fit the special tool with the relevant gasket.

Specific tooling

020193Y Oil pressure gauge

020434Y Oil pressure control fitting

- Remove the dipstick with the oil filling cap and insert a cap fitted with the temperature probe supplied with the special tool. Insert the probe to feel contact with the crankcase bottom and pull back a few millimetres.

Specific tooling

020331Y Digital multimeter

AHEAD - go to 5



5 - Measure the pressure with cold and idling engine.

STANDARD VALUES

Specification	Desc./Quantity
20°C Temperature	
1400 rpm	

approx. 4.5 bar

N.B.

RPM CAN BE MEASURED BOTH BY THE EXHAUST GAS ANALYSER AND BY THE DIAGNOSTIC TESTER

Specific tooling

020460Y Scooter diagnosis and tester

YES go to 6 NO go to 12

6 - Let the engine warm up and repeat the check with hot oil.

STANDARD VALUES

Specification	Desc./Quantity
80°C Temperature	
1400 rpm	

approx. 1.5 bar

YES go to 7 NO go to 8

7 - Replace the oil minimum pressure switch.

8 - If pressure lower than 1.3 - 1.5 bar is measured.

AHEAD go to 9

9 - Replace the oil filter and repeat the pressure check with oil at 80°C.

YES go to 10 NO go to 13

10 - The failure was fixed.

It is recommended to respect the suggested number of kilometres covered.

11 - Check and restore the electrical system.

12 - If pressure lower than 4 bar is measured.

AHEAD go to 9

13 - Remove the flywheel cover and check the by-pass and the cover sealing gasket efficiency towards the case internal side, as described in the "Flywheel cover" chapter.

YES go to 14 NO go to 15

14 - Check whether there is an irregular clearance on the crankshaft:

- axial clearance (see the "Crankcase and crankshaft" chapter)
- radial clearance, especially in the direction of the cylinder axis
- clearance according to the direction of rotation with the connecting rod in quadrature

YES go to 16 NO go to 17

15 - Replace the faulty components ("Flywheel cover" chapter).

16 - Overhaul the engine ("Crankcase and crankshaft" chapter).

17 - Open the engine crankcase and remove the oil pump, as described in the "Crankcase and crankshaft" chapter.

- Check the oil pump as described in the following pages.

- Check that the cooling nozzle and the timing feeding jet are properly installed.

- Visually inspect the crankshaft couplings and their size ("Crankcase and crankshaft" chapter).

N.B.

POTENTIAL IRREGULARITIES IN COUPLINGS AND THE TIMING SYSTEM COMPONENTS CANNOT BE DETECTED WHEN INSPECTING THE LUBRICATION PRESSURE. THEY MAY BECOME EVIDENT BY AN INCREASE IN NOISE.

N.B.

IN CASE OF IRREGULAR PRESSURE ON THE CRANKCASE, CARRY OUT A VISUAL AND DIMENSIONAL INSPECTION OF THE TIMING SYSTEM COMPONENTS (SEE "THERMAL GROUP AND TIMING SYSTEM" CHAPTER).

Oil pressure check

1 - In case of oil leaks from the oil filter or from the flywheel cover coupling gasket, check the lubrication pressure.

AHEAD go to 2

2 - Install the special tool.

Specific tooling

020193Y Oil pressure gauge

020434Y Oil pressure control fitting

AHEAD go to 3

3 - Check the system pressure with cold engine and medium - high speed.

Standard pressure < 6 bar

YES go to 4 NO go to 5

4 - Replace the damaged components.

5 - Check the working order of the adjustment by-pass (see "flywheel cover" chapter) and restore proper sliding.

N.B.

STANDARD PRESSURES ARE OBTAINED USING OIL WITH THE PRESCRIBED VISCOSITY. A HIGHER VISCOSITY CAUSES AN INCREASE OF THE SYSTEM PRESSURE.

1 - If oil consumption is above 250 g/1000 km on a run-in engine, proceed as follows.

AHEAD go to 2

2 - Check the presence of oil at the scavenge duct on the filter box.

YES go to 3 NO go to 4

3 - Check the one-way reed valve and the decantation chamber drainage hole.

YES go to 5 NO go to 4

4 - Check the thermal group seals (piston rings, valve guides and oil guards), see "Thermal group and Timing system" chapter.

5 - Restore the valve or the drainage hole efficiency.

Oil pump

Removal

- Remove the closing plate of the oil pump housing by loosening the 2 retaining screws with their washers.




-
- Remove the oil pump complete with the gearing by loosening the 2 retaining screws through the eyes machined in the gearing proper.



-
- Remove the gasket.



-
- Remove the two screws and the oil pump cover.

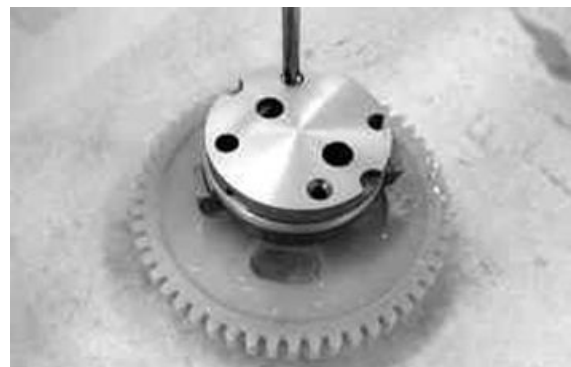

-
- Remove the inside rotor retaining snap ring turning it to move the opening at the shaft face.



- Remove and wash the rotors thoroughly with petrol and compressed air.
- Extract the shaft with its gear and check that it is in good working order and free from wear.



- Reassemble the rotors in the pump body, keeping the two reference marks visible
- Insert the shaft with the gear and install the lock ring; then, turn it with the opening opposed to the shaft face.
- Check any irregular clearance between shaft and pump body.



- Using a thickness gauge, check the distance between the rotors in the position shown in the figure.

Characteristic

Admissible limit clearance:

0.012 mm



- Check the distance between outside rotor and pump body; see figure.

Characteristic

Admissible limit clearance:

0.25 mm



- Check the rotor axial clearance using a rectified bar as reference plane, as shown in the figure.



Characteristic

Limit values admitted:

0.1 mm

Refitting

- Make sure the gasket is in the correct position.

N.B.

THE TOOTH OF THE GASKET MUST BE IN ITS SEAT.



- Lubricate the internal rotors.
- Check there are no signs of scoring or wear on the oil pump cover.
- If non-conforming values or signs of wear are found, replace the pump.
- Fit the pump cover in the position that permits the crankcase fixing screws to be aligned.
- Tighten the two fastening screws to the prescribed torque.



Locking torques (N*m)

Oil pump cover screws 0.7 ÷ 0.9

- Insert the oil pump with gear
- Insert the 2 retaining screws through the slots on the gear and tighten to the prescribed torque.

N.B.

THE ASSEMBLY POSITION OF THE PUMP IS FIXED BY INSTALLATION OF THE SCREWS.

Failure to observe the tightening torque may alter the coupling clearance of the rotors with the pump body.

Locking torques (N*m)**Screws fixing oil pump to the crankcase 5 - 6**

- Insert the countershaft with gearing into the fly-wheel-side half-crankcase.
- Install the special tool in the position shown in the figure.

Specific tooling**020479Y Countershaft lock wrench**

- Keep the countershaft in position and insert the washer with the nut.
- Tighten the nut to the prescribed torque, using the recommended product.
- Remove the special tool.

Recommended products**Loctite 243 Medium strength threadlock**

Loctite 243 medium-strength threadlock

**Locking torques (N*m)****Countershaft fixing nut 25 - 29**

INDEX OF TOPICS

INJECTION

INJEC

**KEY:**

1. Instrument panel
2. Diagnosis connector
3. Throttle body and injection electronic control unit (MIU)
4. Battery
5. Electrical fan remote control
6. Coolant temperature sensor
7. Fuel injector
8. Lambda probe
9. Revolution sensor
10. HV coil
11. Fuel pump

MIU injection system

This vehicle is fitted with an integrated injection and ignition system.

Injection is indirect in the manifold through an electro-injector.

The injection and ignition are timed on the four-stroke cycle by means of a tone wheel keyed on to the crankshaft (24-2 teeth) and pick-up sensor.

Combustion and ignition are managed on the basis of engine revs and throttle valve opening. Further corrections are made according to the following parameters:

- Coolant temperature.
- Intake air temperature
- Lambda probe strength

The system implements an idle feeding correction with cold engine through a Stepper motor on a by-pass circuit of the throttle valve. The control unit manages the Stepper motor and the injector opening time, thereby ensuring the idle steadiness and the proper combustion.

In all conditions of use, mixture preparation is managed by modifying the injector opening time.

The fuel supply pressure is kept constant based on the ambient pressure.

The **fuel supply circuit** consists of:

- Fuel pump
- Fuel filter
- Injector
- Pressure regulator

The pump, the filter and the regulator are placed inside the fuel tank on a single support.

The injector is connected by a pipe with fast-release fittings. The pressure regulator is located at the beginning of the circuit.

The fuel pump is controlled by the MIU control unit ; this ensures the scooter safety

The **ignition circuit** consists of:

- HV coil
- HV cable
- Shielded cap
- MIU control unit
- Spark plug

The MIU control unit manages ignition with the best advance ensuring four-stroke timing (ignition only in the compression phase) at the same time.

The MIU injection-ignition system controls engine functions by means of a pre-set program.


Should any input signals fail, an acceptable working order of the engine is ensured to allow the user to reach a service station.

Of course, this cannot happen when the rev counter signal is missing, or when the failure involves the control circuits:

- Fuel pump
- HV coil

- Injector

The control unit is provided with a self-diagnosis system connected to an indicator light in the instrument panel.

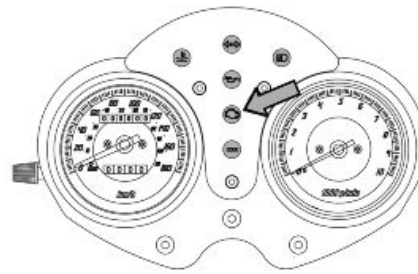

Failures are detected and restored by the diagnostic tester.

In any case, when the fault is no longer present, the data storage is automatically cleared after 16 cycles of use (cold start, running at regular engine temperature, stop).

The diagnostic tester is also required to adjust the idle mixture.




Specific tooling

020460Y Scooter diagnosis and tester

The MIU injection-ignition system carries out checks on the rpm counter and the electric fan for radiator cooling.

The MIU control unit has a decoder for the anti-theft immobiliser.

The MIU control unit is connected to a diagnostic LED on the instrument panel, that also carries out the deterrent flashing functions.

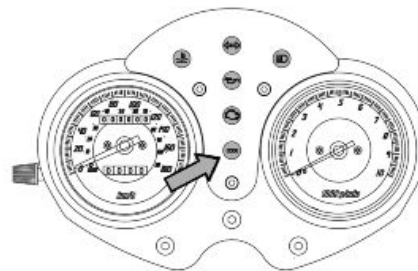

The MIU control unit power supply is furthermore controlled by the emergency switch; that is to provide further safety for the scooter.

Precautions

1. Before fixing any part of the injection system, check to see if there are any registered faults. Do not disconnect the battery before checking for faults.
2. The feeding system is pressurised at 300 kPa (3 BAR). Before disconnecting the fast-release fitting of the power supply pipe, check that there are no naked flames. Do not smoke. Act with caution to prevent spraying in the eyes.
3. When fixing electric components, operate with battery connected only when actually required.
4. When functional checks are performed, check that the battery voltage is more than 12V.

5. Before trying to start up, check to make sure there is at least two litres of fuel in the tank. Failure to respect this norm will damage the fuel pump.
6. If the scooter is expected to remain unused for a long time, refill the tank up to a little over half the level. This will ensure the pump will be covered by fuel.
7. When washing the vehicle, be careful with the electric components and wiring.
8. When an ignition fault is detected, start the checks from the battery and the injection system connections.
9. Before disconnecting the MIU control unit connector, perform the following steps in the order shown:
 - Set the switch to «OFF»
 - Disconnect the batteryFailure to respect this norm may damage the control unit.
10. Do not invert the polarity when fitting the battery.
11. To avoid damage, only disconnect and reconnect the MIU system connectors if required. Before reconnecting, check that the connectors are dry.
12. When carrying out electric inspections, do not force the tester probes into the connectors. Do not take measurements not specifically foreseen by the manual.
13. At the end of every check performed with the diagnostic tester, protect the system connector with its cap. Failure to do this may damage the MIU control unit.
14. Before reconnecting the quick couplers of the power supply system, check that the terminals are perfectly clean.

Troubleshooting hints

1 A fault in the MIU system could most likely be due to the connections and not the components.

Before troubleshooting the MIU system, carry out the following checks:

A: Electrical power supply

- a. Battery voltage
- b. Blown fuse
- c. Remote controls
- d. Connectors

B: Chassis earthing

C: Fuel supply

- a. Broken fuel pump
- b. Dirty fuel filter

D: Ignition system

- a. Faulty spark plug
- b. Broken coil
- c. Broken shielded cap

E: Intake circuit

- a. Dirty air filter

- b. Dirty by-pass circuit
- c. Faulty Stepper motor

F: Other

- a. Incorrect distribution timing
- b. Wrong idle mixture
- c. Incorrect reset of the throttle valve position sensor

2 MIU system faults may be caused by loose connectors. Make sure that all connections have been correctly made.

Check the connections as follows:

A check that the terminals are not bent.


B check that the connectors have been properly connected.

C see whether the malfunction can be fixed by shaking the connector slightly.

3 Check the entire system before replacing the MIU. If the fault is fixed by replacing the MIU control unit, install the original control unit again and check if the fault occurs again.

4 When troubleshooting use a multimeter with an internal resistance over 10 Ohm /V. Instruments that are not suitable might damage the MIU control unit. Instruments must be used with definitions over 0.1V and 0.5 W , the precision must be greater than 2%.

Terminals setup

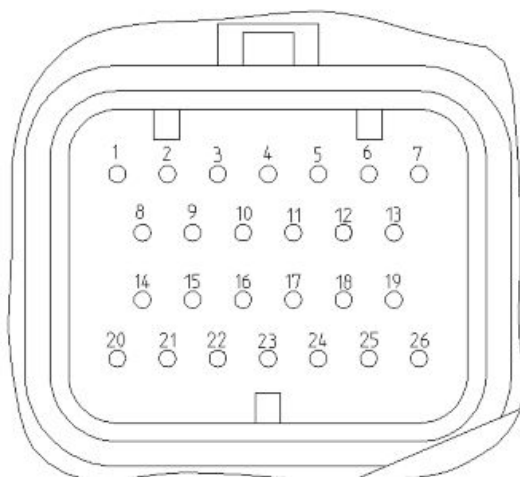


TERMINAL LAYOUT

	Specification	Desc./Quantity
1	Injection warning light	
2	Rpm indicator signal	
3	-	
4	- Lambda probe	
5	+ battery under permanent power supply	
6	+ Battery	
7	Immobilizer aerial	
8	Electric fan starter	

	Specification	Desc./Quantity
9	Water temperature sensor	
10	-	
11	+ Lambda probe	
12	Engine stop switch	
13	R.P.M. sensor (+)	
14	Fuel injector	
15	R.P.M. sensor (-)	
16	Diagnostics socket output	
17	Immobilizer LED	
18	Side stand	
19	Engine temperature warning light	
20	Injection load remote control	
21	-	
22	HV coil	
23	-	
24	Start up enabling	
25	-	
26	Ground lead	

EMS circuit diagram

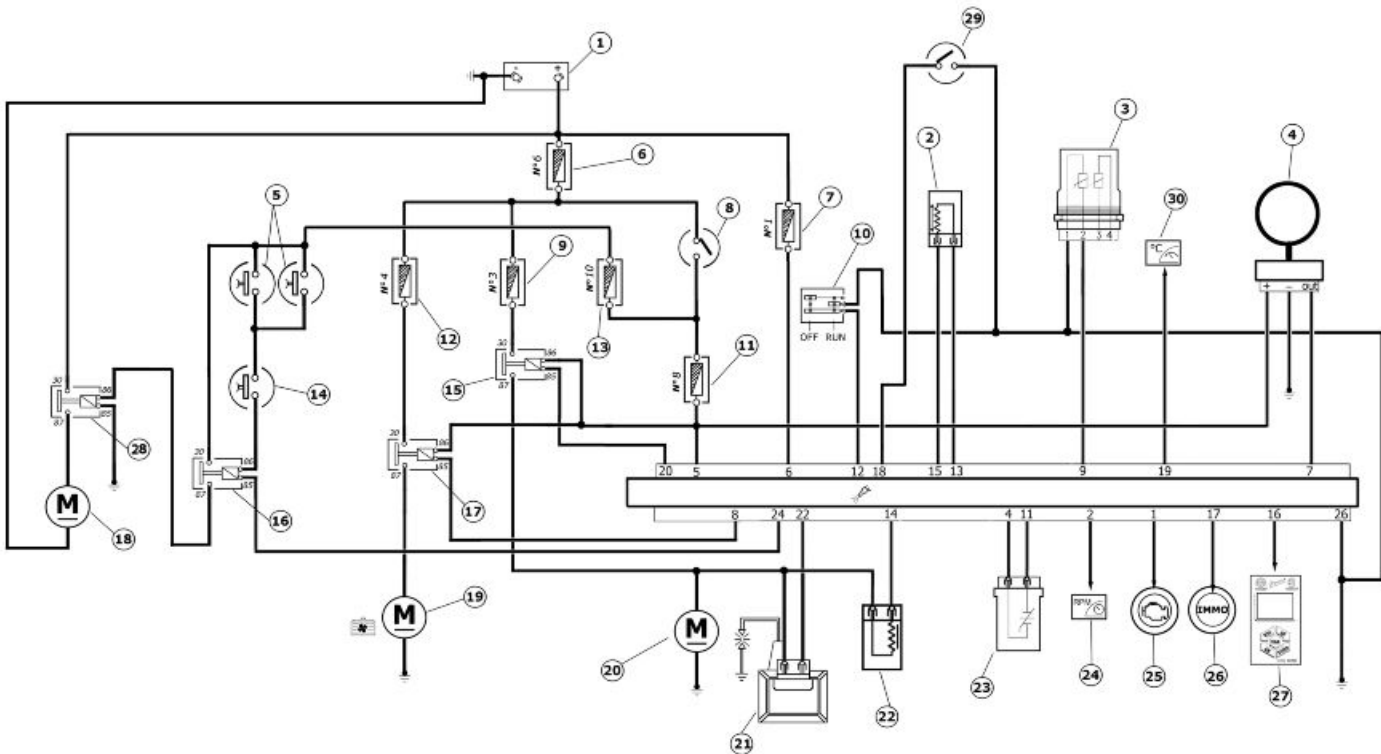

SYSTEM SCHEMATIC

	Specification	Desc./Quantity
1	Battery	12V - 12 Ah
2	Engine rpm sensor	
3	Water temperature sensor	
4	Immobilizer aerial	

	Specification	Desc./Quantity
5	Stop button	
6	Fuse	30 A
7	Fuse	7.5 A
8	Key switch contacts	
9	Fuse	10 A
10	Engine stop switch	
11	Fuse	7.5 A
12	Fuse	15A
13	Fuse	7.5 A
14	Starter button	
15	Injection load remote control	
16	Start-up remote control relay	
17	Electric fan starter	
18	Starter motor	
19	Electric fan	
20	Fuel pump	
21	HV coil	
22	Fuel injector	
23	Lambda sensor	
24	Rpm indicator	
25	"WARNING" light	
26	Immobilizer LED	
27	Diagnostics socket connector	
28	Starter remote control	
29	Stand switch	
30	Engine temperature warning light	

Troubleshooting procedure

Engine does not start

ENGINE DOES NOT START IF ONLY PULLED

Possible Cause	Operation
Immobiliser enabling signal	System not encoded System not efficient, repair according to the indications of the self-diagnosis
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor
Fuel supply	Fuel in the tank Fuel pump activation Fuel pressure (low) Injector capacity (low)
Power to the spark plug	Shielded spark-plug cap HV coil (secondary insulation)
Parameter reliability	Coolant temperature Distribution timing - injection ignition Intake air temperature
End of compression pressure	End of compression pressure

Starting difficulties

ENGINE START-UP PROBLEMS

Possible Cause	Operation
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor Air temperature Coolant temperature
Start-up speed	Starter motor and remote control Battery Ground connections
End of compression pressure Power to the spark plug	End of compression pressure Spark plug Shielded cap HV coil Revolution timing sensor Ignition advance
Fuel supply	Fuel pressure (low) Injector capacity (low) Injector sealing (poor)
Correctness of the parameters	Coolant temperature Stepper throttle valve position intake air temperature (steps and actual opening) Cleaning of the auxiliary air pipe and throttle valve; air filter efficiency

Engine stops at idle

ENGINE DOES NOT HOLD IDLING/ IDLING IS UNSTABLE/ IDLING TOO LOW

Possible Cause	Operation
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor Air temperature Coolant temperature
Ignition efficiency	Spark plug Ignition timing
Correctness of the parameters	Throttle valve position sensor Stepper Coolant temperature sensor Intake air temperature sensor
Intake system cleaning	Air filter Diffuser and throttle valve Additional air pipe and Stepper
Intake system sealing (infiltrations)	Intake manifold - head Throttle body - manifold Intake sleeve Filter box
Fuel feed (low pressure)	Fuel pump Pressure regulator

Possible Cause**Operation**

Fuel filter
Injector capacity

Engine does not rev down**ENGINE DOES NOT RETURN TO THE IDLING SPEED/IDLING SPEED TOO HIGH****Possible Cause****Operation**

Presence of faults detected by the self diagnosis

Pump relay
HV coil
Injector
revolution timing sensor
Air temperature
Coolant temperature

Ignition efficiency

Ignition timing

Correctness of the parameters

Throttle valve position sensor
Stepper
Coolant temperature sensor
Intake air temperature sensor

Intake system sealing (infiltrations)

Intake manifold - head
Throttle body - manifold
Intake sleeve
Filter box

Fuel feed (low pressure)

Fuel pump
Pressure regulator
Fuel filter
Injector capacity

Exhaust backfires in deceleration**EXHAUST BACKFIRES WHEN DECELERATING****Possible Cause****Operation**

Presence of faults detected by the self diagnosis

Pump relay
HV coil
Injector
revolution timing sensor
Air temperature
Coolant temperature
Lambda sensor

Correctness of the parameters

Throttle valve position sensor
Stepper
Coolant temperature sensor
Intake air temperature sensor

Intake system sealing (infiltrations)

Intake manifold - head
Throttle body - manifold
Intake sleeve
Filter box

Fuel feed (low pressure)

Fuel pump
Pressure regulator
Fuel filter
Injector capacity

Exhaust system sealing (infiltrations)

Manifold - head
Manifold - muffler

Possible Cause	Operation
	Muffler welding

Engine revs irregularly

ENGINE IRREGULAR PROGRESS WITH VALVE SLIGHTLY OPEN

Possible Cause	Operation
Intake system cleaning	Air filter Diffuser and throttle valve Additional air pipe and Stepper
Intake system seal	Intake sleeve Filter box
Ignition system	Spark plug wear check
Parameter reliability	Throttle valve position signal Coolant temperature indicator Intake air temperature indicator Ignition advance
TPS reset successful	TPS reset successful
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor Air temperature Coolant temperature Lambda sensor

Poor performance at full throttle

POOR ENGINE PERFORMANCE AT FULL POWER/ ENGINE IRREGULAR PROGRESS ON PICKUP

Possible Cause	Operation
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor Air temperature Coolant temperature Lambda sensor
Spark plug power supply	Spark plug Shielded cap HV cable HV coil
Intake system	Air filter Filter box (sealing) Intake sleeve (sealing)
Parameter reliability	Throttle valve position signal Coolant temperature indicator Intake air temperature indicator Ignition advance
Fuel supply	Fuel level in the tank Fuel pressure Fuel filter Injector capacity

Engine knocking

PRESENCE OF KNOCKING (HEAD KNOCKING)


Possible Cause	Operation
Presence of faults detected by the self diagnosis	Pump relay HV coil Injector revolution timing sensor Air temperature Coolant temperature Lambda sensor
Ignition efficiency	Spark plug
Parameter reliability	Throttle valve position signal Coolant temperature indicator Intake air temperature indicator Ignition advance
Intake system seal	Intake sleeve Filter box
TPS reset successful	TPS reset successful
Fuel supply	Fuel pressure Fuel filter Injector capacity Fuel quality
Selection of the cylinder base gasket thickness	Selection of the cylinder base gasket thickness

Fuel supply system

The fuel supply circuit includes the electric pump, the filter, the pressure regulator, the electro-injector and the fuel delivery pipes.


The electrical pump is located in the tank from which the fuel is pumped and sent to the injector through the filter.

The pressure is controlled by the pressure regulator situated in the pump assembly in the tank.

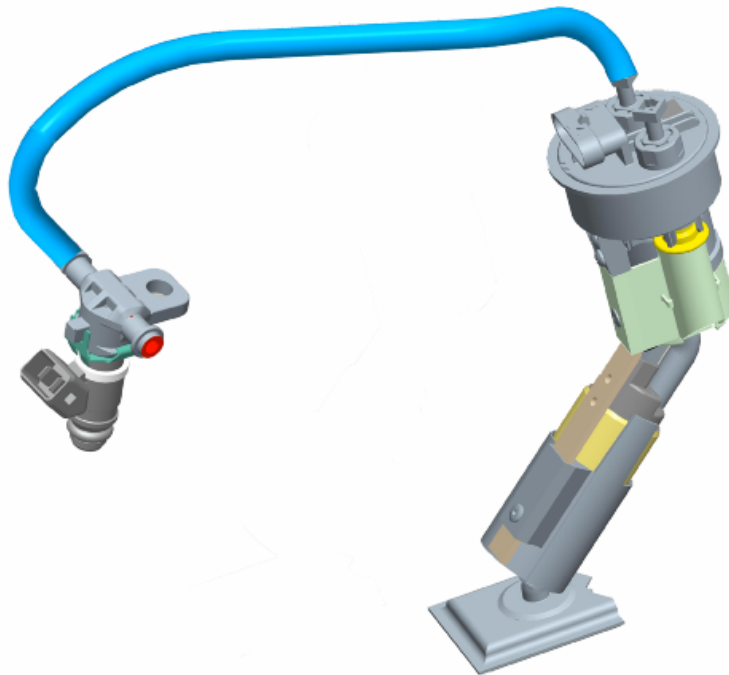


Removing the butterfly valve


Remove the fuel piping clamping screw indicated in the figure.

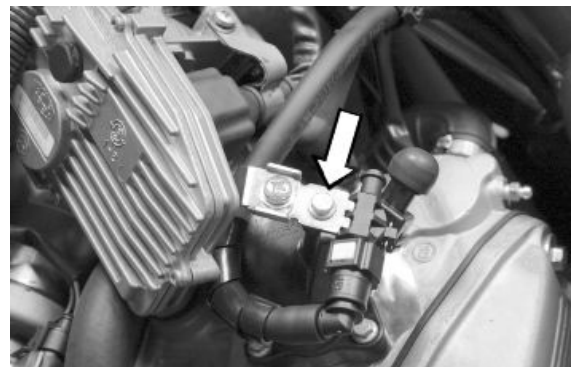


Remove the fast-release fitting from the injector support

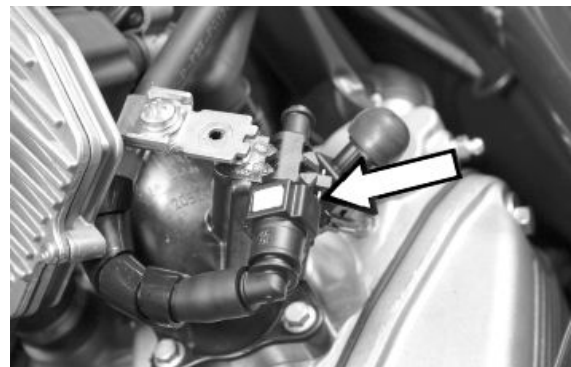


Remove the injector connector

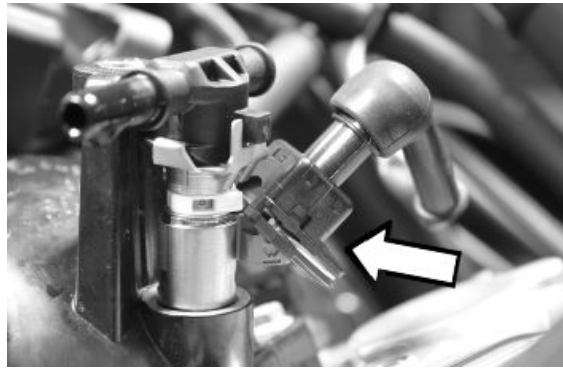


Remove the three screws fixing the manifold to the cylinder head and the clip fixing the throttle body to the manifold.

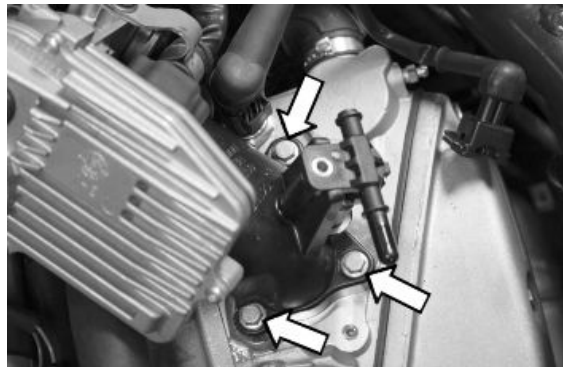


Remove the MIU connector

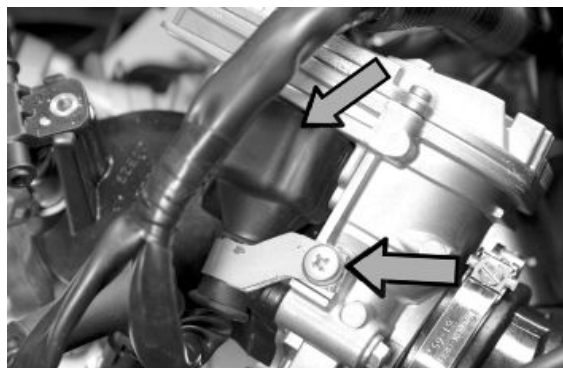

Remove the gas command fitting as indicated in the photograph

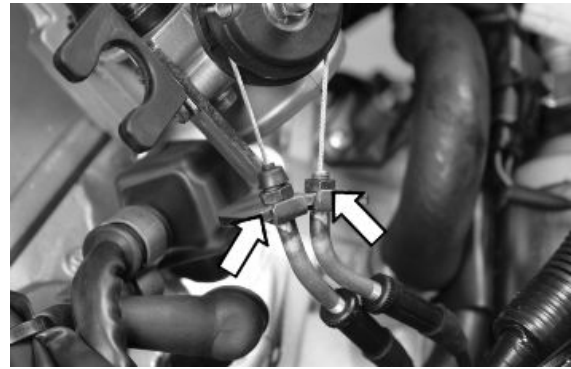

Pump supply circuit

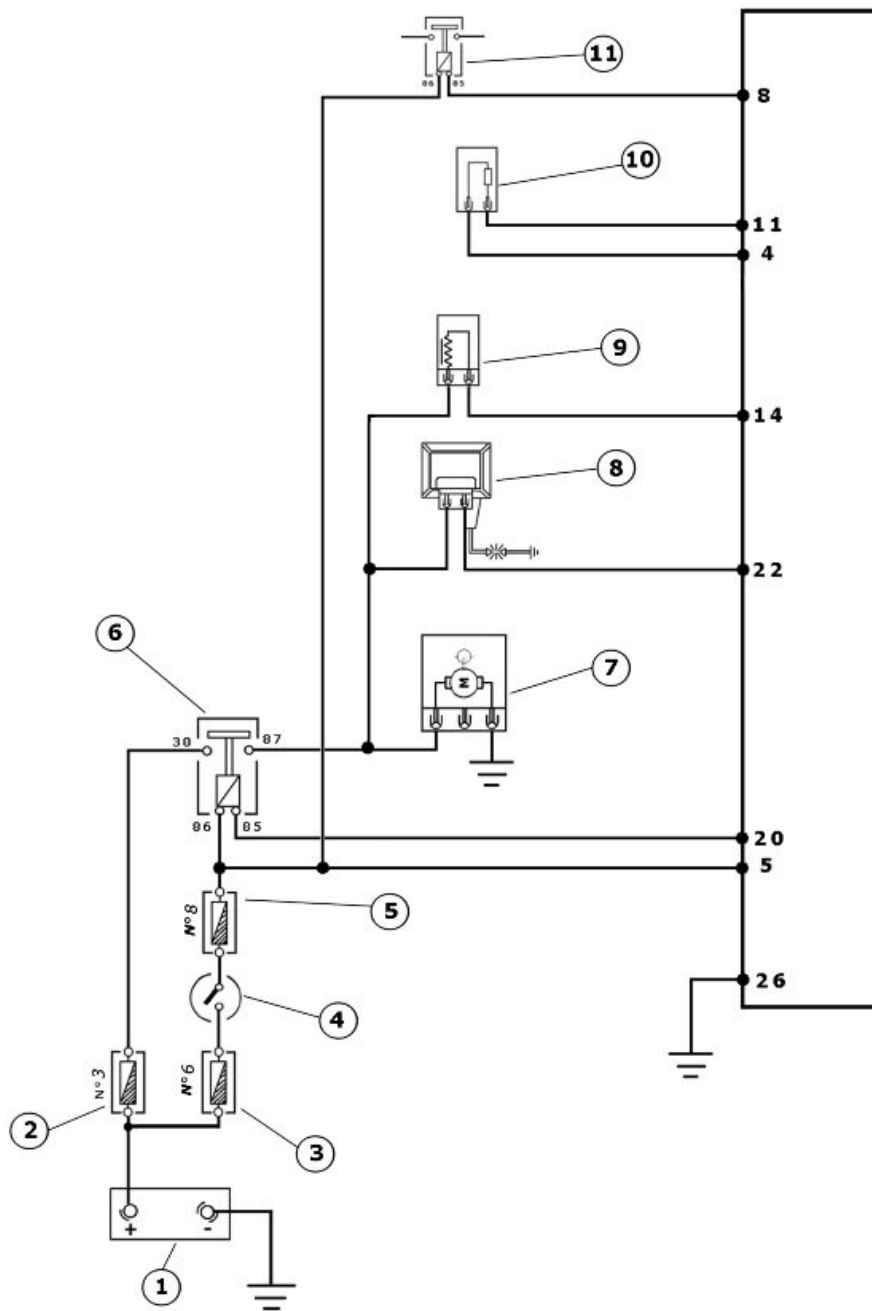

INJECTION LOADS

	Specification	Desc./Quantity
1	Battery	12V - 12 Ah
2	Fuse	10 A
3	Fuse	30 A
4	Key switch contacts	
5	Fuse	7.5 A
6	Injection load remote control	
7	Fuel pump	
8	HV coil	

	Specification	Desc./Quantity
9	Fuel injector	
10	Lambda sensor	
11	Electric fan starter	

When switched to "ON", the fuel pump starts to rotate for two seconds and then stops. When the engine starts up, in the presence of phase rpm signal the pump is continuously supplied.

ELECTRICAL DATA

- Pump winding resistance ~ 0.8 Ohm
- Input current during regular functioning ~ 2.8 A

Check that the injection load 10A fuse No. 3 is in good conditions.

Check that the 7.5A fuse No. 8 for live control unit power supply is in good conditions.



Check the efficiency of the injection load remote control: Check the resistance of the energising coil between pins 86 and 85: 40 to 80 Ohm
 Apply a voltage of 12V to pins 86 and 85; make sure that there is continuity between pins 30 and 87 of the remote control.






Check the power supply line of the injection load remote control energising coil: after switching to "ON", make sure there is battery voltage, for two seconds, between the Red-White cable and Black-Violet cable of the remote control base. If there is not, check the continuity of the Red-White cable between the fuse box and the remote control base and of the Black-Purple cable between the pin 20 of the control unit and the remote control base.



N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).



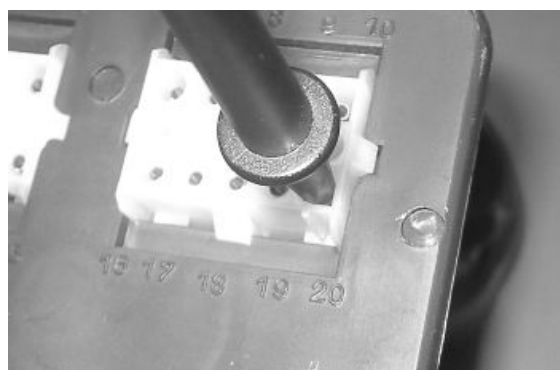


Check the presence of fixed voltage between the grey/black cable of the remote control base and earth. If there is none check the continuity of the grey/black cable between the fuse box (No. 3 10 A) and the remote control base.

N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).



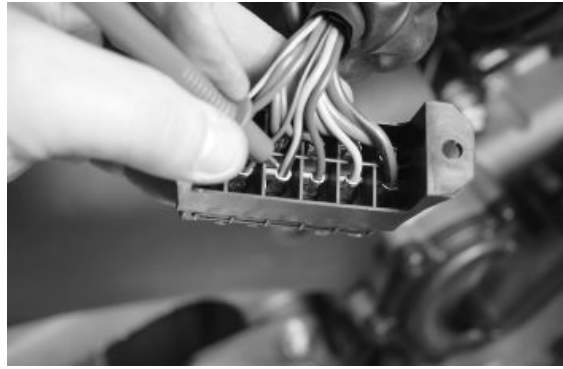


pump circuit 6

Check, on switching to "ON", that there is battery voltage, for about two seconds, to the Black-Green cable of the pump connector and earth with pump connector disconnected. Otherwise check the continuity of the Black-Grey cable between the pump connector and the base of the remote control.



Check the efficiency of the earth line of the fuel pump by measuring the continuity between the pump connector black cable, system side, and the earth.

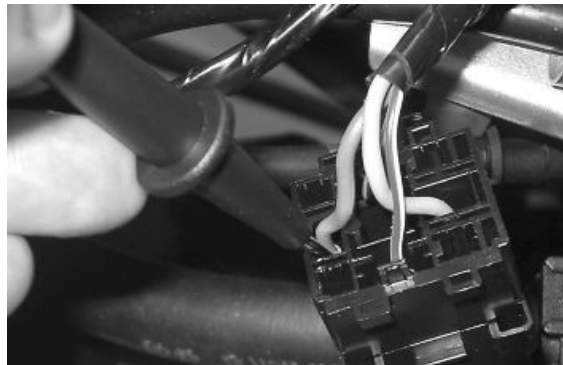

If, when switching to "ON", the pump continues to turn after two seconds of activation, check, with the control unit disconnected and the injection load remote control disconnected, that the Black-Purple cable (pin 20 on the interface wiring) is insulated from the earth.

Specific tooling

020331Y Digital multimeter

Circuit leak test

Install the specific tool for checking the fuel pressure, with the pipe fitted with the gauge.

Check during regular operation by placing the appropriate tool between the pump and the injector. With battery voltage > 12 V check that the fuel pressure is 3 BAR and that the input current is ~2.8 A



With the battery voltage > 12 V, check the pump flow rate by disconnecting from the injector the pipe equipped with the pressure gauge of the appropriate tool. Get a graded burette with a flow rate of approximately 1 L. Rotate the pump using the active diagnoses of the palm top computer. Using a pair of long flat needle-nose pliers, choke the fuel pipe making the pressure stabilise at approx. $2.9 \div 3$ BAR. Be careful not to further choke pipes if pressure remains evenly at 3 BAR while flow rate decreases. Check that within 15 seconds the pump has a flow rate of approx. 300 cm^3 .

Specific tooling


020480Y Petrol pressure check set

Fuel filter check


Disconnect the terminals from the electric pump




Remove the screw shown in the photograph

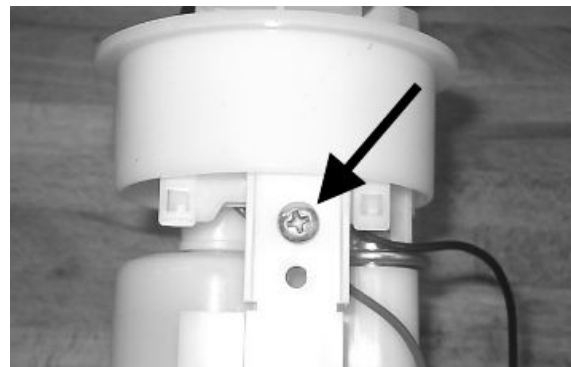

Remove the clip fixing the piping to the filter shown in the photograph

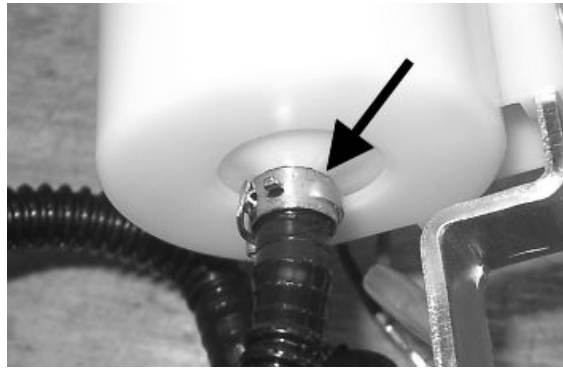


Separate the lower part of the pump support as shown in the photograph.

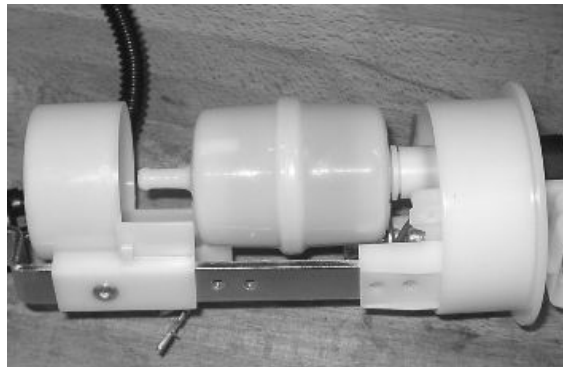

Remove the filter from the pump support



Inspecting the injector circuit

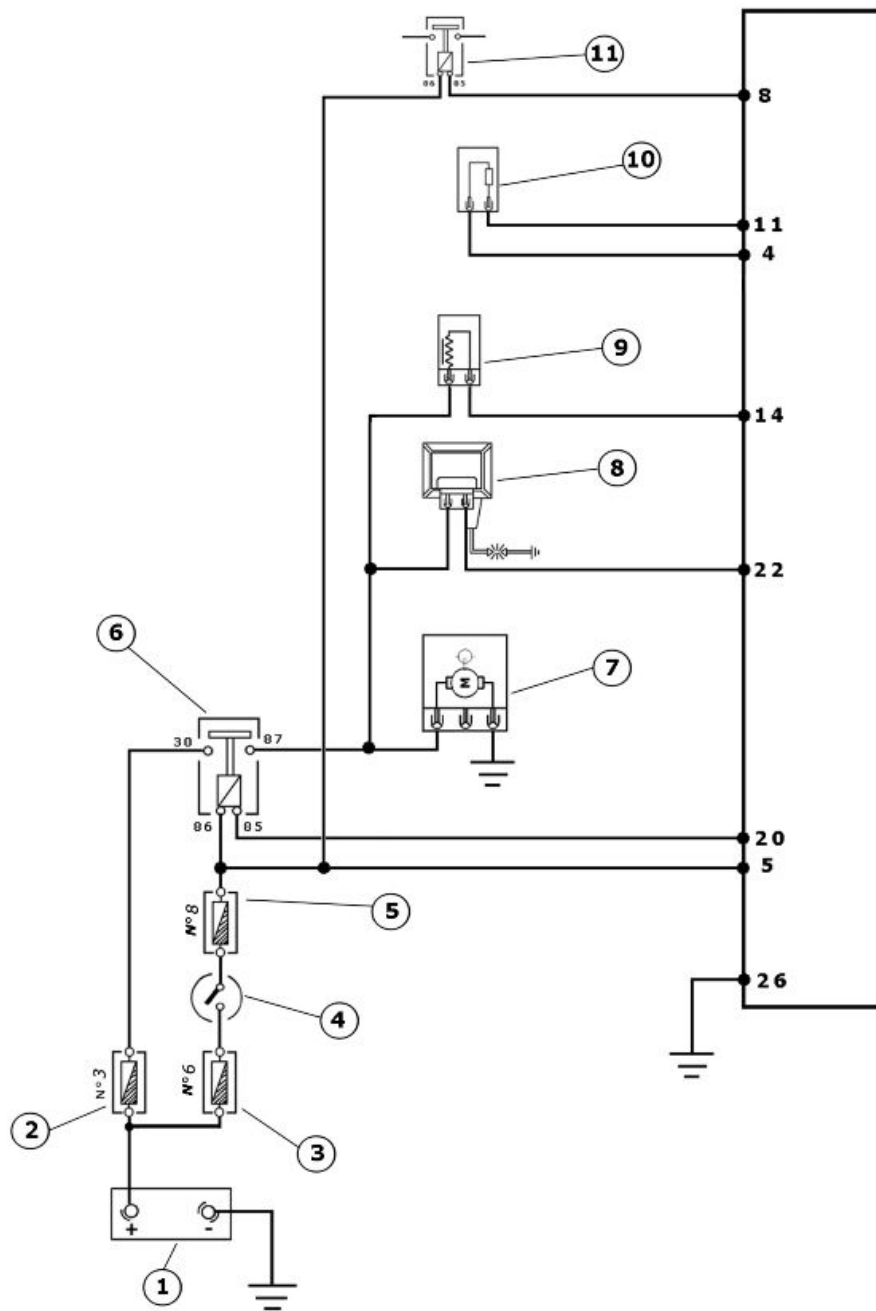

INJECTION LOADS

	Specification	Desc./Quantity
1	Battery	12V - 12 Ah
2	Fuse	10 A
3	Fuse	30 A
4	Key switch contacts	
5	Fuse	7.5 A
6	Injection load remote control	
7	Fuel pump	
8	HV coil	

	Specification	Desc./Quantity
9	Fuel injector	
10	Lambda sensor	
11	Electric fan starter	

When switched to "ON", the fuel pump starts to rotate for two seconds and then stops. When the engine starts up, in the presence of phase rpm signal the pump is continuously supplied.

ELECTRICAL DATA

- Pump winding resistance ~ 0.8 Ohm
- Input current during regular functioning ~ 2.8 A

Check that the injection load 10A fuse No. 3 is in good conditions.

Check that the 7.5A fuse No. 8 for live control unit power supply is in good conditions.



Check the efficiency of the injection load remote control: Check the resistance of the energising coil between pins 86 and 85: 40 to 80 Ohm

Apply a voltage of 12V to pins 86 and 85; make sure that there is continuity between pins 30 and 87 of the remote control.






Check the power supply line of the injection load remote control energising coil: after switching to "ON", make sure there is battery voltage, for two seconds, between the Red-White cable and Black-Violet cable of the remote control base. If there is not, check the continuity of the Red-White cable between the fuse box and the remote control base and of the Black-Purple cable between the pin 20 of the control unit and the remote control base.



N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).



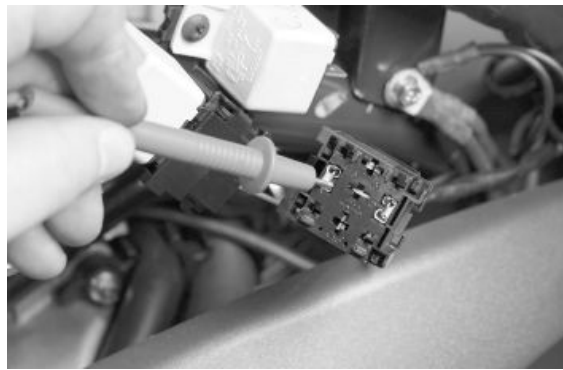


Check the presence of fixed voltage between the grey/black cable of the remote control base and earth. If there is none check the continuity of the grey/black cable between the fuse box (No. 3 10 A) and the remote control base.

N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).



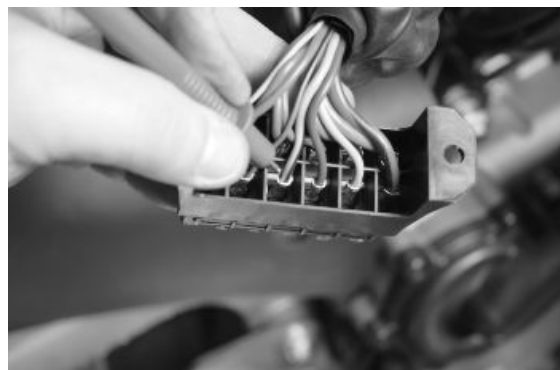


With the control unit and the injector disconnected, check the continuity of the Red-Yellow cable between pin 14 of the interface wiring and the injector connector



Switch to "ON" and check if there is voltage, with injector disconnected and control unit connected, between the Black-Green cable of the injector connector and the ground lead




With injector disconnected and the injector load remote control disconnected, check the continuity of the Black-Green cable between the injector connector and remote control base.

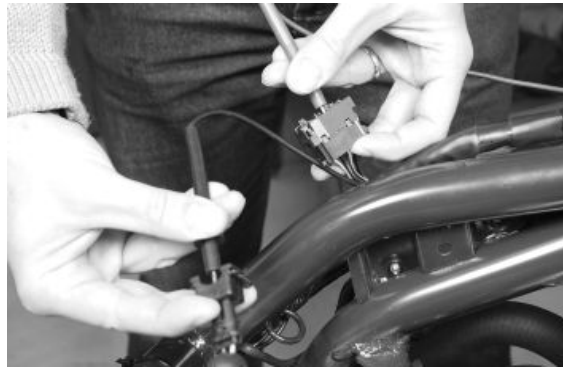

Inspecting the injector hydraulics

To check the injector, remove the inlet manifold by removing the three fixing screws at the head and the three screws connecting the control unit to the manifold.

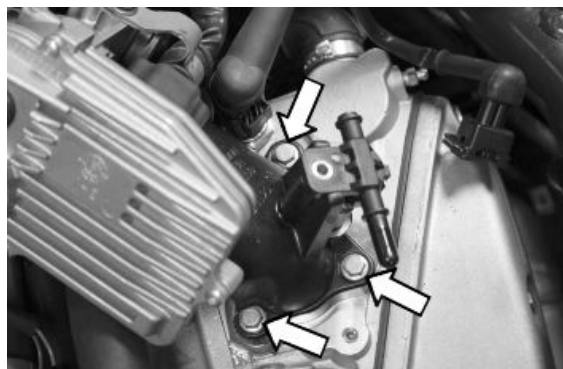

Install the appropriate tool for the fuel pressure check and position the manifold over a container graduated by at least 100 cc. Connect the injector with the cable making up part of the supply for the injection tester. Connect the clamps of the cable to an auxiliary battery. Activate the fuel pump with the active diagnosis. Check that within 15 approx. 70 cm³ of fuel is delivered with adjustment pressure of approx. 3 BAR.



Specific tooling


020480Y Petrol pressure check set



Proceed with the injector seal test.

Dry the injector outlet with a blast of compressed air. Activate the fuel pump. Wait for one minute, making sure there are no leaks coming from the injector. Slight oozing is normal.


Value limit = 1 drop per minute

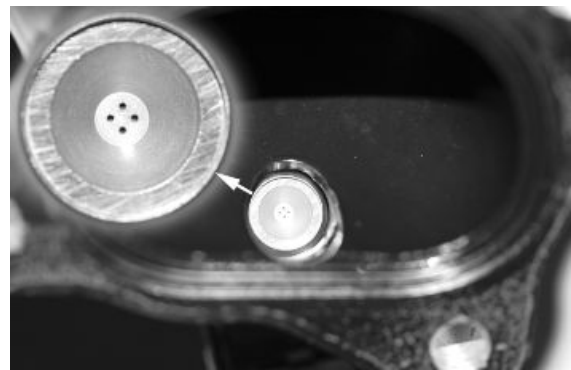

System components

The system consists of:

- EMS system control unit
- Decoder
- Aerial
- Master key (red)
- Service key (black)
- Deterrent and diagnosis LED

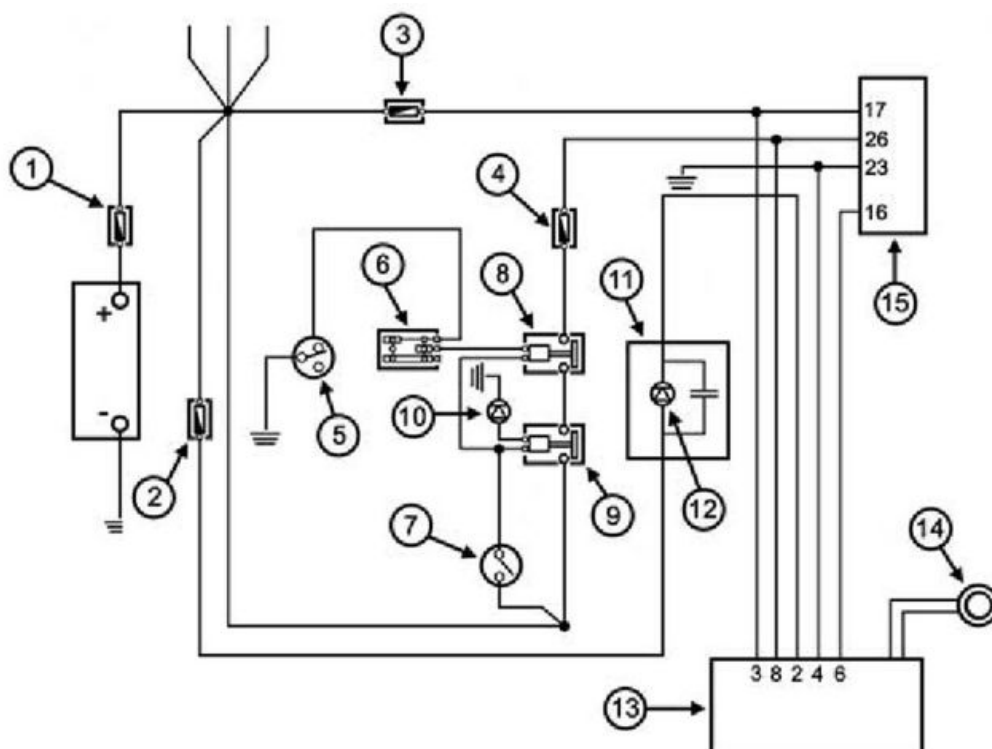

SYSTEM COMPONENTS


	Specification	Desc./Quantity
1	Main fuse	30 A
2	Fuse	7.5 A

	Specification	Desc./Quantity
3	Fuse 5A	
4	Fuse	5A
5	Stand switch	
6	Emergency switch	
7	Key switch	
8	Engine stop remote control switch	
9	Main remote control switch	
10	Diode 1A	
11	Instrument panel	
12	Immobilizer LED	
13	Decoder	
14	Immobilizer aerial	
15	Electronic control unit ECU	

Virgin circuit

When control unit (ECU) and decoder are not programmed, the following conditions occur:

- Key switch set to "OFF". Deterrent flashing inactive.
- Key switch set to "ON". Ignition and injection disabled and LED on with solid light.

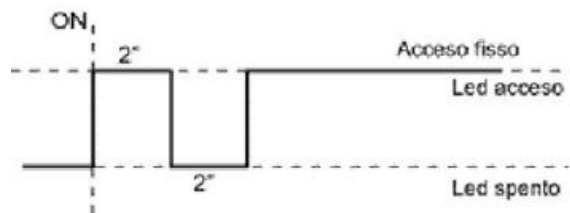

When the key switch is set to "ON", the LED switches on as shown in the figure.


The LED is turned on by the decoder.

The control unit data can be checked by the diagnostic tester.

Specific tooling

020460Y Scooter diagnosis and tester

To connect the diagnostic tester, open the spark plug inspection port and pull out the EMS Diagnosis socket. Remove the protection cap and connect the tester terminal.

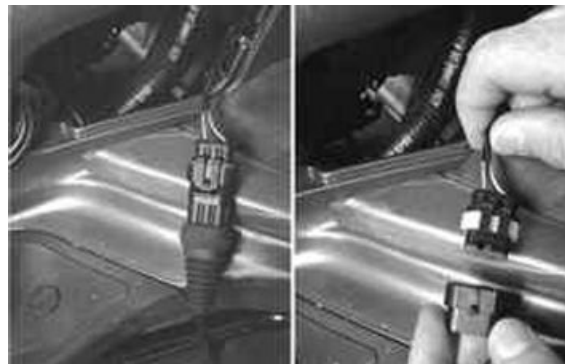

Power the diagnostic tester by connecting the terminals to the battery poles, or the specific connector to the socket inside the gloves compartment.



Set the switch to "ON" and select the diagnostic tester menu to the immobiliser function.
Scroll the pages to display the control unit data.



N.B.

AN UNPROGRAMMED SYSTEM CANNOT BE DETECTED UPON FIRST FITTING, OR IN CASE THE DECODER AND THE CONTROL UNIT ARE REPLACED CONCURRENTLY.

The information will be as follows:

Unprogrammed control unit «ON»

Start-up disabled «ON»

Key number Zero › 250

Setting the circuit

The scooter is supplied with two keys:

- Master key (red) with removable transponder
- Service key (black) with fixed transponder

The master and service keys must be used to code the system as follows:

- Insert the master key, set to «ON» and keep this position for 2 seconds (limit values 1÷3 seconds).
- Insert the black key and set to "ON" for 2 seconds.
- If you have copies of the key, repeat the operation with each key.
- Insert the master key again and set to "ON" for 2 seconds.

The maximum time to change keys is 10 seconds.

Seven service keys (black coloured) can be programmed within the same storage operation.

It is essential to adhere to the times and the procedure. If you do not, start again from the beginning.

Once the system has been programmed, master key transponder, decoder and control unit are strictly matched.

With this link established, it is now possible to encode new service keys, in the event of losses, replacements, etc.

Each new programming deletes the previous one so, in order to add or eliminate keys, you must repeat the procedure using all the keys you intend to keep using.

N.B.

AN ACCIDENTAL LOSS OF THE SERVICE KEY PROGRAMMING CAN ARISE FROM GENERAL FAULTS OF THE IGNITION SYSTEM. IN THIS CASE, CHECK THE HV LINE SHIELDING.


In any case it is advisable to use resistive spark plugs.

LED signals


When the key switch is set to "ON" and programming is performed normally, the LED switches on as shown in the figure.

WITH MASTER KEY

After the confirmation flash when switching to "ON", a number of flashes are emitted, equal to the number of keys used for programming.

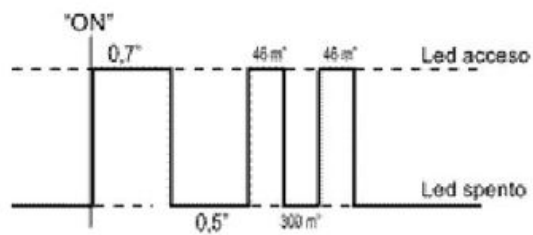


WITH SERVICE KEYS

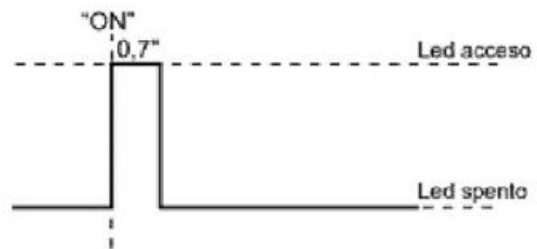

Deterring blink

Switching from «ON» to «OFF» with programmed system causes the intermittent switching on of the LED, with an antitheft effect.

This occurs with any key used for programming.

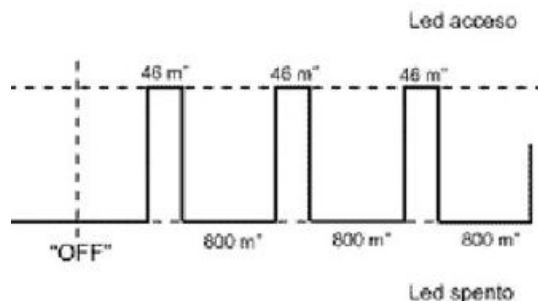

If the scooter is not used, the deterrent light stops automatically after 48 hours to prevent discharging the battery. A new 48-h cycle starts by switching from "OFF" to "ON" and "OFF" again.

Checking master-box data

Connect the diagnostic tester.

Set to "ON" and select the immobilizer function.

Scroll the pages the find the data.

Specific tooling

020460Y Scooter diagnosis and tester



The information will be as follows:

- Blank control unit "OFF"
- Start-up disabled "OFF"
- Number of keys 2*

*The number denotes how many keys have been used for programming, master key included.

Resetting the circuit

1 Replacing the small cylinder

- Remove the original master key transponder and install it on the master key of the new cylinder.
- Program the system again as described above.

2 Decoder replacement

When the decoder is replaced it is necessary to program the system again.

Programming is indispensable for the engine start-up. (see System programming).

3 Control unit replacement

Programming is indispensable when the control unit is replaced to enable the engine start-up.

In this case it is sufficient to switch to "ON" using the master key.

N.B.

- **THE SERVICE KEY (BLACK-COLOURED) IS NOT USED FOR PROGRAMMING.**
- **WHEN NOT PROGRAMMED, THE CONTROL UNIT ALLOWS NO FUNCTIONAL DIAGNOSIS ON THE ENGINE.**

4 Replacing or duplicating service keys

Keys can be duplicated using the blank keys and the original master key.

A copy may also be requested using the scooter CODE CARD.

Program the system again using the master key and all service keys (see System programming).

N.B.

THE CODE CARD CAN ONLY BE USED WHEN THE ORIGINAL MASTER KEY IS AVAILABLE.

1 Replacing the small cylinder

- Remove the original master key transponder and install it on the master key of the new cylinder.
- Program the system again as described above.

2 Decoder replacement

When the decoder is replaced it is necessary to program the system again.

Programming is indispensable for the engine start-up. (see System programming).

3 Control unit replacement

Programming is indispensable when the control unit is replaced to enable the engine start-up.

In this case it is sufficient to switch to "ON" using the master key.

N.B.

**- THE SERVICE KEY (BLACK-COLOURED) IS NOT USED FOR PROGRAMMING.
- WHEN NOT PROGRAMMED, THE CONTROL UNIT ALLOWS NO FUNCTIONAL DIAGNOSIS ON THE ENGINE.**

4 Replacing or duplicating service keys

Keys can be duplicated using the blank keys and the original master key.

A copy may also be requested using the scooter CODE CARD.

Program the system again using the master key and all service keys (see System programming).

N.B.

THE CODE CARD CAN ONLY BE USED WHEN THE ORIGINAL MASTER KEY IS AVAILABLE.

Diagnostic codes

The LED indication is divided into 3 steps:

1st step: A flash: "ON" switching recognition

2nd step: Series of flashes: diagnosis code indication


3rd step: Steady light on or off:

on = start-up disabled off = start-up enabled

Code 1

Code 1 indicates a non-programmed system.

If the code is still displayed after having carried out the programming procedure, repeat the procedure carefully observing the "ON" times of each key.

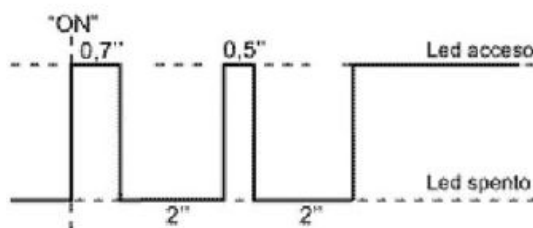

If the code is still displayed, proceed as follows:

- Disconnect the battery negative.
- Remove the control unit connector.
- Connect the special tool between the injection system and the control unit.
- Remove the main decoder connector.

N.B.


TO ACCESS THE COMPONENTS, SEE THE COMPONENTS LAYOUT CHAPTER.

Specific tooling

020481Y Control unit interface wiring

1 - Using a multimeter, check the continuity between pin 16 of the control unit and pin 6 of the decoder connector.

YES go to 3 NO go to 2

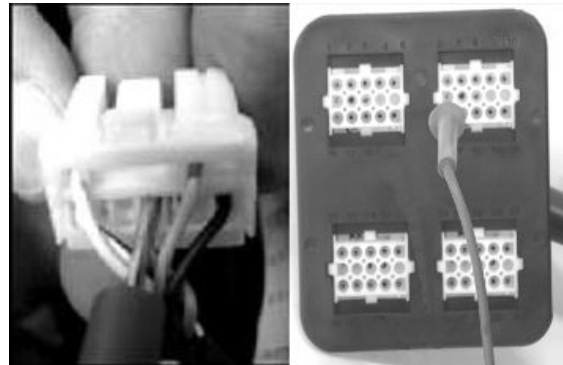

2 - Repair or replace the wiring.

3 - Check the connections carefully

YES go to 5 NO go to 4

4 - Restore

5 - Replace the decoder. Connect the battery. Repeat the programming. YES go to 7 NO go to 6

6 - Disconnect the battery, replace the control unit, connect the battery. Repeat the programming.

7 - The system is OK


Code 2

Code no. 2 denotes a system where the decoder does not perceive the transponder signal.

- Start-up disabled

- Injection telltale light on, steady

In this case, proceed as follows:

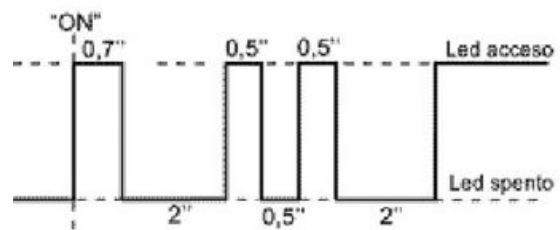

1 - Check whether the code is repeated using the second key.

YES go to 3 NO go to 2

2 - Failure detected with the service key Replace and program again. Failure detected with the master key.

Replace the transponder using one from the new cylinder kit.

Replace decoder and control unit.

Program again.

3 - Check the proper connection of the aerial connector.




YES go to 5 NO go to 4

4 - Restore the connection and check the presence of the code

5 - Disconnect the aerial connector and check continuity ($8 \pm 2 \text{ W}$).

YES go to 7 NO go to 6

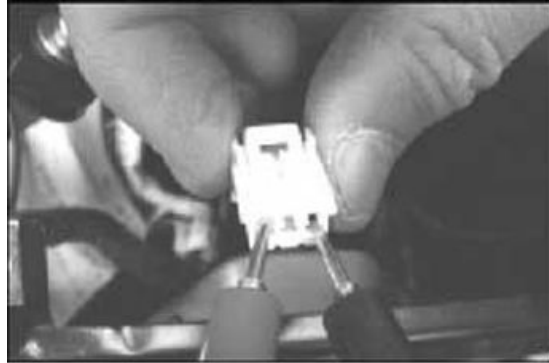

6 - Replace the aerial.

7 - Check the proper position of the aerial.

YES go to 9 NO go to 8


8 - Place it in proper position

9 - Replace the decoder and check the presence of the code

Code 3

Code no. 3 denotes a system where the decoder perceives a transponder not provided for by programming.

- Start-up disabled
- Injection telltale light on, steady

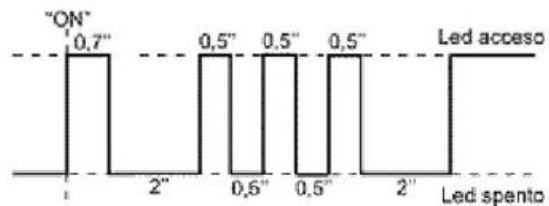

1 - Check whether the code is still displayed using the master key

YES go to 3 NO go to 2

2 - Program again using all service keys

3 - Check that all components (keys - decoder - control unit) are properly matched.

YES go to 5 NO go to 4

4 - Restore


5 - Replace decoders and control unit. Program the components again.

Code 4

Code no. 4 denotes a system where the decoder is blank and the control unit is programmed.

The key is recognised by the control unit.

- Start-up disabled
- Indicator light

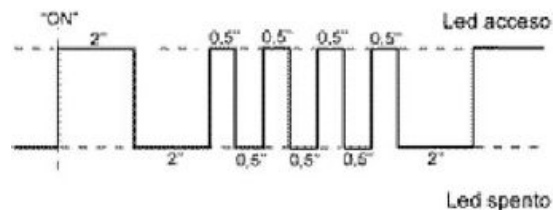

N.B.

REPEAT THE KEY PROGRAMMING PROCEDURE USING THE ORIGINAL MASTER KEY.

Diagnosis guide


Immobiliser LED does not come on

1 - Check whether the injection indicator turns on for 5 sec. after switching to "ON"

YES go to 2 NO go to 11

2 - Check 7.5A fuse No.10 located on the front glove-box.

YES go to 4 NO go to 3

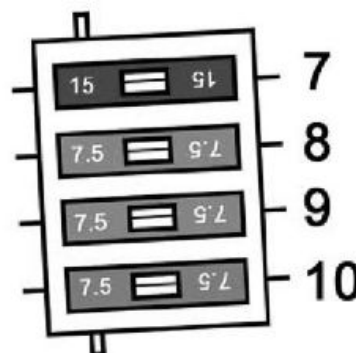

3 - Check for any short circuits on the instrument unit power supply line, check that the instrument unit has not short-circuited

YES go to 5

4 - Check whether the LED comes on when pin No. 2 of the decoder connector is connected to ground (yellow/grey cable).

YES go to 6 NO go to 7


5 - Restore

YES go to 2

6 - Replace the decoder and reprogram.


7 - Check for continuity on the yellow/grey cable, measuring between the decoder connector and the 8 pin connector of the instrument panel

YES go to 8 NO go to 10

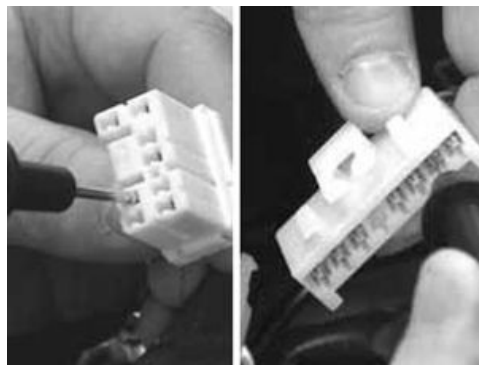

8 - Check for positive battery voltage on the red/black cable of the 8-way connector of the instrument panel.

YES go to 9 NO go to 10

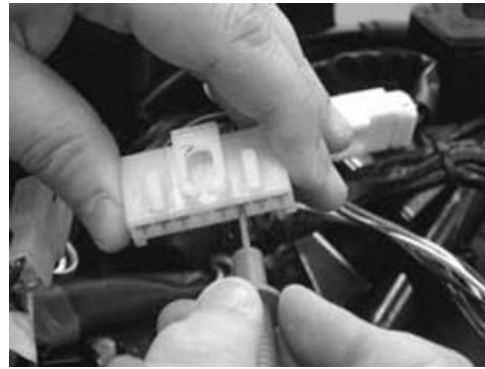


9 - Faulty led, replace the instrument panel.

10 - Repair or replace the wiring.

11 - If the injection light does not come on, continue with the check of the supply circuit to the decoder and of the central control unit.


Tachometer

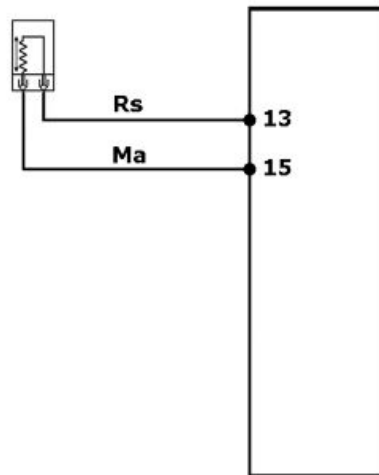


With wiring disconnected from the control unit and connected to the system, check that the sensor resistance between pins 13 - 15 is between 100 and 150 Ohm at an engine temperature of approximately 20°




Disconnect the fuel pipe connector. Start up the engine and wait for it to stop. With the wiring connected to the control unit and system try to start up the engine and check that the voltage between pins 13 and 15 is around 2.8 V

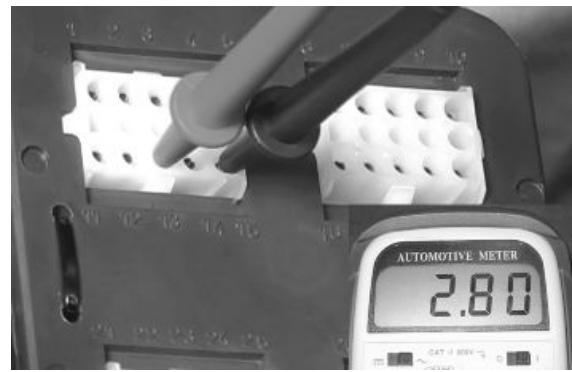

With the interface cable harness disconnected from the control unit, check continuity between pin 13 and the red cable of the rpm sensor connector and between pin 15 and the brown cable of the rpm sensor connector

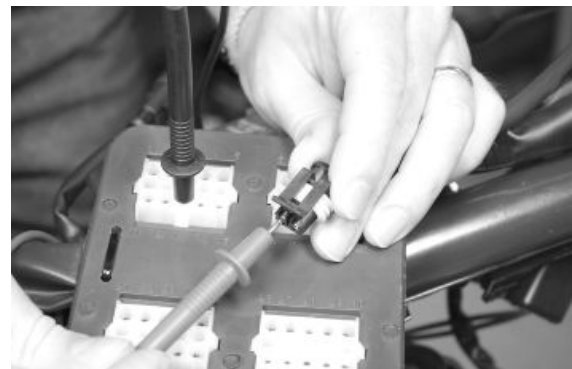

With the interface cable harness disconnected from the control unit and the rpm sensor connector disconnected, check that the red and brown cables (pin 13 - 15) are isolated from each other and insulated from the ground lead.

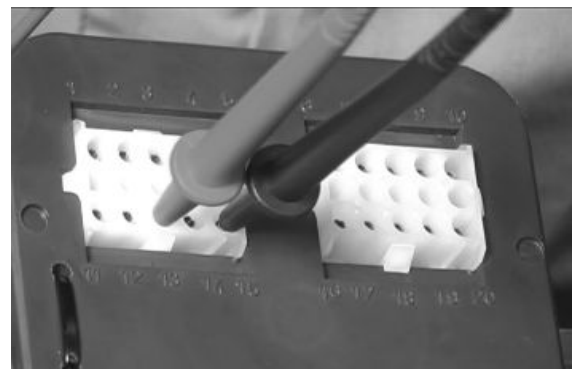


Specific tooling

020481Y Control unit interface wiring

020331Y Digital multimeter

HT coil

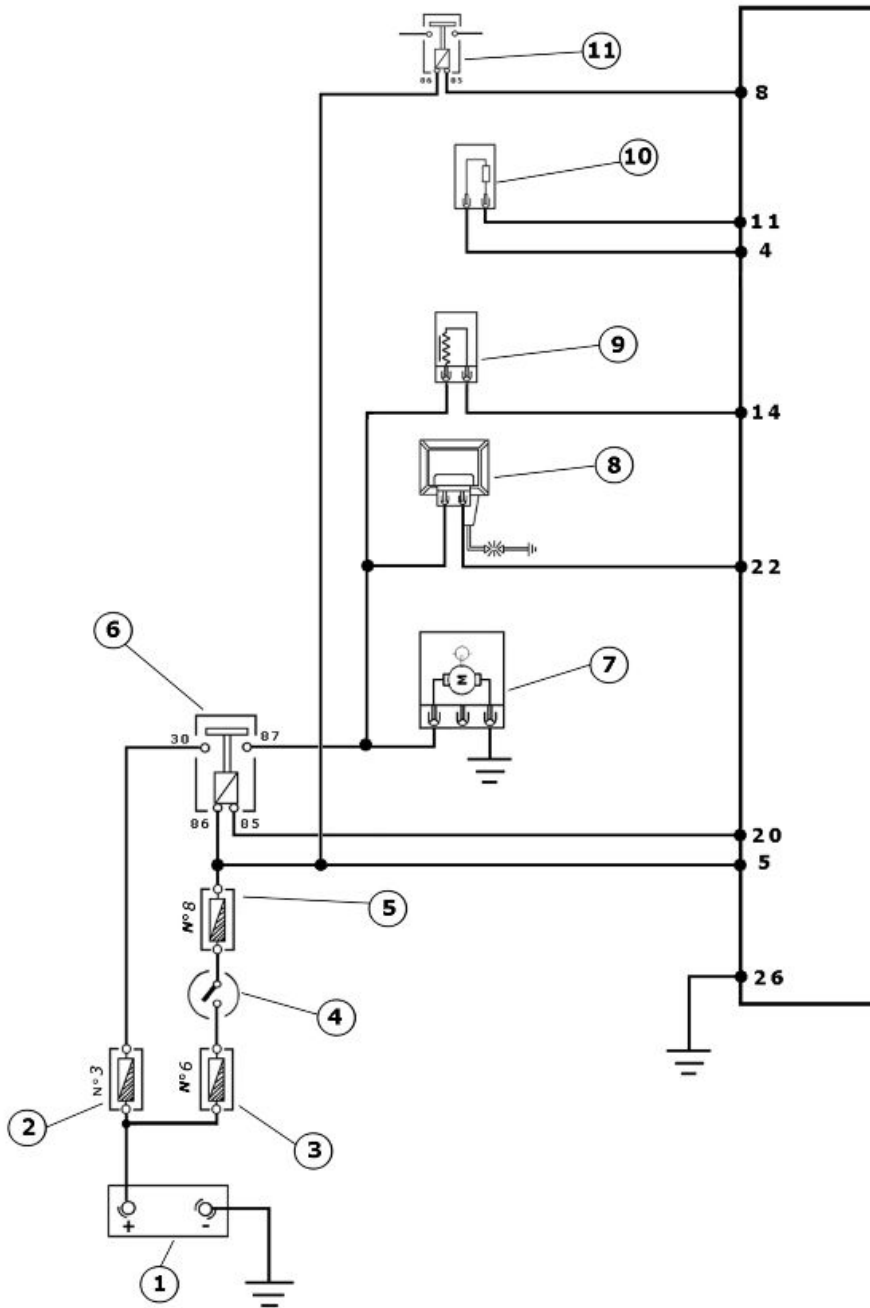

INJECTION LOADS

	Specification	Desc./Quantity
1	Battery	12V - 12 Ah
2	Fuse	10 A
3	Fuse	30 A
4	Key switch contacts	
5	Fuse	7.5 A
6	Injection load remote control	
7	Fuel pump	
8	HV coil	

	Specification	Desc./Quantity
9	Fuel injector	
10	Lambda sensor	
11	Electric fan starter	

The ignition system combined with the injection is the high-efficiency induction type.

The control unit controls two important parameters:

- Ignition advance

This is optimised from moment to moment in accordance with the engine revs, engine load, temperature and environmental pressure.

With the engine at idle, the ignition advance is optimised to stabilise the speed at 1500 ± 100 rpms.

- Magnetisation time

The coil magnetisation time is controlled by the control unit. The power of the ignition is increased during the engine start-up phase.

The injection system recognises the four-stroke cycle so the ignition is only commanded in the compression phase.

Specific tooling


020331Y Digital multimeter

Check that the injection load 10A fuse No. 3 is in good conditions.

Check that the 7.5A fuse No. 8 for live control unit power supply is in good conditions.




Check the efficiency of the injection load remote control: Check the resistance of the energising coil between pins 86 and 85: 40 to 80 Ohm
Apply a voltage of 12V to pins 86 and 85; make sure that there is continuity between pins 30 and 87 of the remote control.


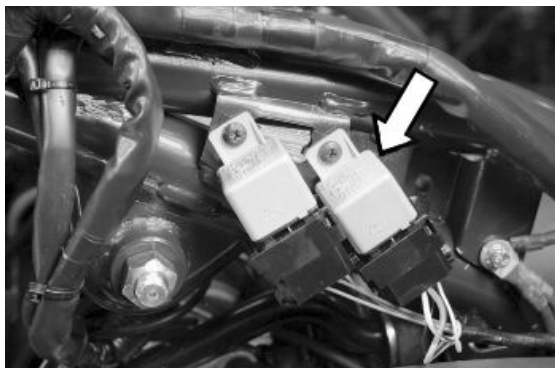


Check the power supply line of the injection load remote control energising coil: after switching to "ON", make sure there is battery voltage, for two seconds, between the Red-White cable and Black-Violet cable of the remote control base. If there is not, check the continuity of the Red-White cable between the fuse box and the remote control base and of the Black-Purple cable between the pin 20 of the control unit and the remote control base.

N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).

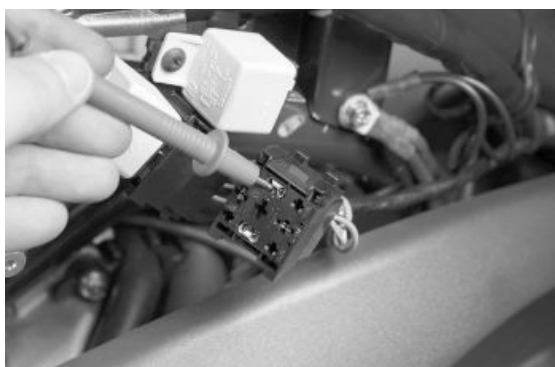

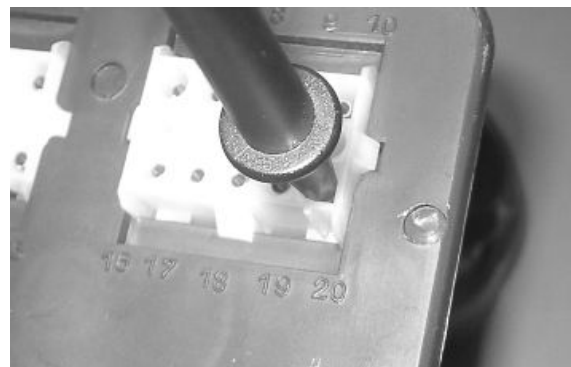
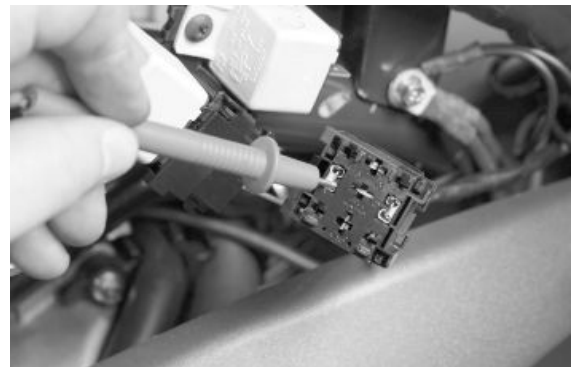


Check the presence of fixed voltage between the grey/black cable of the remote control base and earth. If there is none check the continuity of the grey/black cable between the fuse box (No. 3 10 A) and the remote control base.


N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).



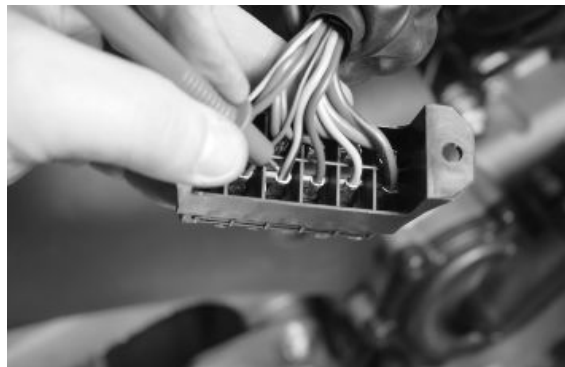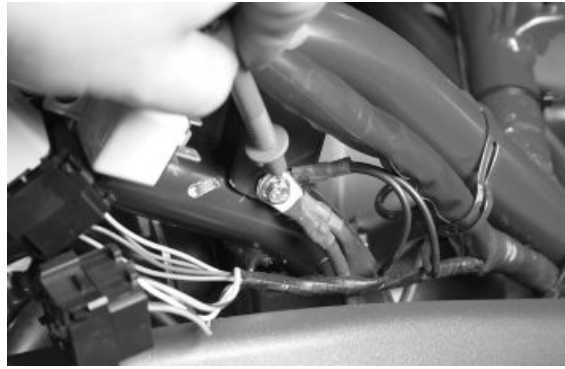



Check there is voltage between pins 22 and 26 of the interface wiring for around two seconds when switching to «ON».

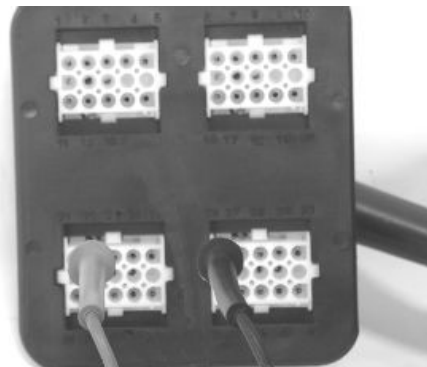

Check the resistance of the primary coil between pin 22 of the interface wiring and the green black cable of the injection load remote control base with the control unit disconnected and the remote control disconnected.

Primary resistance ~ 1 Ohm

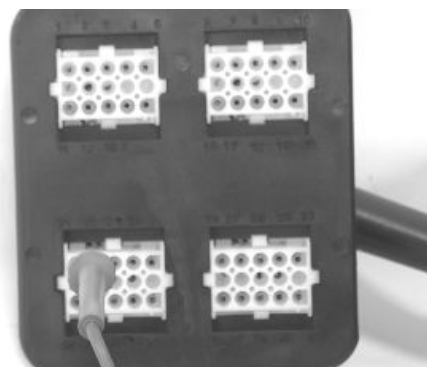

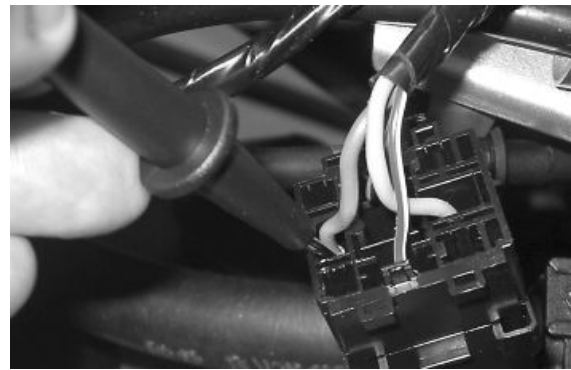

Inspecting the spark plug shielded cap

Measure the shielded cap resistance.

Electric characteristic

Resistance:

5 K Ω

If different values are measured (<1; >20K Ω), replace the shielded cap.



N.B.

A SHIELDLESS CAP OR SPARK PLUG CAN ADVERSELY AFFECT THE INJECTION SYSTEM. FOR INFORMATION ON THE SPARK PLUG, SEE THE «SPECIFICATIONS» AND «MAINTENANCE» CHAPTERS.

Spark advance

The ignition advance is determined electronically on the basis of parameters known by the control unit. For this reason it is not possible to declare the reference values based on the engine rpm.

The ignition timing value is detectable any time using the diagnostic tester.

It is possible to check whether the ignition advance determined by the system does in fact correspond with the value actually activated on the engine, by means of the stroboscopic light.


Specific tooling

020460Y Scooter diagnosis and tester

020330Y Stroboscopic light for timing control

Proceed as follows:

- Remove the transmission compartment cover as described in the "automatic transmission" chapter.

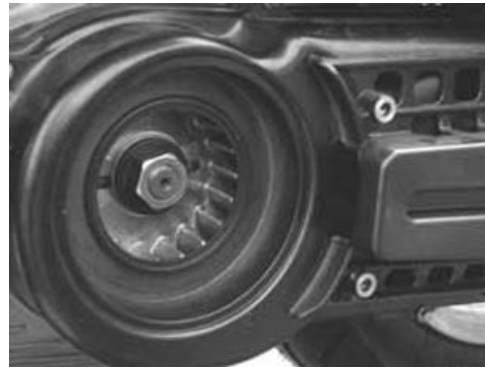

- Remove the TDC reference inspection cap between flywheel and crankcase cover. See the "flywheel cover" chapter



- By the driving pulley, turn the engine to find the alignment of the references to identify the TDC.



- Repeat for the reference between driving pulley and engine crankcase.



-
- Replace the inspection cap on the flywheel side.
 - Connect the diagnostic tester.
 - Start the engine.
 - Select the menu on the "parameter" function.
 - Select the stroboscopic light command in the traditional four-stroke engine position (1 spark 2 revs).
 - Check that the real values of rpm and ignition advance match those measured using the diagnostic tester.



If the values do not match, check:

- distribution timing
- revolution-timing sensor
- Injection control unit

The ignition advance is determined electronically on the basis of parameters known by the control unit. For this reason it is not possible to declare the reference values based on the engine rpm.

The ignition timing value is detectable any time using the diagnostic tester.

It is possible to check whether the ignition advance determined by the system does in fact correspond with the value actually activated on the engine, by means of the stroboscopic light.

Specific tooling

020460Y Scooter diagnosis and tester


020330Y Stroboscopic light for timing control

Proceed as follows:

- Remove the transmission compartment cover as described in the "automatic transmission" chapter.



- Remove the TDC reference inspection cap between flywheel and crankcase cover. See the "flywheel cover" chapter

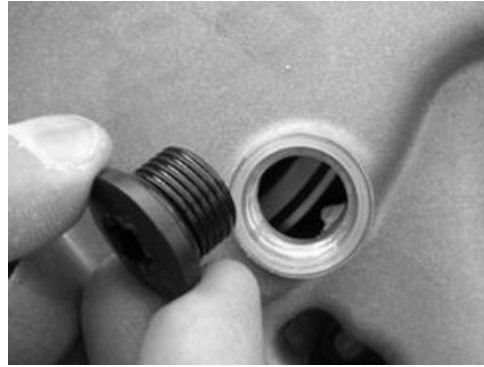

- By the driving pulley, turn the engine to find the alignment of the references to identify the TDC.



- Repeat for the reference between driving pulley and engine crankcase.



- Replace the inspection cap on the flywheel side.
- Connect the diagnostic tester.
- Start the engine.
- Select the menu on the "parameter" function.
- Select the stroboscopic light command in the traditional four-stroke engine position (1 spark 2 revs).
- Check that the real values of rpm and ignition advance match those measured using the diagnostic tester.




If the values do not match, check:

- distribution timing
- revolution-timing sensor

- Injection control unit

Coolant temperature sensor

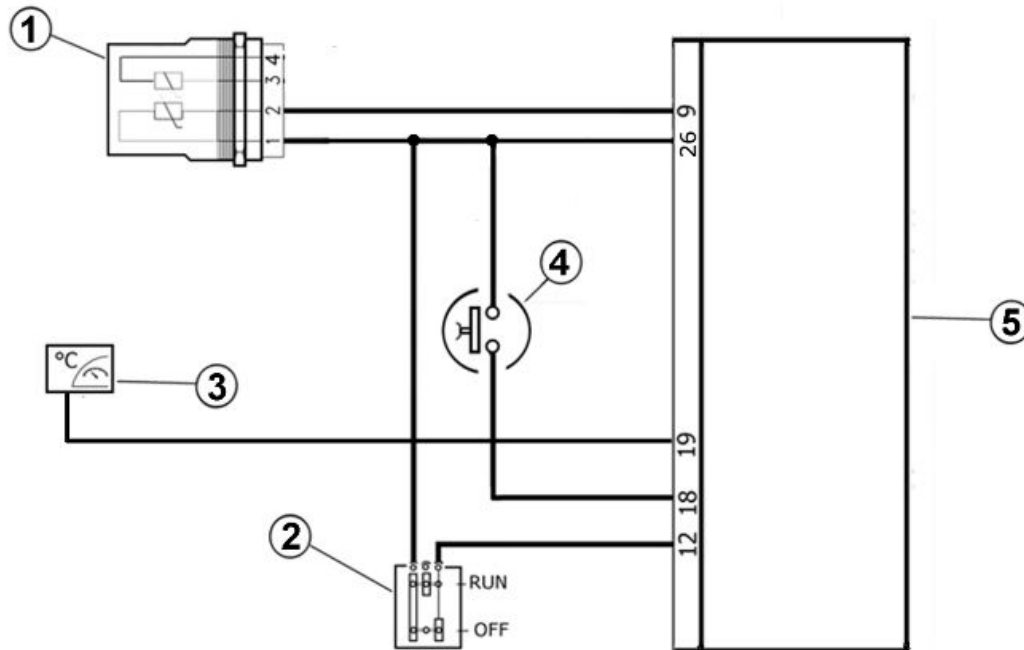

TEMPERATURE SENSOR 1


	Specification	Desc./Quantity
1	Water temperature sensor	
2	Engine stop switch	
3	Instrument panel	
4	Side stand switch	
5	Electronic control unit	

With the control unit side connector disconnected and the coolant temperature sensor connector connected, check that the resistance values between pin 9 and ground correspond to the engine temperature.

20° = 2500 ± 100 Ω

80° = 308 ± 6 Ω

With the control unit side connector disconnected and the coolant temperature connector disconnected, check the insulation between the light blue/green cable and ground.

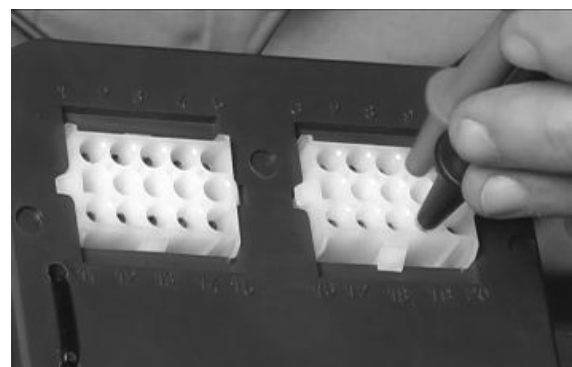


With the control unit side connector disconnected and the coolant temperature connector disconnected, check the continuity between pin 9 of the interface wiring harness and the light blue/green cable of the connector.

Specific tooling

020481Y Control unit interface wiring

020331Y Digital multimeter

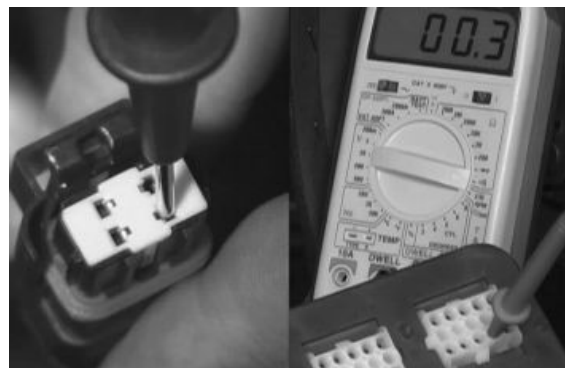

Zeroing the throttle

Resetting the throttle valve position signal (TPS reset)

The MIU control unit is supplied with a throttle valve position sensor that is pre-calibrated.

Pre-calibration entails regulating the minimum opening of the throttle valve to obtain a certain flow of air under pre-set reference conditions.

Pre-calibration ensures optimal air flow to control idling.

This regulation must not be tampered with in any way whatsoever.

The injection system will complete the management of the idling through the Stepper motor and the variation of the ignition advance.

The throttle body after the pre-calibration has an opened valve with an angle that can vary depending on the tolerances of the machining of the pipe and the valve itself.

The valve position sensor can also assume various fitting positions. For these reasons the mV of the sensor with the valve at idle can vary from one throttle body to another.

To obtain the optimum fuel mixture, especially at small openings of the throttle valve, it is essential to match the throttle body with the control unit following the procedure known as TPS resetting.

With this operation we inform the control unit, as the starting point, of the mV value corresponding to the pre-calibrated position.

To reset, proceed as follows.

Connect the diagnostic tester.

Switch to «ON».


Select the functions of the diagnostic tester on
«TPS RESET».

Specific tooling

020460Y Scooter diagnosis and tester



Make sure that the throttle valve with the control is supporting the stop screw.

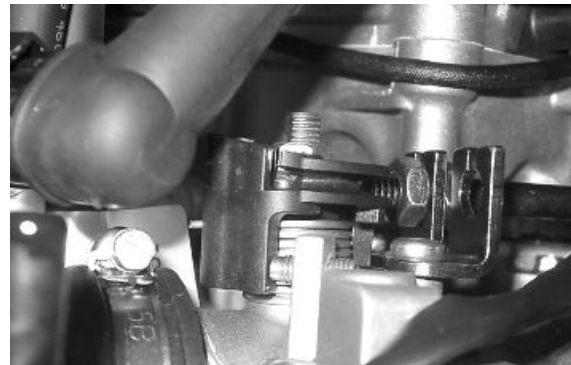

Guaranteeing that this position will be kept, send a confirmation for the TPS reset procedure.






Reset should be performed in the following cases:

- on first fitting.
- if the injection control unit is replaced.

N.B.

THE TPS RESETTING PROCEDURE MUST NOT BE CARRIED OUT WITH A USED THROTTLE BODY BECAUSE POSSIBLE VALVE WEAR AND STOP WEAR FOR THE MINIMUM OPENING MAKE THE AIR FLOW DIFFERENTLY FROM THAT OF PRE-CALIBRATION.

Lambda probe

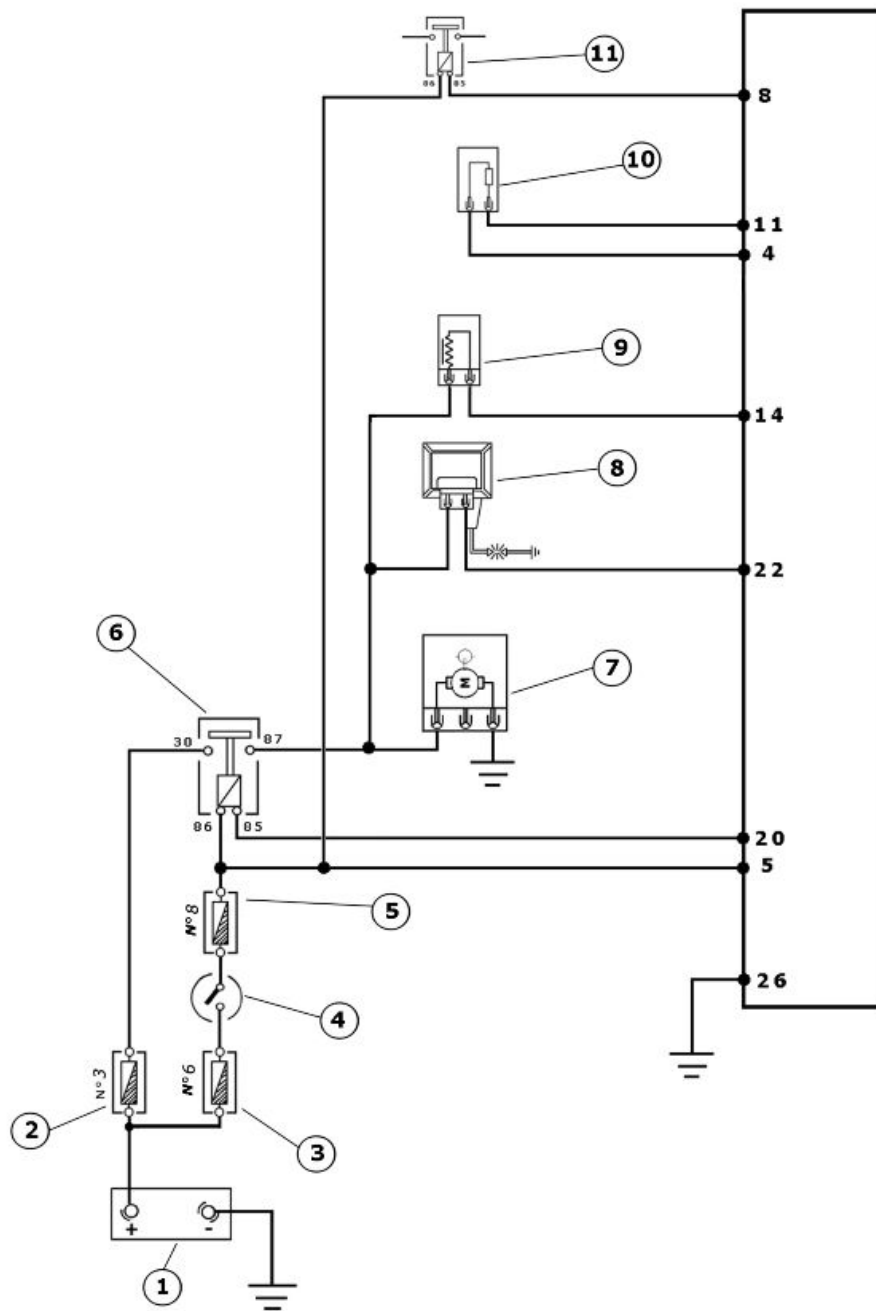

INJECTION LOADS

	Specification	Desc./Quantity
1	Battery	12V - 12 Ah
2	Fuse	10 A
3	Fuse	30 A
4	Key switch contacts	
5	Fuse	7.5 A
6	Injection load remote control	
7	Fuel pump	
8	HV coil	

	Specification	Desc./Quantity
9	Fuel injector	
10	Lambda sensor	
11	Electric fan starter	

The Lambda sensor or oxygen sensor is a sensor which provides indications concerning the oxygen content in the exhaust gas. The signal generated is not of the proportional type but of the ON/OFF type, i.e. there is oxygen or there is not. The sensor is positioned on the exhaust manifold before the catalytic converter in an area where the gas temperature is always high. The temperature at which the sensor works is at least 350°C at 600°C and it has a reaction time of just 50 milliseconds. The signal generated passes from a high value to a low value with a mixture with $\lambda = 1$.

Specific tooling

020481Y Control unit interface wiring

020331Y Digital multimeter


Check that the injection load 10A fuse No. 3 is in good conditions.

Check that the 7.5A fuse No. 8 for live control unit power supply is in good conditions.



Check the efficiency of the injection load remote control: Check the resistance of the energising coil between pins 86 and 85: 40 to 80 Ohm
Apply a voltage of 12V to pins 86 and 85; make sure that there is continuity between pins 30 and 87 of the remote control.



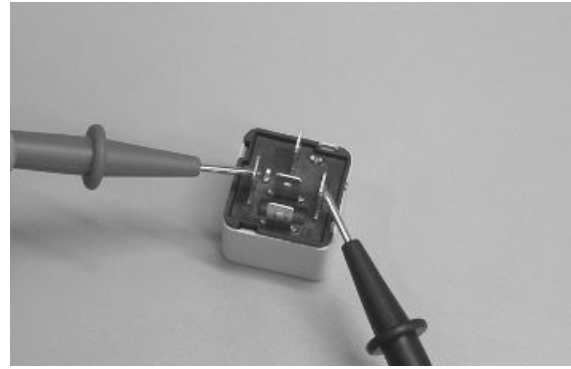



Check the power supply line of the injection load remote control energising coil: after switching to "ON", make sure there is battery voltage, for two seconds, between the Red-White cable and Black-Violet cable of the remote control base. If there is not, check the continuity of the Red-White cable between the fuse box and the remote control base and of the Black-Purple cable between the pin 20 of the control unit and the remote control base.



N.B.

CONTINUITY TESTS MUST BE CARRIED OUT WITH THE COMPONENTS DISCONNECTED. (REMOTE CONTROLS, CONTROL UNIT, FUSES ETC.).




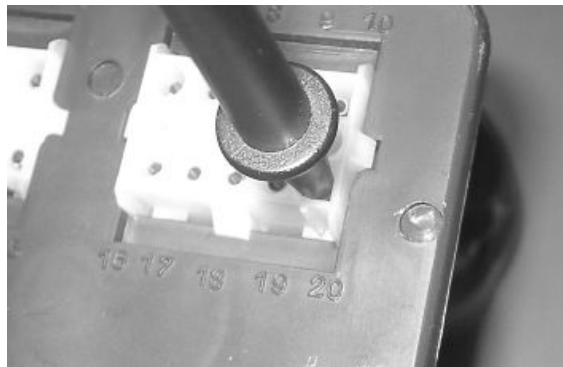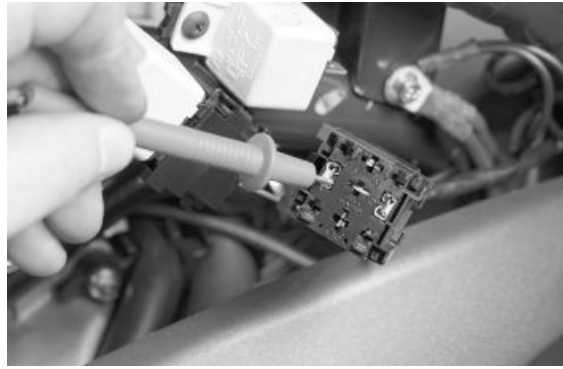

Install the electronic control unit interface wiring.
Start the engine and warm up until the electric fan switches on.

Use an analogue multimeter with a direct voltage scale measuring down to 2 V.

Place the tips of the multimeter between pins 4 (-) and 11 (+)

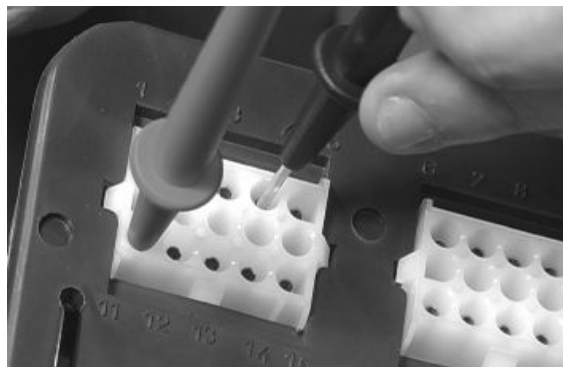

With the engine running at idle speed, check that the voltage oscillates between 0V and 1V

With the throttle valve completely open, the voltage is approx. 1V.

During the closing phase, the voltage is approx. 0V.

If the voltage remains constant, the sensor may be damaged. Remove the sensor and check that there are no oil or carbon deposits inside it..



INDEX OF TOPICS

SSUSPENSIONS


SUSP

This section is devoted to operations that can be carried out on the suspension.

Front

Removing the front wheel

- Loosen the two wheel axle locking screws shown in the figure.

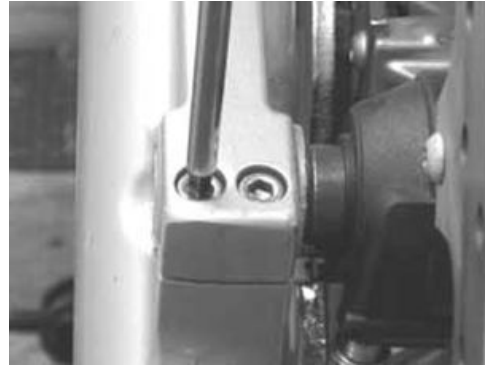

- Remove the wheel axle locking nut.
- Slide off the wheel axle and remove the wheel.
- Upon removal take care not to damage the sensor that detects movement in the odometer.
- Check that the wheel axle does not show signs of wear or deformations. If it does, replace it.



Locking torques (N*m)

Wheel axle fixing screws: 6 ÷ 7 Nm Front wheel axle nut 45 - 50

Front wheel hub overhaul

Check that the wheel bearings do not show signs of wear.

If you have to replace the wheel bearings, proceed as follows:

- Remove the 2 bearings on the odometer movement sensor side using the pliers 14 or 34 and the driver, part 9.
- Remove the inside spacer.



Specific tooling

001467Y034 Extraction pliers for \varnothing 15 mm bearings

001467Y014 Pliers to extract \varnothing 15-mm bearings

001467Y009 Driver for OD 42 mm bearings

- Support the front wheel with two wooden pegs that prevents scratching in case of contact with the rim.
- Insert the punch (consisting of adaptor handle, 15 mm adaptor and guide) on the odometer movement sensor side to facilitate removing the left side bearing and the spacer bushing.



Specific tooling

020376Y Adaptor handle

020456Y \varnothing 24 mm adaptor

020412Y 15 mm guide

- Heat the seat of the bearing on the left side with the heat gun.



- Fit the bearing using the punch consisting of adaptor handle, 42x47 mm adaptor and 15 mm guide, and drive it until it stops.



- Reinsert the spacer bushing on the brake disc side using the specific tool and drive it until it stops.



Specific tooling

020376Y Adaptor handle

020359Y 42x47-mm adaptor

020412Y 15 mm guide

020201Y Spacer bushing driving tube

- Turn over the wheel and insert the inside spacer with the section fitted with the Seeger ring facing the left side bearing previously installed.
- Heat the seat of the bearing on the odometer movement sensor side with the heat gun.



- Fit the 2 bearings using the punch consisting of adaptor handle, 32x35 mm adaptor and 15 mm guide, and drive it until it stops.



Specific tooling

020376Y Adaptor handle

020357Y 32 x 35 mm adaptor

020412Y 15 mm guide

Refitting the front wheel

- To refit, carry out the removal operations but in reverse order, observing the prescribed torques.
- Place the odometer movement sensor until the reference correctly fits into its slot.

Locking torques (N*m)


Front wheel shaft 45 ÷ 50 Safety screw on fork leg 6 - 7



Front fork

Removal

- Remove the front wheel.
- Remove the front mudguard
- Remove the front brake calliper
- Remove the instrument panel.
- Remove the pin mounting the handlebar to the steering tube.
- Remove the handlebar and rest it on the shield back plate.

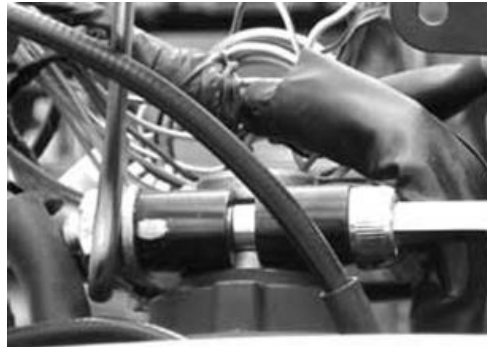

Using the special tool, loosen and remove the upper ring nut, the spacer washer and the counter-ring nut.

- Extract the fork.

N.B.

TAKE CARE TO SUPPORT THE FORK SO AS TO PREVENT IT FROM COMING OFF ABRUPTLY

Specific tooling

020055Y Wrench for steering tube ring nut



Overhaul


Check the spring length

- Check the length "A" of the spring.

Characteristic


Standard spring length:

291.6 mm

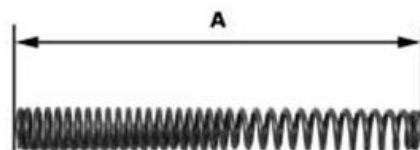

Check pump unit

- Check that the oil holes on the pumping are free from clogging.
- Check that the sealing snap ring is not damaged.

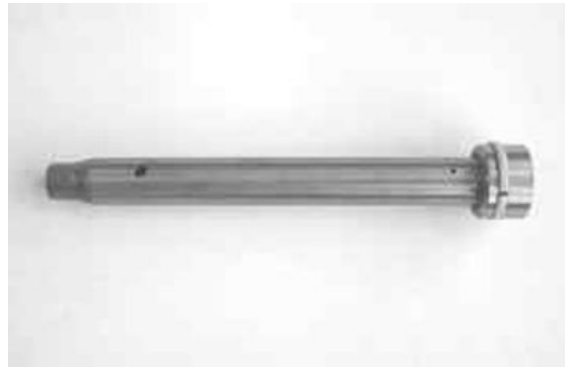

Servicing tapered bearing seats

- Check that the seats and the tapered bearings exhibit no scratches or wear.

N.B.

THE TAPERED BEARING SEATS SHOULD BE REMOVED ONLY IF STRICTLY NECESSARY.

In case of replacement, proceed as follows:

- Using a bearing removal punch, inserted from the bottom, remove the top seat on the steering head. Then, remove the bottom seat of the tapered bearing inserting the punch from the top of the headstock.

**Specific tooling**

020004Y Punch for removing fifth wheels from headstock

Servicing fork stems

- Using an inside 17 mm hexagonal spanner, loosen the top stem closing cap.



-
- Loosen the stem support clamp and remove fork leg and stem.



-
- Remove the spring.
 - Drain the oil.
 - Remove the screw with copper washer shown in the figure. To prevent the pumping member rotation, insert an inside 22 mm hexagon spanner into the stem.
 - Remove the pumping member.



-
- Remove the dust guard ring using a screwdriver as shown in the figure.

N.B.


BE CAREFUL NOT TO DAMAGE THE DUST GUARD AND THE STEM.



-
- Remove the oil guard safety lock using a screwdriver.
 - Repeatedly actuate the stem to remove it from the fork leg.



- Extract the oil guard "D", the abutment washer "C" and the top bushing "B".
- Widen and remove the bottom bushing "A".

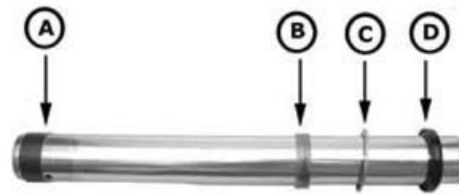

Refitting

Installing stems on fork legs


Preassemble the stem as indicated:

- Install the bushing from the bottom of the stem



- Insert the following from the top of the stem:

- 1 Bushing "B"
- 2 Abutment washer "C"
- 3 Oil guard "D"

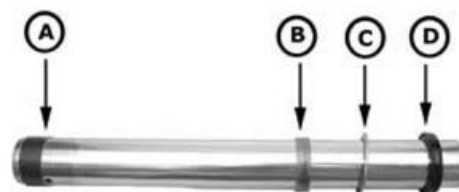

- Insert the pumping member guiding bushing at the bottom end of the stem.



- Insert the stem into the casing being careful not to let the guiding bushing come out of the stem.
- Move the oil guard in abutment using a tube.

TUBE SIZE

Specification	Desc./Quantity
Inside:	44 mm
Outside:	51 mm
Height:	approx. 105 mm

- Insert the contrast spring into the pumping member.
- Insert the pumping member into the stem.
- Insert the stem into the fork leg being careful not to let the guiding bushing come out of the stem.
- Insert and screw the pumping member screw with a new copper washer and tighten to the prescribed torque.



CAUTION

TO PREVENT THE PUMPING MEMBER ROTATION, INSERT AN INSIDE 22 MM HEXAGON WRENCH INTO THE STEM.

Locking torques (N*m)

Pumping element fixing screw 25 - 35

- Pour recommended oil into the stem.

Recommended products

AGIP FORK 7.5 W Fork oil

Grade 7.5 W

Characteristic

Amount oil:

195 ± 3 cc

- Insert the spring with the thickest turns at the bottom.
- Insert the stem into the fork clamp.
- Tighten the clamp to screw the top stem closing cap.
- Check that the sealing ring on the cap is in good working order, then tighten the cap on the stem to the prescribed torque.



Locking torques (N*m)

Stem upper cap 35 - 55

- Loosen the fork clamp screws and move the stem closing cap in abutment with the clamp.
- Tighten the clamp screws to the prescribed torque.

Locking torques (N*m)

Fork clamp screws 20 ÷ 25



- Grease the tapered bearing using the specified product.

Recommended products

AGIP GREASE PV2 Grease for the steering bearings, pin seats and swinging arm

White anhydrous-calcium based protective grease for roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2.



- Insert the fork into the headstock.
- Insert the tapered bearing after applying the specified product.

Recommended products

AGIP GREASE PV2 Grease for the steering bearings, pin seats and swinging arm

White anhydrous-calcium based protective grease for roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2.



- Using the special tool, tighten the first ring-nut on the steering tube to a holding torque, then tighten completely.

Locking torques (N*m)

Holding torque of lower ring nut 20 ÷ 25

- Tighten to the prescribed torque.

Locking torques (N*m)

Lower steering ring nut 10 - 13 **

- Install the space washer.
- Using the special tool, tighten the second locking ring nut on the steering tube to the prescribed torque.

Locking torques (N*m)

Upper steering ring nut 36 - 39

- Install the handlebars on the steering tube, paying attention to the centring, aligning the recess on the handlebar with that on the steering tube as shown in the figure.



- Tighten the handlebar retaining screw on the steering tube to the prescribed torque.
- Remove the instrument panel.
- Install the front mudguard
- Install the front wheel.
- Install the front brake callipers.
- Tighten the retaining screws of the brake calliper to the support.

Specific tooling

020055Y Wrench for steering tube ring nut

Locking torques (N*m)

Screw securing handlebar to steering tube 45 - 50 Holding torque of lower ring nut 20 ÷ 25 Upper steering ring nut 36 - 39 Lower steering ring nut 10 - 13 ** Front brake calliper mounting on fork 20 ÷ 25 Front brake disc mounting 11 ÷ 13 Plastic protection retaining screw 5 - 6

Steering bearing

Removal

Service of tapered bearing on fork

- Check that the tapered bearing on the fork exhibits no deformations or wear.

THE BEARING SHOULD BE REMOVED ONLY IF STRICTLY NECESSARY.

In case of replacement, proceed as follows:

- Support the fork in a vice.
- Insert the contrast plate in the upper end of the steering tube



- Insert the special tool as shown in the figure.



- Insert the retaining band of the two half-rings.



- Using a 19 mm hexagonal spanner, extract the roller bearing.

Specific tooling

020458Y Puller for lower bearing on steering tube



Refitting

Reassembly of steering tapered bearing seats

Using the special tool, reassemble the tapered bearing housings on the head as described below:

- Place a new top housing on the head and a new bearing seat on the bottom side.
- Insert the screw of the special tool set-up with the adapters for inserting bearing and seat, into the steering head, as shown in the figure.
- Using two 24 mm wrenches, tighten the screw to move the two seats in abutment.



N.B.

ALWAYS USE A NEW BEARING AND A NEW SEAT.

Specific tooling

001330Y Tool for fitting steering seats

**Reassembly of tapered bearing in steering tube**

- Insert the a new plate and a new dust guard in the steering tube
- Insert the a new tapered bearing in the steering tube
- Using the special tool and a mallet to move the dust guard and the bearing in abutment.

**Specific tooling**

006029Y Punch for fitting fifth wheel seat on steering tube

Rear**Removing the rear wheel**

- Remove the muffler support arm
- Remove the spacer on the gear shaft.



-
- Loosen the five gear shaft fastening nuts using the rear brake.



Refitting the rear wheel

- For reassembly, perform the previous operations in the reverse order

Locking torques (N*m)

Wheel fastening screws 33 - 37

Swing-arm

Removal

- Remove the helmet compartment.
- Remove the air filter.
- Remove the rear mudguard.




- Remove the nut and the washer mounting the swinging arm/engine pin and tie rod.




- Remove the locking nut, the washer and the tie rod buffer.



- Suitably support the engine using a jack under the oil sump.
- Remove the nut of the pin mounting the swinging arm to the chassis.

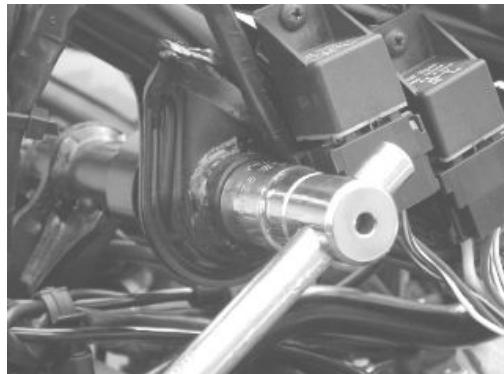


- Remove the lock nut, then using a 15-mm fork spanner, loosen the pin mounting the swinging arm to the chassis.

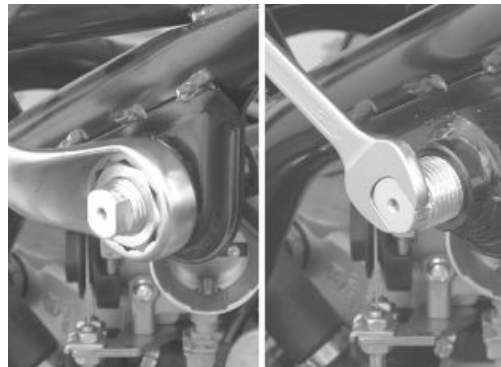

- Remove the swinging arm from the chassis and remove the shaped washer.




- Loosen the rear shock absorber mounting bolts.

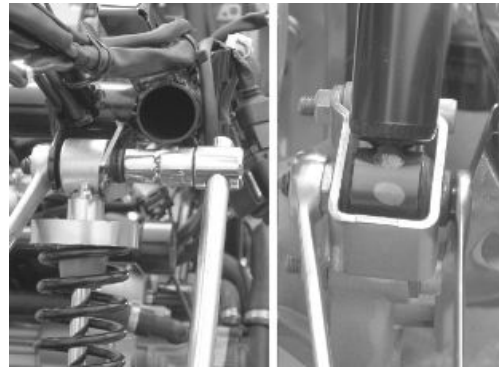

- Move the engine backwards as much as piping and transmissions allow, at the same time move the front of the engine leftwards to allow removing the tie rod (with washer and pad) from the chassis and from the pin mounting the swinging arm to the engine.



- Prevent the rotation of the pin connecting the swinging arm to the engine using a 19-mm fork spanner.
- Remove the nut and the washer from the scooter left side.

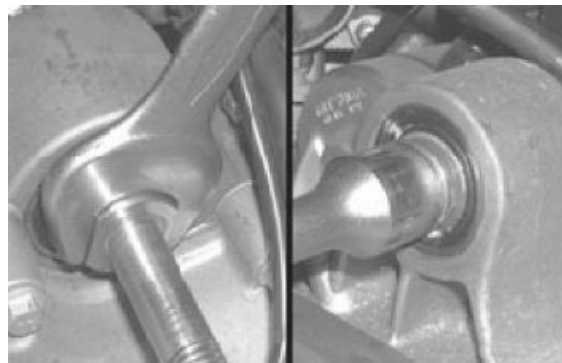

- Pull out the pin from the right side and remove the swinging arm with the washer on the right.

N.B.

CHECK THAT THE SWINGING ARM DOES NOT INTERFERE WITH THE THROTTLE BODY COMPONENTS IF PULLED USING THE SPACER BUSHING.

N.B.

IF NECESSARY, REMOVE THE CABLE HARNESS SUPPORT BRACKET MOUNTING SCREW.



- Remove the bushing from the bearing on the engine left support.



Check that the following components are not worn or dented:

- Engine crankcase supports
- Ball bearing with bushing on swinging arm
- Roller bearing on swinging arm

Check that the chassis connecting pin exhibits no wear or dents on the roller bearing connection:

In case of irregularities, replace the pin and the roller bearing.

- Check that the pin connecting the swinging arm to the engine exhibits no wear at the right bearing housing connection:

Characteristic

Diameter of shaft:

Ø 18 -0.034 mm

Diameter of pin:

Ø 20 -0.041 mm

- Extract the left bearing using the special tool.


Specific tooling

001467Y006 Pliers to extract 20 mm bearings

001467Y031 Bell



- Extract the right bearing using the modular punch through the left bearing seat (removed before).

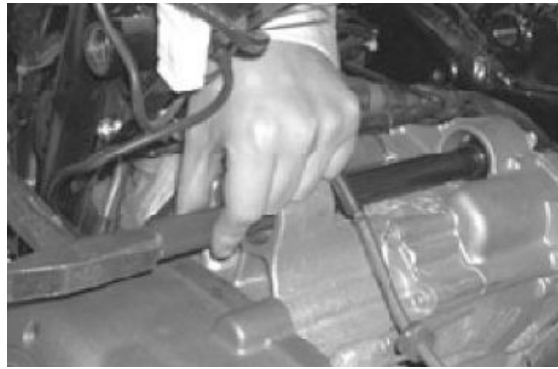

Specific tooling

020363Y 20 mm guide

020375Y Adaptor 28 x 30 mm

020376Y Adaptor handle

Overhaul

- Properly support the swinging arm in the vice.
- Remove the seeger ring.



- Remove the ball bearing bushing.



- Extract the ball bearing using the special tool.

Specific tooling

001467Y017 Driver for OD 36 mm bearings

001467Y034 Extraction pliers for \varnothing 15 mm bearings



- Extract the roller bearing using the special tool.

N.B.

POSITION THE PLIERS FOR EXTRACTING UNDER THE UPPER EDGE OF THE ROLLER BEARING.

Specific tooling

001467Y010 Driver for OD 25 mm bearings


001467Y019 Extraction pliers for ø 18 mm bearings




Refitting

- Lubricate the inside tracks of the bearings on the crankcase.
- Lubricate the roller bearing into the swinging arm.
- Lubricate the bearing connection on the swinging arm/engine pin.

Lubricate the roller bearing connection on the swinging arm/chassis pin.

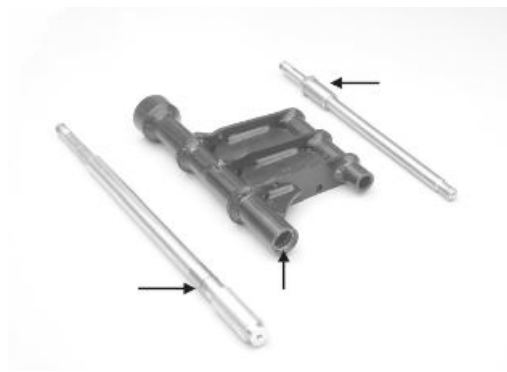

- Insert the spacer bushing in the left bearing "A".
- Assemble the engine connecting pin with the washer "B" and the swinging arm.
- Install the washer and the flanged nut and move them close without tightening.
- Check that the tie rod silent block is free from wear; if not, replace the complete tie rod.
- Check that the 2 tie rod spring pads are in good working order.

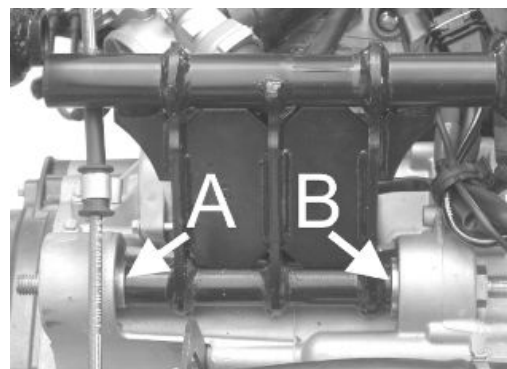

- Assemble the tie rod with the washer and a pad.
- Install the tie rod inserting it on the swinging arm/engine pin and into the bracket welded to the chassis.



N.B.

FOR THIS OPERATION, MOVE THE ENGINE ON THE VEHICLE LONGITUDINAL AXIS.

N.B.

IF YOU REMOVE THE ELECTRIC SYSTEM SUPPORT BRACKET, REINSTALL IT BEFORE INSERTING THE TIE ROD.


- Apply the buffer and the washer to the tie rod and lock it.

Locking torques (N*m)

Upper tie mounting: 33-41 Nm



- Lubricate the shaped washer and place it onto the bearing.
- Insert the chassis mounting pin.
- Restore the axial clearance between swinging arm and chassis tightening the pin to the prescribed torque.
- Tighten the lock nut to the prescribed torque.

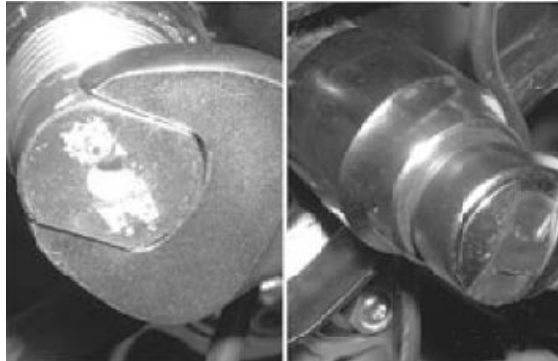

Locking torques (N*m)

bolt securing swinging arm to chassis 14 - 17

Lock nut: 40-50 Nm

- Tighten the right end of the chassis connecting pin to the prescribed torque, using a new nut.

Locking torques (N*m)

RHS chassis pin nut: 66 - 73 Nm




- Use a 19-mm fork wrench to prevent the rotation of the pin connecting the swinging arm to the engine and tighten the right nut (with washer) and the left nut to the prescribed torque.



Locking torques (N*m)

Transmission-side nut: 100 - 120 Nm muffler-side nut: 56 - 70 Nm

- Heat the connections on the engine crankcase and insert the bearings to abutment using the modular punch.
- To install the right bearing, lower the engine.

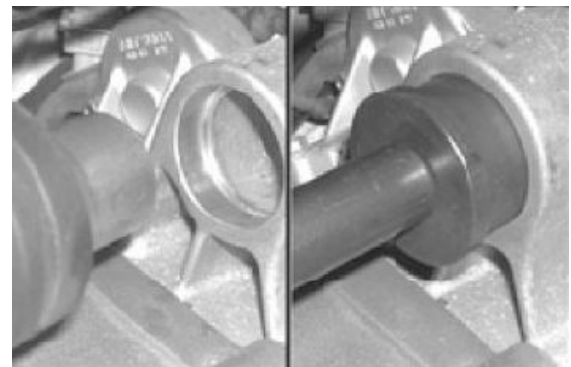

N.B.

WHEN HEATING THE LEFT SEAT MOVE THE HOSE FOR OIL TO THE BRAKE CLAMP AWAY FROM THE ENGINE CRANKCASE. FOR THE RIGHT PART REMOVE AND MOVE AWAY THE BRACKET SUPPORTING THE WIRING.

Specific tooling

- 020151Y Air heater**
- 020359Y 42x47-mm adaptor**
- 020363Y 20 mm guide**
- 020376Y Adaptor handle**

- Insert the spacer on the ball bearing using the special tool.

Specific tooling

- 020357Y 32 x 35 mm adaptor**
- 020362Y 12 mm guide**
- 020376Y Adaptor handle**



- Heat the bearing seat on the swinging arm.
- Insert the bearing to abutment using the special tool.

N.B.

THE BEARING SPACER MUST BE INSERTED FROM THE INSIDE OF THE SWINGING ARM.

N.B.

DO NOT DETERIORATE THE PAINTED SURFACE WHILE WARMING THE SWINGING ARM.


Specific tooling

020151Y Air heater


020376Y Adaptor handle

020362Y 12 mm guide

020357Y 32 x 35 mm adaptor

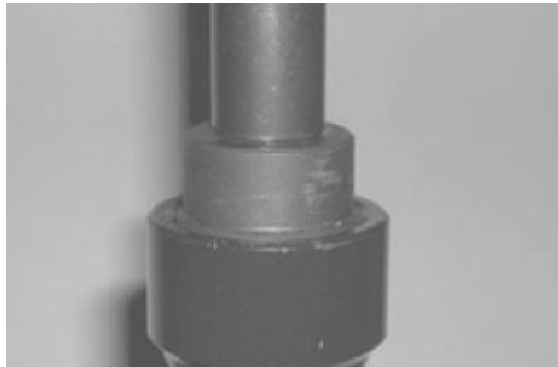

- Install the seeger ring.

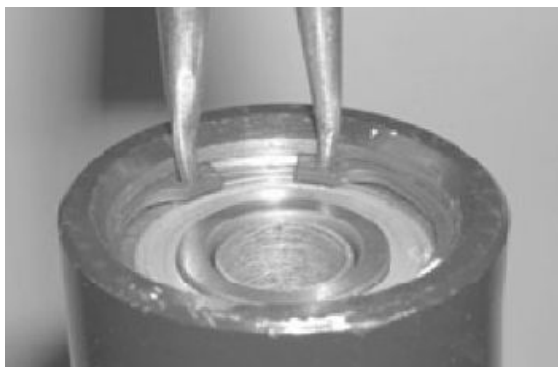

- Install the roller bearing using the special tool.

Specific tooling

020083Y Punch



Shock absorbers

Removal

Proceed as follows:

- Rest the scooter on the central stand;
- Remove the sides according to the removal sequence described in Chapter "Body".

- Slightly raise the engine using a jack to free both shock absorbers;
- Remove the muffler;



- Loosen the shock absorber spring unit fastening screw from the support fixed to the engine and from that fixed to the muffler support;



- Loosen the two top nuts (one by side) mounting the shock absorber spring unit to the chassis and remove the shock absorbers.

**See also**

[Side fairings](#)

Refitting


Carry out the previous operations but in reverse order.

Locking torques (N*m)

Shock absorber lower clamp 33 ÷ 41 Upper shock absorber clamp 33 ÷ 41

Centre-stand

- Remove the two return springs from the centre stand.
- Loosen the fastening nuts.
- Remove the centre stand.
- On refitting tighten the nut to the specified torque.

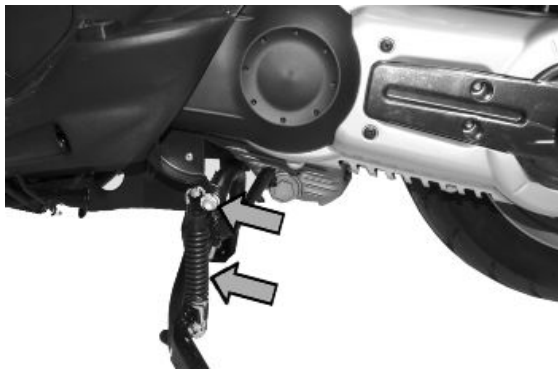

Locking torques (N*m)

Central stand retainers 25 - 30

Side stand

- Release the springs.
- Loosen the nut.
- Extract the screw.

FITTING

- For reassembly, perform the previous operations in the reverse order

Locking torques (N*m)

Side stand fastening bolt 40 - 45 Nm



INDEX OF TOPICS

BRAKING SYSTEM

BRAK SYS

Rear brake calliper

Removal

- Remove the rear wheel.
- Remove the snap ring of the pad retaining pin.



- Using a key, partially slide off the pad retaining pin until the circlip is released.



- Remove the screws fixing the brake calliper to the bracket, then remove the brake calliper complete with pipe.



- Complete the extraction of the pad retention pin, the spring and the pads.

N.B.

IF BRAKE CALLIPER REPLACEMENT OR SERVICE IS NEEDED, BEFORE REMOVING THE CALLIPER CLAMPS TO THE SUPPORT BRACKET, LOOSEN THE OIL JOINT FITTING.

Overhaul

- Remove the rear brake calliper
- Suitably support the brake calliper in a vice
- Remove the two calliper coupling screws as shown in the photograph.



- Remove the two plungers from the calliper body with the aid of short blasts of compressed air through the brake fluid feed holes.
- Remove the dust ring and the O-ring of each half calliper.
- Remove the two O-rings in the right half-calliper.



N.B.

WHEN REMOVING THE O-RINGS, BE CAREFUL NOT TO SCRATCH THE HALF CALLIPER SEATS

- Check that the pistons and their seats show no scratches.
- Wash and blow all the components carefully.
- Fit new sealing rings and dust guards.
- Refit the plungers in their seats being careful to lubricate with brake fluid



- Re-couple the half-callipers and lock the two screws to the prescribed torque

N.B.

TO AVOID DAMAGING THE GASKETS, WASH THE PLIERS COMPONENTS ONLY WITH ALCOHOL. DO NOT USE FUEL OR DERIVATIVES.

Locking torques (N*m)

Brake calliper coupling 30 ÷ 33

Refitting

- The rear break calliper can be recognised by its \varnothing 34 mm plungers and the bleed screw as shown in the figure.



- Insert the break pads in the pliers according to the arrow that indicates the break disc direction of rotation as shown in the photograph.



- Insert the pad fixing pin and the retention spring being careful to position its ends pointing towards the bleed screw as shown in the photograph.




- Insert the circlips on the pad fixing pin.

N.B.

FAILURE TO RESPECT THE PAD POSITIONING REQUIREMENTS WITH RESPECT TO THE DIRECTION OF ROTATION COULD INHIBIT PROPER BRAKE FUNCTION AND QUIETNESS.

- Keep the brake pads in contact with the plungers and insert the calliper in the brake disc.
- Fix the calliper to the support with the two screws with spring washer to the prescribed torque as shown in the photograph.

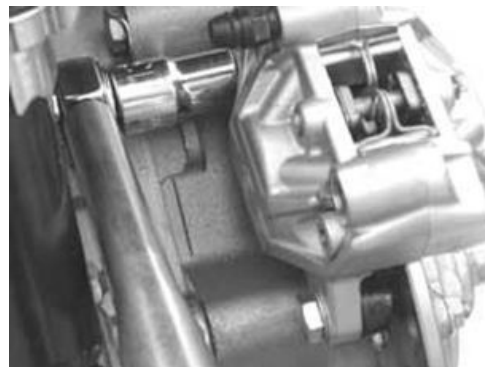

- Fix the brake pipe to calliper fitting and tighten it to the prescribed torque.

- Bleed the system and refit the rear wheel

N.B.

IF THE REAR BREAK CALLIPER SUPPORT PLATE HAS BEEN REMOVED, UPON REFITTING IT IS NECESSARY TO FOLD THE EDGES OF THE WASHER ON THE HEAD OF THE SCREWS FIXING THE PLATE TO THE CRANKCASE.

Locking torques (N*m)

Pipe / brake calliper fitting 16 ÷ 20 Rear break calliper to chassis retainer 20 ÷ 25

Front brake calliper

Removal

- Remove the two front break calliper retainers to the support plate as shown in the photograph

N.B.

WHEN A PROCEDURE IS PLANNED INCLUDING THE SERVICE OR REPLACEMENT OF THE CALLIPER, FIRST LOOSEN THE FITTING CONNECTING THE PIPE TO THE BRAKE CALLIPER



Overhaul

- Remove the rear brake calliper.
- Suitably support the brake calliper in a vice
- Remove the two calliper coupling screws as shown in the photograph
- Remove the two plungers from the calliper body with the aid of short blasts of compressed air through the brake fluid feed holes
- Remove the dust guard and the sealing ring of each half-calliper.
- Remove the two sealing rings in the right half-calliper.

N.B.

WHEN REMOVING THE O-RINGS, BE CAREFUL NOT TO SCRATCH THE HALF CALLIPER SEATS



- Check that the plungers and their seats show no scratches.
- Wash and blow all the components carefully
- Fit new sealing rings and dust guards
- Refit the plungers in their seats being careful to lubricate with brake fluid
- Re-couple the half-callipers and lock the two screws to the prescribed torque



Locking torques (N*m)

Brake calliper coupling 30 ÷ 33



Refitting

- The front left brake calliper is recognisable by the Ø 32 mm plungers whereas the front right calliper is recognisable by the Ø 34 mm plungers
- Fix the calliper to the support bracket with the two screws with spring washer to the prescribed torque as shown in the photograph
- Fix the brake pipe to calliper fitting and tighten it to the prescribed torque, orientating the fitting parallel to the horizontal axis, as shown in the photograph




Locking torques (N*m)

Pipe / brake calliper fitting 16 ÷ 20

Rear brake disc

Removal

- Remove the rear brake calliper
- Remove the brake disc with hub from the wheel axle.
- To remove the brake disc from the hub, support the unit in a vice and tighten the 5 fastening bolts with self-locking nuts.

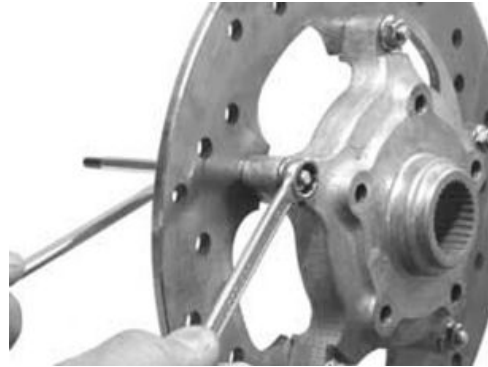

Refitting

- To reassemble the brake disc on the hub, carry out the removal operations in the reverse order arranging the brake disc on the hub on the side opposed the wheel keying
- Follow the direction of rotation shown by the arrow and tighten to the prescribed torque.
- Lubricate the seat of the wheel bearing shaft on the manifold support with the recommended grease.



N.B.

APPLYING AN EXCESSIVE QUANTITY OF GREASE MAY IMPAIR THE BRAKE PERFORMANCE

Recommended products

AGIP GREASE PV2 Grease for the steering bearings, pin seats and swinging arm

White anhydrous-calcium based protective grease for roller bearings; temperature range between -20 C and +120 C; NLGI 2; ISO-L-XBCIB2.


- Insert the hub - disc assembly in the wheel axle.

Locking torques (N*m)

Rear brake disc mounting 11 ÷ 13

Disc Inspection

- Remove the rear brake calliper.
- Use the micrometer to check the thickness of the disc as shown in the photograph

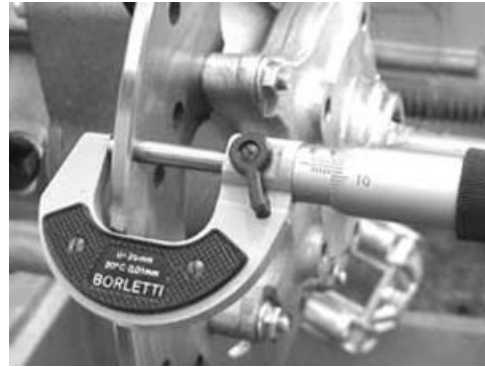

Characteristic

Standard thickness:

5 +02-01mm

- Repeat the measurement in at least 6 points on the disc
- Check that the measurement does not deviate over 0.1 mm
- Check that the brake disc assembly rotates smoothly using the appropriate tool fixed onto the brake calliper as shown in the photograph.
- Suitably fix the flange to the wheel axle with the original nut and spacer and a \varnothing 17 mm bearing



N.B.

SO AS NOT TO GET A DISTORTED READING, CAUSE THE DRIVEN PULLEY SHAFT TO TURN IN ORDER TO ROTATE THE DISC.

Specific tooling

020335Y Magnetic support for dial gauge

Characteristic

Max. deviation allowed:

0.1 mm

- If incorrect values are detected, replace the disc. If the problem persists, replace the hub.

Front brake disc

Removal

- Remove the front wheel.
- Adequately support the front wheel and remove the brake disc operating on the five screws shown in the photograph.



Refitting

- Carry out the removal operations but in the reverse order being careful to respect the disc direction of rotation shown by the arrow printed on it.
- Tighten the 5 screws to the prescribed torque.



Locking torques (N*m)

chassis front cross-member upper screws 6 - 10

Disc Inspection

- Use the micrometer to check the thickness of the disc as shown in the photograph

Characteristic

Standard thickness:

4 +02-01mm



- Repeat the measurement in at least 6 points on the disc
- Check that the measurement does not deviate over 0.1 mm
- Remove the front brake calliper
- Place the magnetic base with the dial gauge on the break calliper support bracket as shown in the photograph
- Place the dial gauge on the disc outer edge
- Lift the front wheel, make it turn and check the disc deviation



Specific tooling

020335Y Magnetic support for dial gauge

Characteristic

Max. deviation allowed:



0.1 mm

Front brake pads

Removal

- Remove the front brake calliper
- Remove the circlip of the pad retaining pin as shown in the photograph
- Using a key remove the pad retaining pin, then remove the brake pads
- Check that the pads show no flaws or warping. Otherwise, replace them.
- Check that the thickness of the friction material is over 1.5 mm. Otherwise, replace it



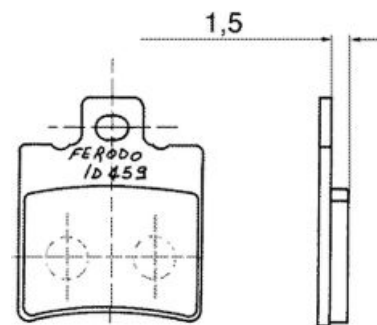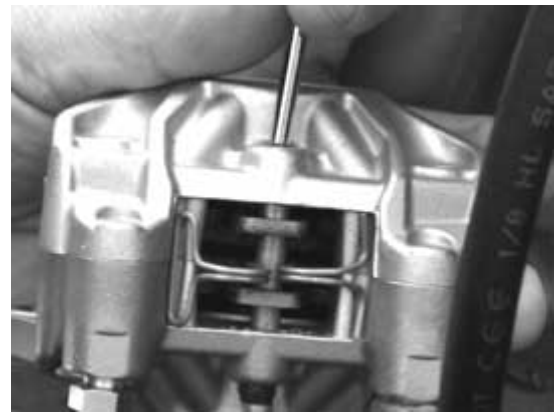

Refitting


- Insert the break pad in the calliper as shown in the photograph
- Insert the pad fixing pin and the retention spring being careful to position its ends pointing towards the bleed screw as shown in the photograph
- Insert the circlips on the break pad fixing pin
- Keep the brake pad in contact with the plungers and insert the calliper in the brake disc.



Rear brake pads



Removal

- Remove the rear brake calliper
- Remove the brake pad and check there are no faults or warping. If it does, replace it.
- Check that the thickness of the friction material is over 1.5 mm. Otherwise, replace it.

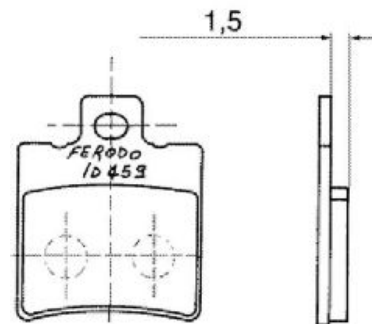

Refitting

- Insert the brake pads according to the brake disc direction of rotation as shown by the arrow indicated on the damping pad.
- Insert the fixing pin being careful to position the clip with its ends pointing towards the bleed screw as shown in the photograph.
- Insert the retaining circlips on pin.
- Fix the rear brake calliper to the bracket and tighten the 2 screws to the prescribed torque.

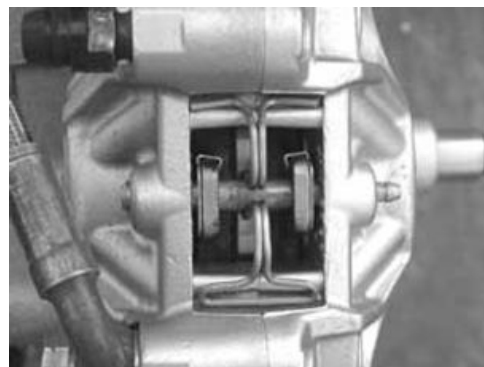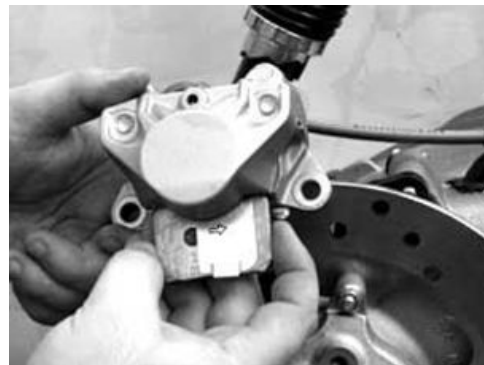

Locking torques (N*m)

Rear break calliper to chassis retainer 20 ÷ 25

Fill

Rear - combined

To bleed the integral system, first bleed the rear break calliper.

- Remove the rubber cap from the bleed screw and insert a rubber pipe to recover the brake fluid.



- With the left-hand brake lever, load the system and bring it up to the required pressure.
- Keeping the left-hand brake lever pulled, loosen the bleed screw to purge the air. Then tighten the bleed screw.



- Repeat the operation until only brake fluid comes out of the rubber pipe.
- Then repeat the bleed operations for both the regulating valve and the front left calliper.



- To access the regulating valve, it is necessary to remove the front shield.
- Top up the brake fluid to the right level in the tank.

N.B.

DURING THE BLEEDING OPERATIONS, MAKE SURE THE BRAKE FLUID DOES NOT COME INTO CONTACT WITH THE BODYWORK SO AS NOT TO DAMAGE IT. FURTHERMORE, DURING THE BLEEDING OPERATIONS REGARDING THE BRAKE CALLIPERS, MAKE SURE THE BRAKE FLUID DOES NOT COME INTO CONTACT WITH THE DISC BRAKES AND WITH THE BRAKE PADS. FAILURE TO COMPLY WITH THIS NORM WILL ENDANGER THE PROPER WORKING AND EFFICIENCY OF THE BRAKING SYSTEM

If necessary, bleeding can be done using a special vacuum pump

Specific tooling

020329Y MityVac vacuum-operated pump

Locking torques (N*m)

Calliper circuit drain fitting 12 - 16

Front

- Remove the rubber hood from the bleed screw.
- Insert a rubber pipe in the bleed screw to permit the brake fluid to be recovered.



- With the right-hand brake lever, load the system and bring it up to the required pressure.
- Keeping the right-hand brake lever pulled, loosen the bleed screw to purge the air. Then tighten the bleed screw.
- Repeat the operation until only brake fluid comes out of the rubber pipe.
- Remove the fluid recovery pipe and refit the rubber hood over the bleed screw.
- Top up the brake fluid to the right level in the tank.

N.B.

DURING THE BLEEDING OPERATIONS, MAKE SURE THE BRAKE FLUID DOES NOT COME INTO CONTACT WITH THE BODYWORK SO AS NOT TO DAMAGE IT. FURTHERMORE, DURING THE BLEEDING OPERATIONS REGARDING THE BRAKE CALLIPERS, MAKE SURE THE BRAKE FLUID DOES NOT COME INTO CONTACT WITH THE DISC BRAKES AND WITH THE BRAKE PADS. FAILURE TO COMPLY WITH THIS NORM WILL ENDANGER THE PROPER WORKING AND EFFICIENCY OF THE BRAKING SYSTEM

If necessary, bleeding can be done using a special vacuum pump

Specific tooling

020329Y MityVac vacuum-operated pump

Locking torques (N*m)

Calliper circuit drain fitting 12 - 16

Brake fluid level check

- Rest the scooter on a flat ground and on the centre stand.
- Check the brake fluid level via the special window located on the pumps.

N.B.

THE LEVEL TENDS TO DROP AS THE BRAKE PADS GET WORN, A MINIMUM LEVEL SHOULD NOT BE REACHED. IF THE LEVEL IS TOO LOW, CHECK AND FIX THE SYSTEM SEALS, IF REQUIRED. TOP UP THE PUMP TANK, IF REQUIRED, CONSIDERING THAT



THE "MAX." LEVEL MUST ONLY BE OBTAINED WITH NEW PADS.

Top up

CAUTION

ONLY USE DOT 4-CLASSIFIED BRAKE FLUID.

- Remove the rear-view mirror undoing the nut «A» and remove the plastic cover «B».
- Undo the two screws «C» and collect tank cap.

CAUTION

MAKE SURE THE BRAKE FLUID DOES NOT GET INTO YOUR EYES OR ON YOUR SKIN OR CLOTHES. IF THIS HAPPENS ACCIDENTALLY, WASH WITH WATER.


WARNING

BRAKE CIRCUIT FLUID IS VERY CORROSIVE; DO NOT LET IT COME INTO CONTACT WITH THE PAINTED PARTS.

Recommended products

AGIP BRAKE 4 Brake fluid


FMVSS DOT4 Synthetic fluid

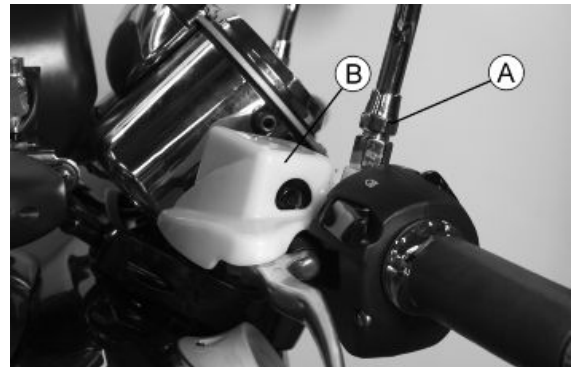

Front brake pump

Removal

- Remove the rear-view mirror undoing the nut «A» and remove the plastic cover «B».

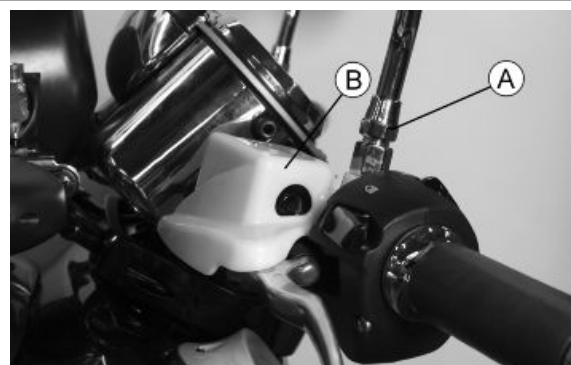

- Remove the two fixing screws from the brake pump to the handlebar indicated in the photograph.



- Remove the oil pipe fitting from the pump undoing the screw indicated in the figure.
- Remove the stop light switch connector



BRAKE PUMP TECHNICAL DATA

Specification	Desc./Quantity
Pump right piston diameter:	Ø 12
Pump left piston diameter:	Ø 14

Refitting

To refit, carry out the removal operations but in reverse order, observing the specified torques.


Locking torques (N*m)

Handlebar pump 7 ÷ 10 Oil pipe joint to the pump: 20 - 25

INDEX OF TOPICS

COOLING SYSTEM

COOL SYS

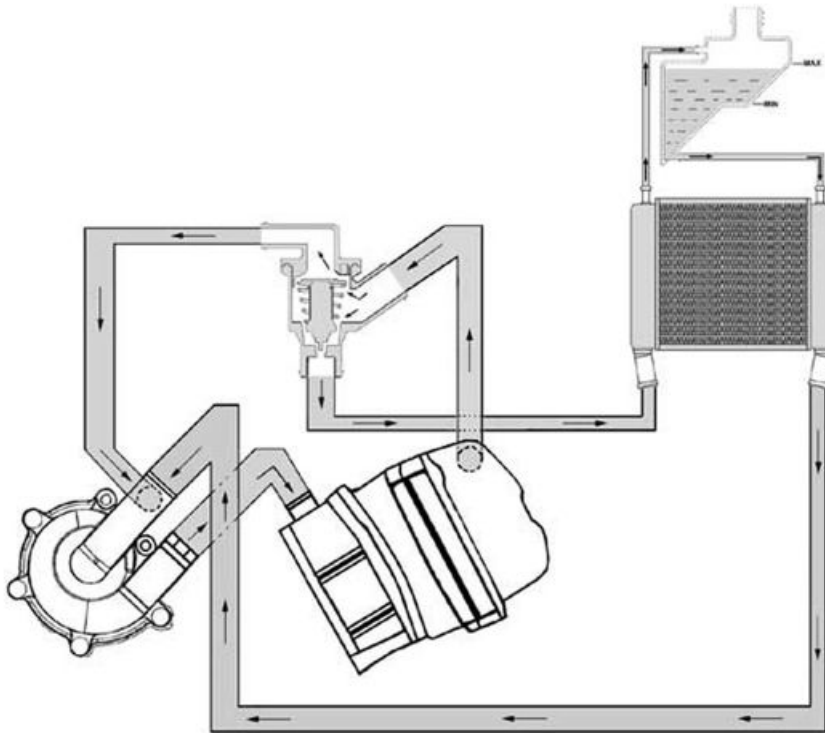Circuit diagram


The cooling system is of the forced circulation type, with continuous venting and air pressurisation.

Circulation takes place by a centrifugal pump driven by the countershaft.

The pump delivers the coolant to the thermal unit.

The two-way thermostat support is connected in output to the head. One way is connected to the pump and the other to the radiator (of the horizontal circulation type).

The radiator output is directly connected to the pump.

The expansion tank is connected in parallel to the radiator.

The radiator hot box is connected to the upper side of the expansion tank (in air).

The radiator cold box is connected to the lower side of the expansion tank (in the fluid).

When the engine is cold, the thermostat output to the radiator is closed, even though there is still a little flow for de-aeration obtained by a hole into the closing plate.

In this case, the circulation into the thermal unit is active to ensure an even heating.

Once the working temperature has been reached, the main circulation on radiator and expansion tank starts.

With the small openings in the thermostat there is a flow overlapping (recirculation and main one).

When the temperature is higher, the thermostat allows excluding the recirculation to favour the main circulation.

In this case, the flow is consistent in the expansion tank as well, and this ensures a continuous automatic venting.

For the system venting during the circuit filling step, there is a special union at the top of the head (see filling rules).

To ensure cooling in case of poor dynamic ventilation, there is an electric fan controlled by the injection system.

TECHNICAL SPECIFICATIONS

Specification	Desc./Quantity
Cooling system capacity	1.7 l
Prescribed fluid	Mixture of 50% water and 50% fluid for sealed circuits
Sealing pressure	Cap calibrated at 0.9 bar

THERMOSTAT

Specification	Desc./Quantity
Type	Wax-type, with deviator
Starts opening	82 ± 2°C

ELECTRIC VENTILATION

Specification	Desc./Quantity
Type	With piston
Electric ventilation starts at	105°C
Electric ventilation stops at	100°C

WATER PUMP

Specification	Desc./Quantity
Type	Centrifugal
Control	Coaxial at the countershaft

RADIATOR

Specification	Desc./Quantity
Type	Aluminium, with horizontal circulation

EXPANSION TANK

Specification	Desc./Quantity
Calibration	Automatic bleeding, in parallel with the radiator

Electric fan check

- Connect the injection diagnostic tester and select the menu on the "ERRORS" function.
- Check any failures in the electric fan control circuit (see "Injection" chapter)

Specific tooling

020460Y Scooter diagnosis and tester

- Select the menu on the "ACTIVE DIAGNOSIS" function and start the electric fan operation simulation (see "Injection" chapter).
- If the electric fan is certainly efficient, check the ventilation start and end temperature.
- Select the "PARAMETERS" function in the menu to display the coolant temperature.
- If non-conforming values are detected, replace the injection control unit (see "Injection" chapter).

- If the analogue instrument temperature is close to the red zone, but the degrees indicated by the diagnostic tester is below the electric ventilation temperature, check the temperature sensor on the head and the relevant injection circuit (see Injection chapter);

N.B.

THE ELECTRIC FAN TEMPERATURE AT 105° C CAN ONLY BE MANAGED BY A SYSTEM SUPPLIED WITH A 50% MIXTURE AND PRESSURISED AT 0.9 BAR.

Characteristic

Electric fan start

105°C

Electric fan stop

100°C

- Avoid starting the engine without pressurisation since it may reach the boiling temperature before the electric ventilation starts.
- In case of increase of the electric ventilation time, check the thermostat opening temperature and check that the coolant density is correct. The optimum density is obtained with a 50% water and cooling circuit fluid mixture.

System sealing check

- Check the proper circuit sealing when it is in pressure and at the temperature.
- For a more accurate check, wait until the system has cooled down since small leaks may not be visible due to evaporation
- The water pump is provided with a drainage hole in case of leaks from the cooling system mechanical seal, or from the shaft sealing oil guard.



- If coolant or oil leaks are detected, inspect the pump (see Flywheel cover chapter).

N.B.

DO NOT USE OILS OR GREASES WHILE MOUNTING THE COOLING SYSTEM. FAILURE TO OBSERVE THIS REGULATION CAN CAUSE IRREVERSIBLE DEFORMATION TO THE SEALING GASKETS.

Coolant replacement


CAUTION



THE RECOMMENDED COOLANT MUST BE USED FOR TOP-UPS TO AVOID DAMAGING THE ENGINE.


System top-up rules

- Fill the system to reach a level ranging between the MIX and MAX levels indicated in the expansion tank filler.
- Do not close the expansion tank with the cap.

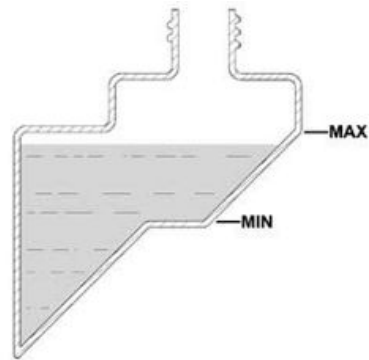**Recommended products****AGIP ANTIFREEZE SUPER Coolant**

-

- Use a transparent hose to connect the venting union with the expansion tank filler.
- Loosen the vent and start the engine.

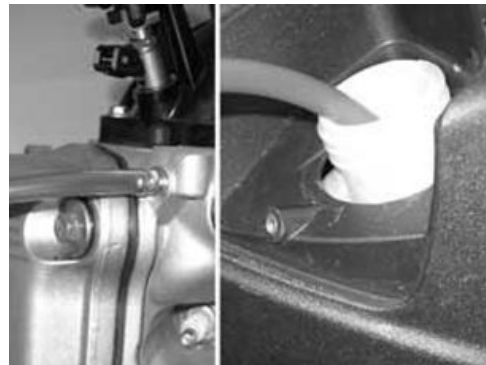

- Keep it open until the air has been fully vented.
- Close the bleed screw.
- Stop the engine.
- Restore the level into the expansion tank and tighten the cap.
- Start the engine and let it warm up to reach the electric ventilation temperature.
- Stop the engine.
- Restore the level with cold engine.

CAUTION

ELECTRIC VENTILATION IS CONTROLLED BY THE TEMPERATURE MEASURED AT THE HEAD. THE ELECTRIC VENTILATION START DOES NOT MEAN THAT THE VENTING HAS BEEN COMPLETED.

VENTING IS COMPLETE WHEN THE EXPANSION TANK TEMPERATURE RISES.

Water pump - overhaul

In case of noise or fluid leaks from the water pump drainage hole, inspect the pump as described in the "Flywheel cover" chapter.


Proceed to carry out a few preliminary operations as described below:

- Place the vehicle on its centre stand and on flat ground.
- Remove the right footrest as described in the "Body" chapter.
- Remove the muffler to access the flywheel cover, as described in the "Engine" chapter.
- Empty the cooling system, removing the hoses located on the water pump cover and the loading cap located on the expansion tank.

CAUTION

THIS OPERATION MUST BE CARRIED OUT WHEN THE ENGINE IS COLD.

- Remove the water pump cover shown in the figure by loosening the 6 fastening screws.
- Follow the instructions provided in the "Engine" chapter to partly discharge the system and to inspect the pump.
- Once the fault has been fixed and all components have been replaced, fill and drain the system again.

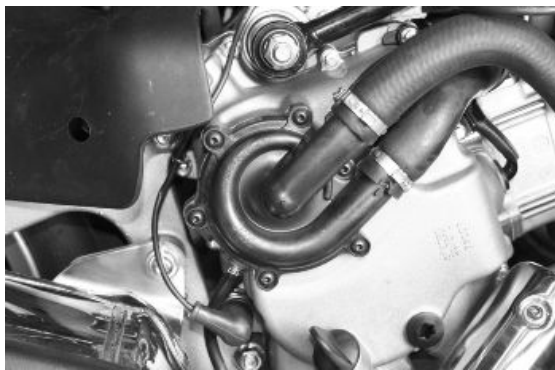**N.B.**

FOR CHANGING THE COOLANT AND BLEEDING THE SYSTEM, SEE CHAPTER "COOLING SYSTEM".

Characteristic**Cooling system**

approx. 1.7 litres

Water pump ceramic seal

Our Leader, Quasar, and Master liquid cooled engines are equipped with water pumps fitted with the ceramic seal in the subject. This component is intended to guarantee the leak tightness of the coolant in relation to the pump shaft. The seal achieved via two special ceramics, a static one and a spinning one, kept in contact by the thrust of a spring, coaxially mounted onto the pump shaft. The efficiency of this system is guaranteed by the accurate machining and cleaning of the components as they are fitted; in any case, ceramic seals are subjected to a running in period. During this period (1,000 ± 1,500 km), there may be small leaks through draining holes, which remain visible on the aluminium crankcase.

This phenomenon is particularly visible there where the hole is more exposed (Quasar and Master). In such cases we recommend cleaning the casing in order to be able to check again for leaks after a distance of more than 1500 km. If leaks continue or in the event of real losses, the ceramic seal should be replaced. For these operations, observe the tools and instructions given in the relevant service station manuals.

See also

[Engine](#)
[Flywheel cover](#)

Thermostat

Check

Before proceeding to disassembly, carry out a few checks:

- Connect the diagnostic tester and select the "PARAMETERS" function (see "Injection" chapter);
- Start the cold engine and let it warm up.
- Make sure that there is a sudden increase of temperature.



N.B.

THERE SHOULD BE A SLIGHT AND GRADUAL HEATING CAUSED BY A SMALL PASSAGE ON THE THERMOSTAT TO THE OFF POSITION.

Specific tooling

020460Y Scooter diagnosis and tester

- Check the temperature read by the diagnostic tester.
- If opening occurs at different temperatures, check the thermostat.
- Remove the thermostat as described in the flywheel cover paragraph.

Characteristic

Thermostat opening start

approx. $82 \pm 2^{\circ}\text{C}$

- Visually check that the thermostat exhibits no mechanical faults.
- Prepare a metal container with approx. 1 litre of water.
- Immerse the thermostat, and keep it in the centre of the container.
- Immerse the multimeter thermometer probe close to the thermostat.
- Heat up the container using the thermal gun.
- Heat the water and periodically pull the thermostat out until its opening becomes visible.
- Insert a thin copper wire between the seat and the thermostat closing plate.
- Keep the wire into position until locking up is perceived.



- Let water and thermostat cool down.
- Progressively heat the water keeping the thermostat immersed by the wire.
- Check the opening temperature when the thermostat releases from the wire.

Specific tooling

020331Y Digital multimeter

020151Y Air heater

- Heat to obtain the thermostat full opening
- If incorrect values are detected, replace the thermostat.
- Repeat the filling and venting procedure.

N.B.

HEATING SHOULD BE GRADUAL.

N.B.

AVOID CONTACT BETWEEN THERMOSTAT AND CONTAINER FOR A CORRECT TEST PERFORMANCE.

diagnosis

Excessive system pressure

1 - Check the expansion tank cap efficiency.

N.B.

THE CAP IS EQUIPPED WITH A PRESSURE RELIEF VALVE CALIBRATED AT 0.9 BAR.

There is also a valve that must allow air inlet during the cooling step.

YES go to 2 NO go to 3

2 - Check the head gasket seal (see «Thermal group and timing system» chapter)

3 - Replace the cap.

Cooling fluid consumption

1 - Check the system outside seals as described above.

YES go to 2 NO go to 3

2 - Check the head gasket seal (see «Thermal unit and timing system» chapter)

- If water leaks are detected in the engine oil, inspect the pad on the head cooling circuit.

3 - Fix any damaged seals.

Oil in the fluid

1 - Oil into the coolant.

YES go to 2

2 - Check the head gasket seal (see «Thermal group and timing system» chapter)

INDEX OF TOPICS

CHASSIS

CHAS

Seat

- To remove the saddle, loosen the three screws shown in the figure.




Side fairings

- Remove side bumpers by removing the mounting screws shown in the figure (one on each side).



Rear rack

- Remove the battery cover.
- Undo the screw indicated in the figure placed on the bottom of the luggage rack and remove the plastic cover.
- Remove the three screws fixing the luggage rack fixing to the frame;

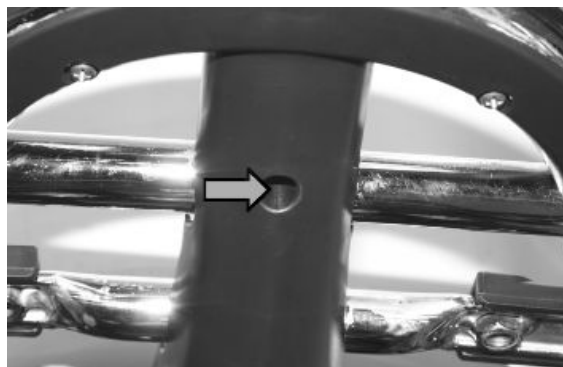

Instrument panel

- Remove the front shield.
- Remove the odometer cable.




- Release the cable harness of the instrument panel.
- Undo the three screws and remove the instrument panel.




Headlight assy.

- Operating from both sides, remove the two fixing screws as shown in the figure and detach the connector.

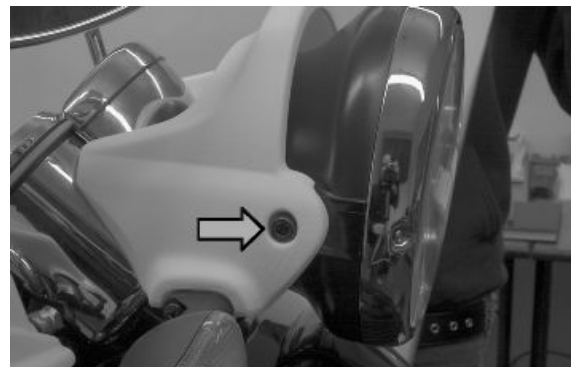

Frame central cover

- Open the fuel tank access port.
- Loosen the 4 screws shown in the figure.
- Temporarily remove the fuel tank cap and the underlying rubber mat.
- Remove the chassis central cover by sliding it from the rear side of the scooter.

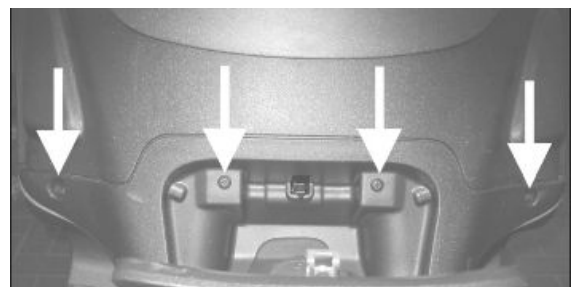


er and disconnecting it from the door opening transmission.

Legshield


- Remove Piaggio badge using a screwdriver being careful not to damage the front shield.



- Remove the screw shown in the figure.

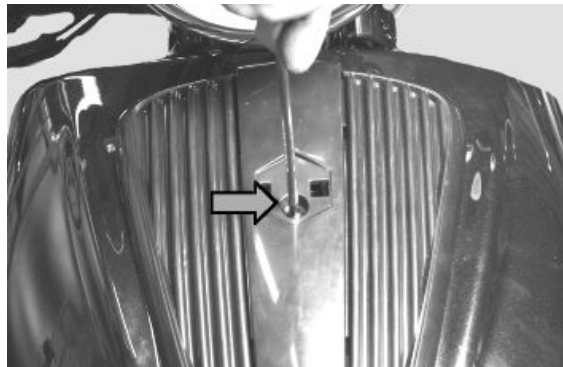

- Remove the two lower fixing screws shown in the figure.

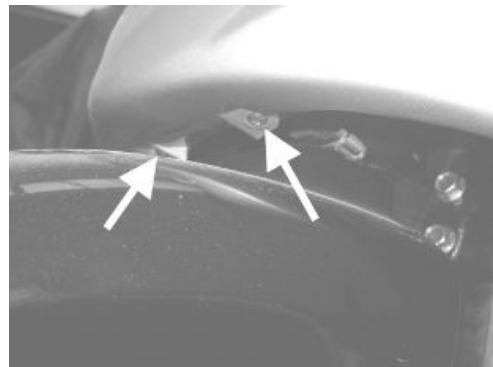

- Remove the screw placed near the fuel gauge.




- Remove the expansion tank flap.



- Remove the fixing screw shown in the figure.




- Remove the central cover.
- Remove the two lower retainers indicated in the figure.
- Remove the whole front shield.

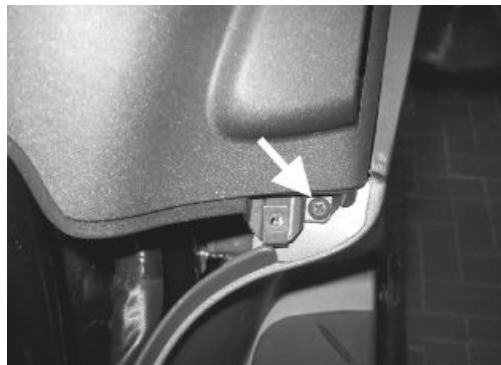


Knee-guard


- Remove the front shield.
- Remove the central frame cover.
- Release the rubber cap from the fuse box and, undoing the two screws indicated in the figure, remove the fuse box.

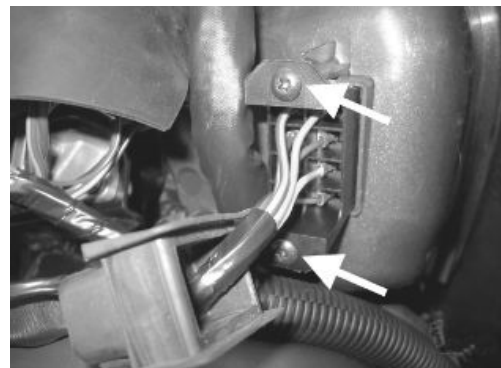

-
- Disconnect the connector from the fuel indicator.

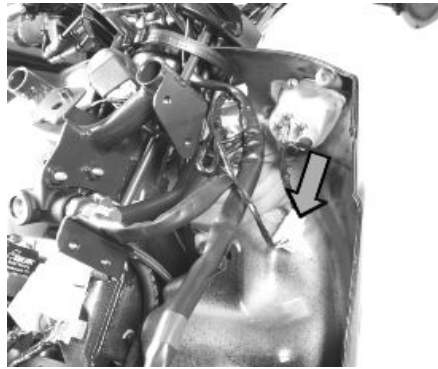

-
- Remove the expansion tank fixing screw, inside the glove-box.

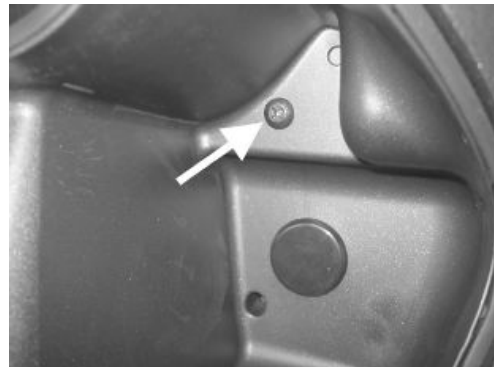


-
- Remove the shield back plate central fixing screw.



-
- Remove the two transmissions (saddle opening and fuel tank lid opening).



- Remove the cover and rubber gasket from the expansion tank filler.
- Detach the shield back plate and release the expansion tank filler from the hole on the shield back plate.
- Remove the shield back plate.

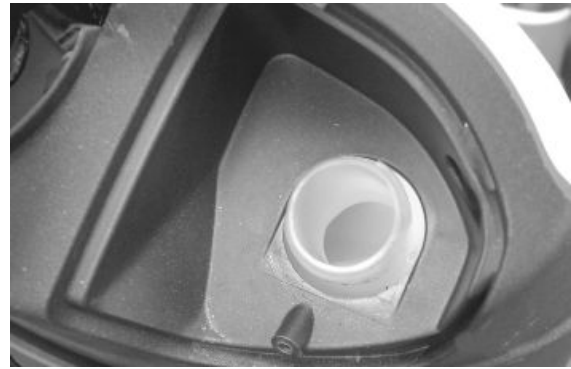


Removing the ignition key-switch when on *off*

- Remove the rear shield.
- Remove the immobilizer aerial shown in the figure.



- Lightly push the master-cylinder and extract the lock from the notch shown in the figure.
- Hence extract the master-cylinder complete with the lock body.

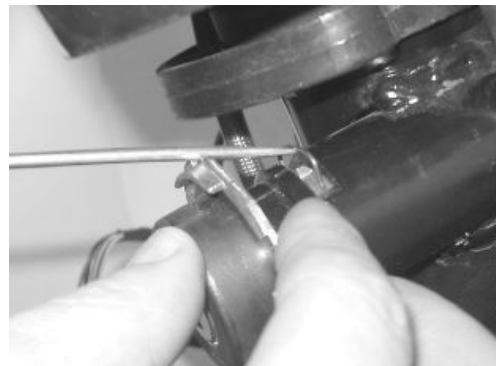

- To refit place the spring on the right side hole.
- Insert the master-cylinder and the lock body and, using a pair of pliers, drive the stop spring until it stops.




Removing the ignition key-switch when on *lock*

In "Lock" and "ON" position, the cylinder locking spring cannot be accessed. Drill the clip as shown in the figure to eject the lock cylinder.

N.B.

FOR REASSEMBLY FROM THIS POSITION, RELEASE THE STEERING WHEEL AND SET THE LOCK BODY (INSIDE AND OUTSIDE PART) TO "OFF". THEN, PROCEED AS DESCRIBED IN PARAGRAPH REMOVAL, LOCK IN OFF POSITION.

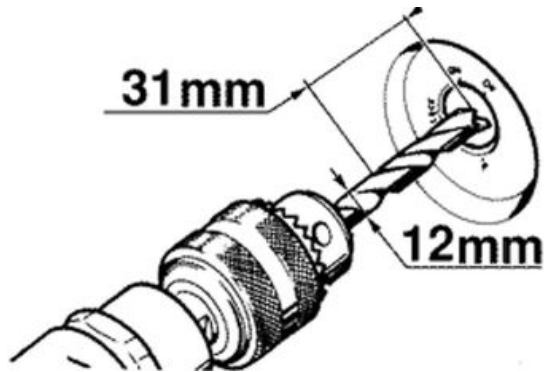

See also

[Removing the ignition key-switch when on *off*](#)

Taillight assy.


- Remove the two side bumpers.
- Remove the two side securing screws from the light unit shown in the figure.



- Remove the rear luggage rack plastic cover removing the screw shown and undo the three screws fixing the luggage rack.




- Undo the screw «A».
- Detach the rear light unit and disconnect the electrical connector.

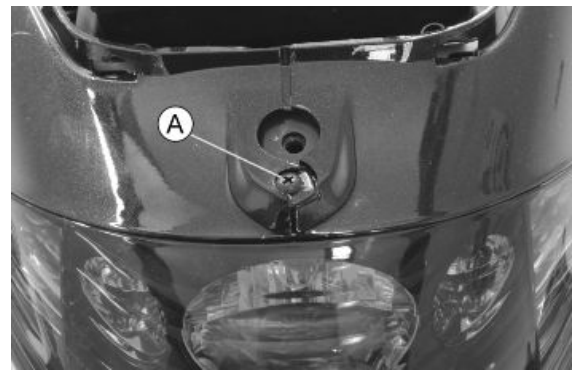


Footrest

- Remove the central cover.
- Remove the six screws shown in the figure.

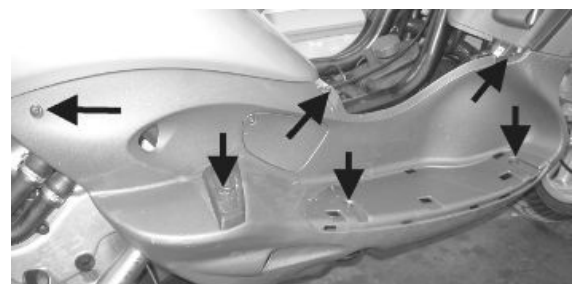

- Remove the three retainers shown in the figure.

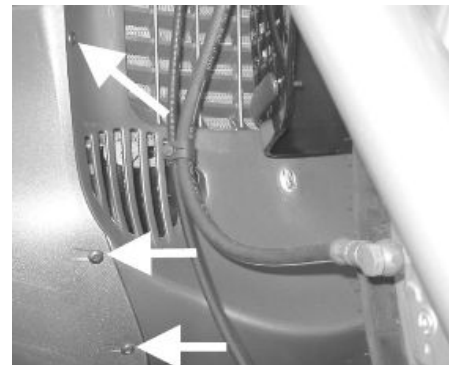

- Remove the diagnosis socket (RHS footrest only) from the side engine inspection port and remove the complete footrest.


Side fairings

Remove the saddle.

- Remove the under-saddle cover by loosening the mounting screw shown in the figure.
- Remove the central cover.
- Remove the rear light unit.
- - Remove the rear luggage rack.



- Remove the three front side mounting screws shown in the figure.

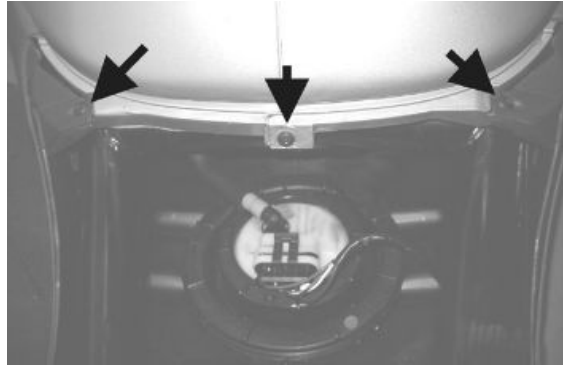

- Remove the rear side mounting screw shown in the figure.




- Remove the screw shown in the figure.



- Remove the two fairing retaining screws shown in the figure.

CAUTION


THE TWO SCREWS SHOWN IN THE FIGURE HAVE DIFFERENT LENGTH. USE THE SHORTER SCREW FOR SIDE MOUNTING SINCE THE LONGER ONE WOULD DAMAGE THE UNDER-SADDLE COMPARTMENT INSIDE WALL.

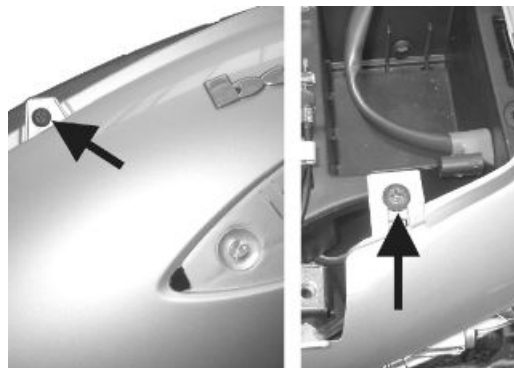


- Remove the plastic parts of the footrests and the sides.

License plate holder

- Remove the side panels
- Remove the side retainers from the licence plate holder tail highlighted in the figure.

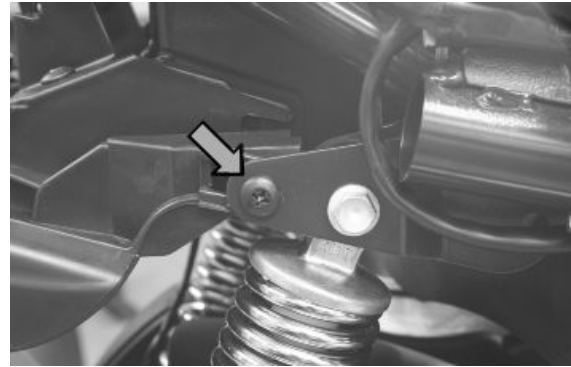

- Remove the two upper retainers highlighted in the figure.

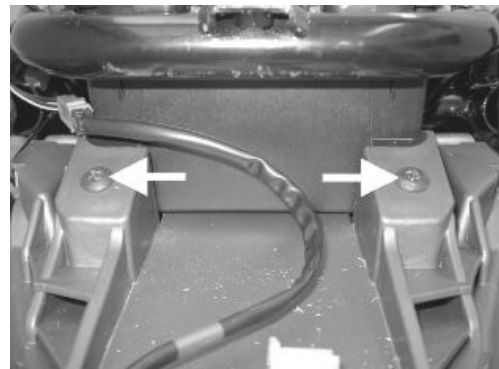


- Remove the two internal retainers to the battery compartment.
- Detach the electrical wiring.
- Remove the whole licence plate holder support.

Air filter

- Remove the two mounting screws shown in the figure.

UPON REASSEMBLY, THE SHORTER SCREW MUST BE INSERTED INTO THE REAR SIDE.

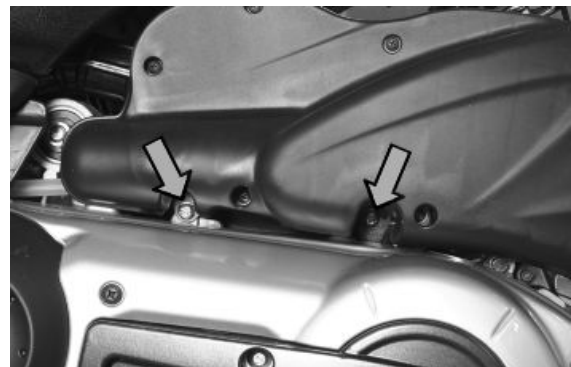

- Remove the screw fixing the filter to the bracket.



- Release the condensate exhaust pipe.



- Loosen the intake hose screw band.




- Loosen the blow-by pipe band.
- Pull out the complete air filter box.




Rear mudguard

- Remove the two screws fixing the air filter to the engine.

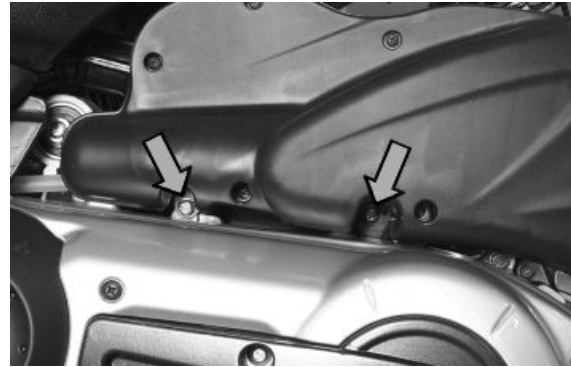

- Disconnect the rear break pipes retaining clamp
- Remove the two retainers indicated in the figure.
- Remove the right side mudguard

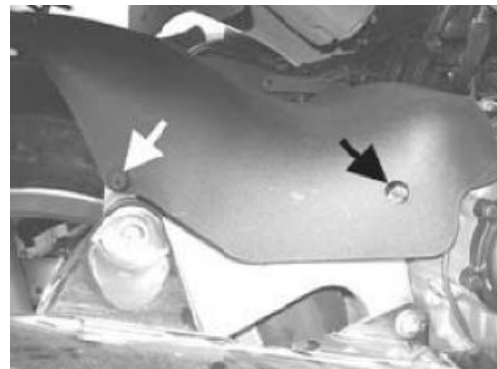


Helmet bay

- Remove the side panels
- Remove the licence plate holder tail.
- Remove the saddle opening control primary transmission.
- Remove the internal light.
- Remove the saddle light button connections.



- Remove the plug socket connection.

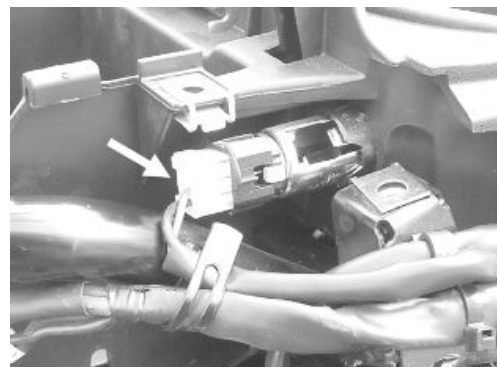


- Remove the start-up remote control switch securing screw.




- Disconnect the two voltage regulator connectors (three-phase alternating and direct) and release the cable harness.

Releasing the six retainers remove the helmet compartment together with the voltage regulator.

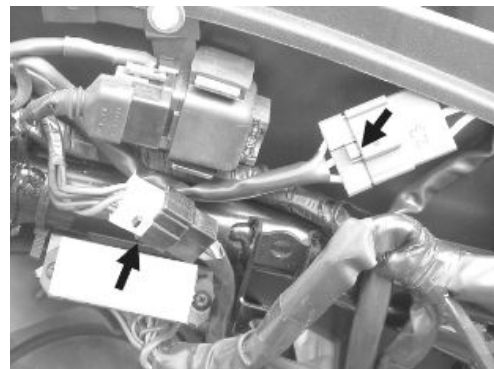

spoiler

- Slide off the front fork together with the wheel and the mudguard.
- Remove the retainers between the footrests indicated in the figure.

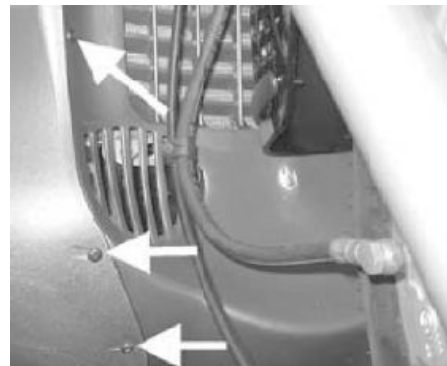

- Remove the upper screw and the two lower screws fixing the spoiler.





Fuel tank

- - Remove the front shield.
- Remove the footrest.
- Remove the upper retainer and the two lower retainers of the spoiler.

N.B.

THIS OPERATION SHOULD PREFERABLY BE PERFORMED WITH THE TANK EMPTY.




- Protect the front mudguard and the radiator to avoid scratching and/or damaging them, then move the spoiler towards the mudguard and turn the handlebars completely to the right or left to gain access to the area under the tank.




- Disconnect the electric connection on the pump and the fuel delivery pipes.

N.B.

PAY ATTENTION WHEN DISCONNECTING THE FUEL PIPES AS EXERTING EXCESSIVE FORCE COULD DAMAGE THE PLASTIC INSERTS ON THE PUMP BODY. UPON REASSEMBLY, IT IS THEREFORE NECESSARY TO SLIGHTLY PRESS THE PIPES AND THE RETAINING RING TOWARDS THE PUMP; THEN KEEP THE RING PRESSED AND PULL THE COUPLING UPWARDS.

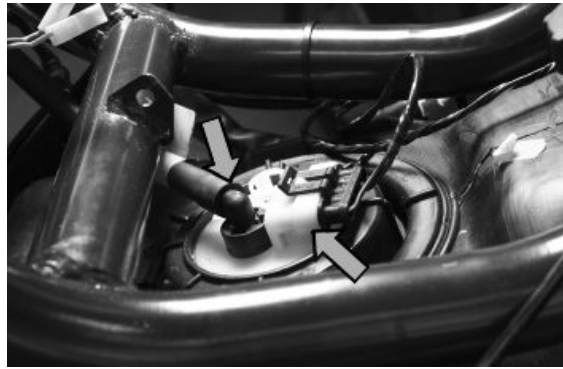

- Disconnect the connector from the probe checking fuel level.

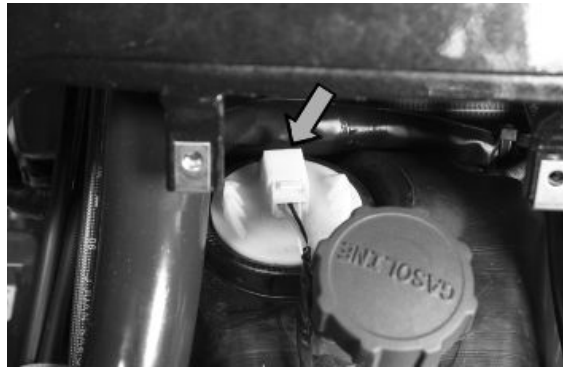

- Remove the two lower chassis cross members: for the front one, which is fixed by 4 screws, it is also necessary to release the coolant delivery and reverse pipes from the clamps placed on the cross member; the rear one is provided with two retainers only.



- Remove the front screw.



- Remove the rear retainer.



- Move the tank backwards and pull out the front side downwards, then release the rear side sideways.




For reassembly, perform the operations in the reverse order, paying attention to the following tightening torques.

Locking torques (N*m)


Chassis cross-member lower screws 16 - 25 Chassis front cross member upper screws 6 to 10.5 Nm

Front mudguard


- - Remove the front wheel
- Remove the retainer «A» from the odometer transmission to the mudguard and from the fork leg right cover.
- Remove the retainer «B» from the right front brake pipes.

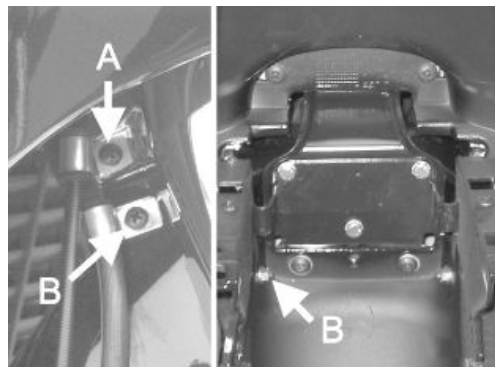


- Remove the retainer «C» from the fork leg left cover.
- Remove the retainer «D» from the left front break pipes.

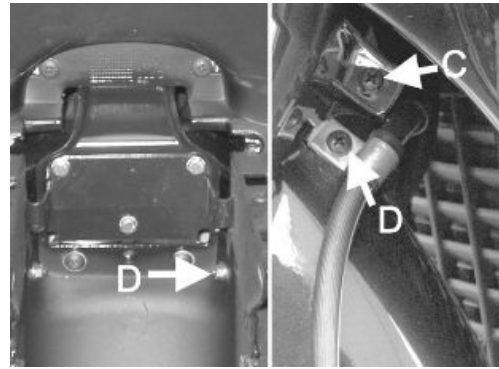

- Remove the two lower retainers «E» from the fork leg covers.
- Remove the three retainers «F».

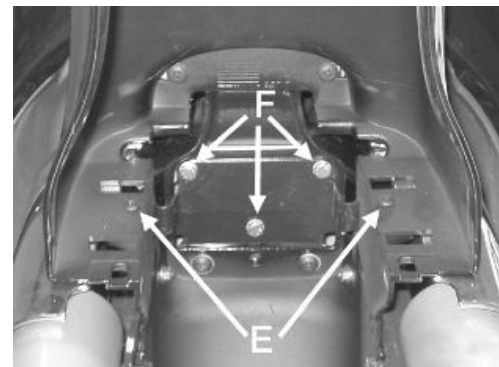

- Lower the mudguard and remove the retainer «G» from the left front break pipes.
- Remove the mudguard together with the plate.

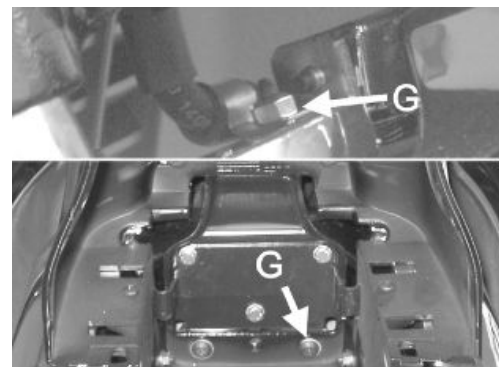

Radiator fan

- Remove the front wheel housing.
- Prepare a container for the coolant.
- Remove the expansion tank outlet and return pipes.
- Remove the coolant supply and return pipes from the radiator.
- Loosen the screw mounting the radiator to the chassis.
- Detach the electrical fan power supply connector;
- Disengage the radiator and the electric fan.



INDEX OF TOPICS

PRE-DELIVERY

PRE DE

Carry out the listed tests before delivering the scooter.

WARNING

BE VERY CAREFUL WHEN HANDLING FUEL.

Aesthetic inspection

Appearance checks:

- Paintwork
- Fitting of plastics
- Scratches
- Dirt

Tightening torques inspection

Lock check

- Safety locks

SAFETY LOCKS:

Name	Torque in Nm
Rear shock absorber retainer to the chassis	38 - 46
Front wheel shaft	45 ÷ 50
Rear wheel axle	104 ÷ 126
Rear brake disc mounting	11 ÷ 13
Engine - chassis fixing pin	100 - 120
Screw securing handlebar to steering tube	45 - 50
Upper steering ring nut	36 - 39
Lower steering ring nut	10 - 13 **

** *tighten and loosen by 90°*

- Cover retaining screws

Electrical system

Electric System:

- Main switch
- Headlamps: high beams, low beams, side/taillights (front and rear) and relevant warning lights
- Adjusting the headlights according to the regulations currently in force
- Front and rear brake light buttons and relevant bulb - Turn indicators and relevant bulbs
- Instrument lighting
- Instrument panel: fuel and temperature indicator
- Instrument panel warning lights
- Horn
- Electric start-up
- Engine stop by emergency stop switch and side stand
- Saddle electric opening button

CAUTION

TO ENSURE MAXIMUM PERFORMANCE, THE BATTERY MUST BE CHARGED BEFORE USE. INADEQUATE CHARGING OF THE BATTERY WITH A LOW LEVEL OF ELECTROLYTE BEFORE IT IS FIRST USED SHORTENS THE LIFE OF THE BATTERY.

CAUTION

WHEN INSTALLING THE BATTERY, CONNECT THE POSITIVE CABLE BEFORE CONNECTING THE NEGATIVE ONE, AND PERFORM THE REVERSE OPERATION UPON REMOVAL.

WARNING

BATTERY ELECTROLYTE IS TOXIC AND IT MAY CAUSE SERIOUS BURNS. IT CONTAINS SULPHURIC ACID. AVOID CONTACT WITH EYES, SKIN AND CLOTHING.

IN CASE OF CONTACT WITH EYES OR SKIN, RINSE WITH ABUNDANT WATER FOR ABOUT 15 MINUTES AND SEEK MEDICAL ATTENTION AT ONCE.

IF IT IS SWALLOWED, IMMEDIATELY DRINK LARGE QUANTITIES OF WATER OR VEGETABLE OIL. SEEK IMMEDIATE MEDICAL ATTENTION.

THE BATTERIES PRODUCE EXPLOSIVE GAS; KEEP THEM AWAY FROM NAKED FLAMES, SPARKS AND CIGARETTES. IF THE BATTERY IS CHARGED IN A CLOSED PLACE, TAKE CARE TO ENSURE ADEQUATE VENTILATION. ALWAYS PROTECT YOUR EYES WHEN WORKING CLOSE TO BATTERIES.

KEEP OUT OF THE REACH OF CHILDREN

CAUTION

NEVER USE FUSES WITH A CAPACITY HIGHER THAN THE RECOMMENDED CAPACITY. USING A FUSE OF UNSUITABLE RATING MAY SERIOUSLY DAMAGE THE VEHICLE OR EVEN CAUSE A FIRE.

Levels check

Level check:

- Hydraulic brake system liquid level.
 - Rear hub oil level
 - Engine coolant level
 - Engine oil level
-

Road test

Test ride

- Cold start
 - Instrument operations
 - Response to the throttle control
 - Stability on acceleration and braking
 - Rear and front brake efficiency
 - Rear and front suspension efficiency
 - Abnormal noise
-

Static test

Static test after test ride:

- Restarting when warmed up
 - Starter operation
-

- Minimum hold (turning the handlebar)
 - Uniform turning of the steering
 - Possible leaks
 - Operation of the radiator electric fan
-

Functional inspection

Operating test:

- Hydraulic brake system
- Lever travel
- Clutch - Check for correct operation
- Engine - Check for correct general operation and make sure there is no unusual noise
- Other

- Check documents:

Check chassis No. and engine No.

- Check tool kit
- License plate assembly
- Check locks
- Check tyre pressures
- Installation of mirrors and any accessories

CAUTION

NEVER EXCEED THE RECOMMENDED INFLATION PRESSURES OR TYRES MAY BURST.


CAUTION

CHECK AND ADJUST TYRE PRESSURE WITH TYRES AT AMBIENT TEMPERATURE.

INDEX OF TOPICS


TIME

TIME

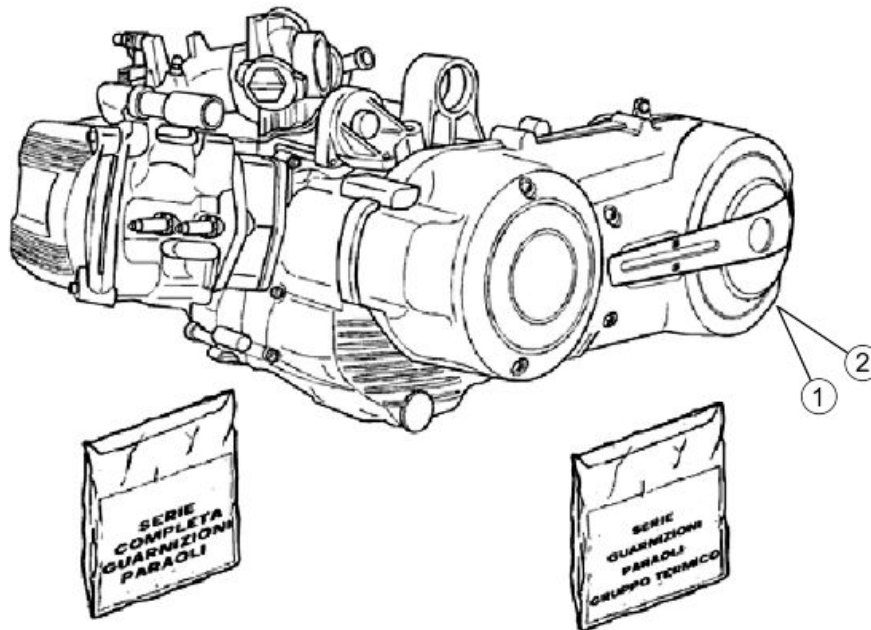Engine
**ENGINE**


	Code	Action	Duration
1	001001	Engine from chassis - replacement	
2	003057	Engine retainer - Tighten nuts	

Crankcase

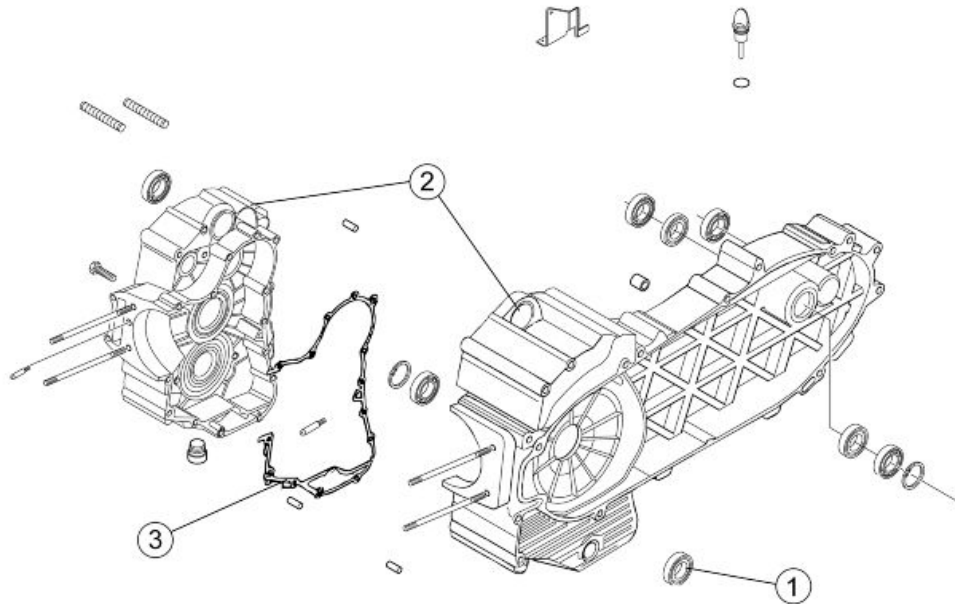


CRANKCASE

	Code	Action	Duration
1	001100	Oil seal, clutch side - Replacement	
2	001133	Engine crankcase- Replacement	
3	001153	Crankcase half gasket - Replacement	

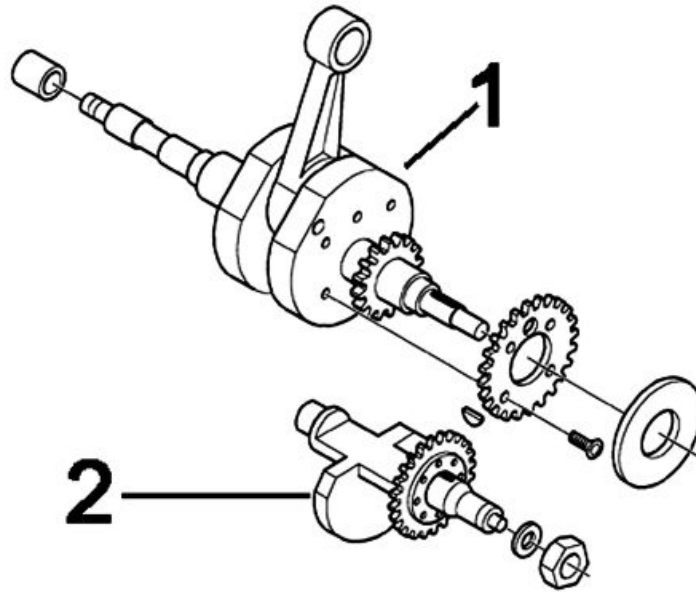Crankshaft**CRANKSHAFT**

	Code	Action	Duration
1	001117	Crankshaft - Replacement	
2	001098	Countershaft - Replacement	


Cylinder assy.

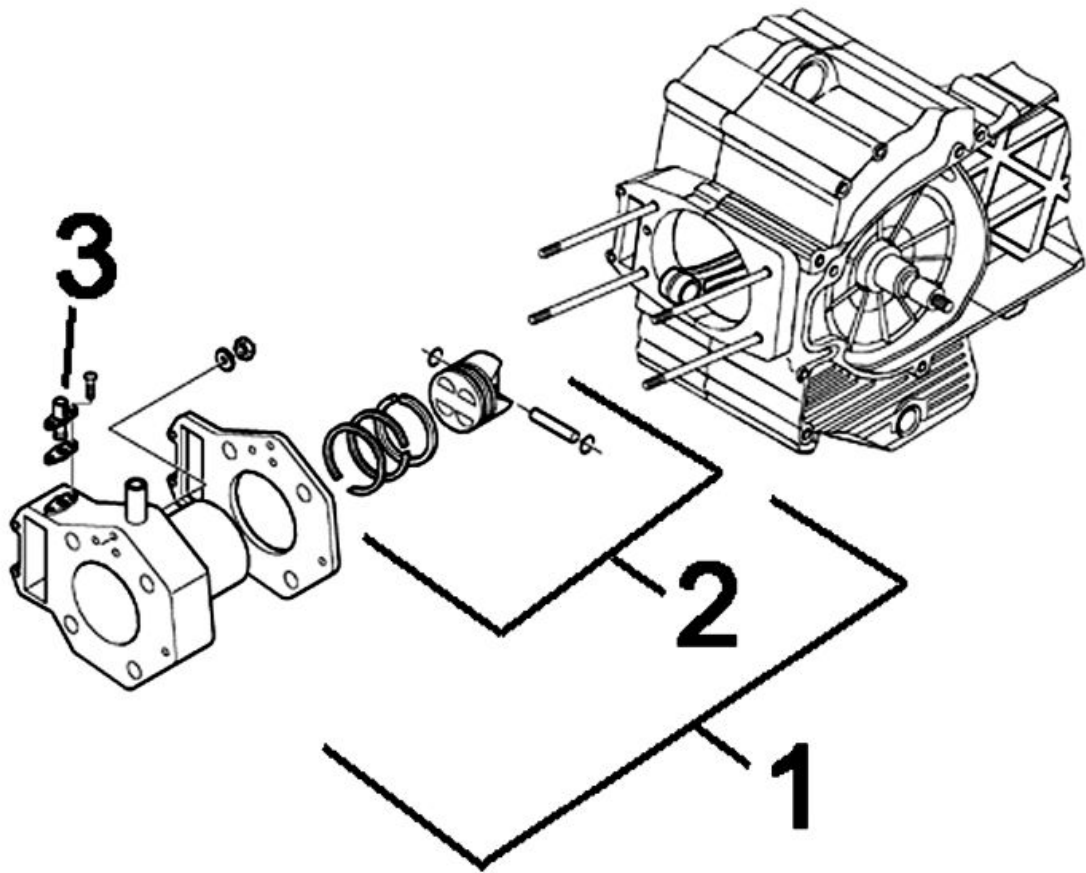

CYLINDER GROUP

	Code	Action	Duration
1	001002	Cylinder piston - Replacement	
2	001154	Pin ring piston unit - Service	
3	001129	Chain tensioner - Service and Replacement	


Cylinder head assy.

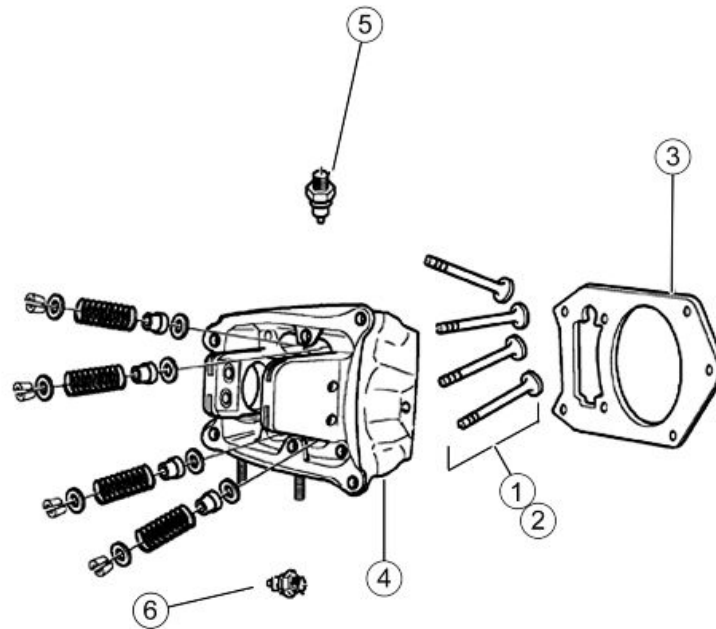

HEAD UNIT

	Code	Action	Duration
1	001045	Valves - Replacement	
2	001049	Valves - Adjustment	
3	001056	Head gasket - Replacement	
4	001126	Head - Replacement	
5	005081	Temperature sensor - Replacement	
6	007012	Coolant bleed valve - Replacement	


Rocker arms support assy.

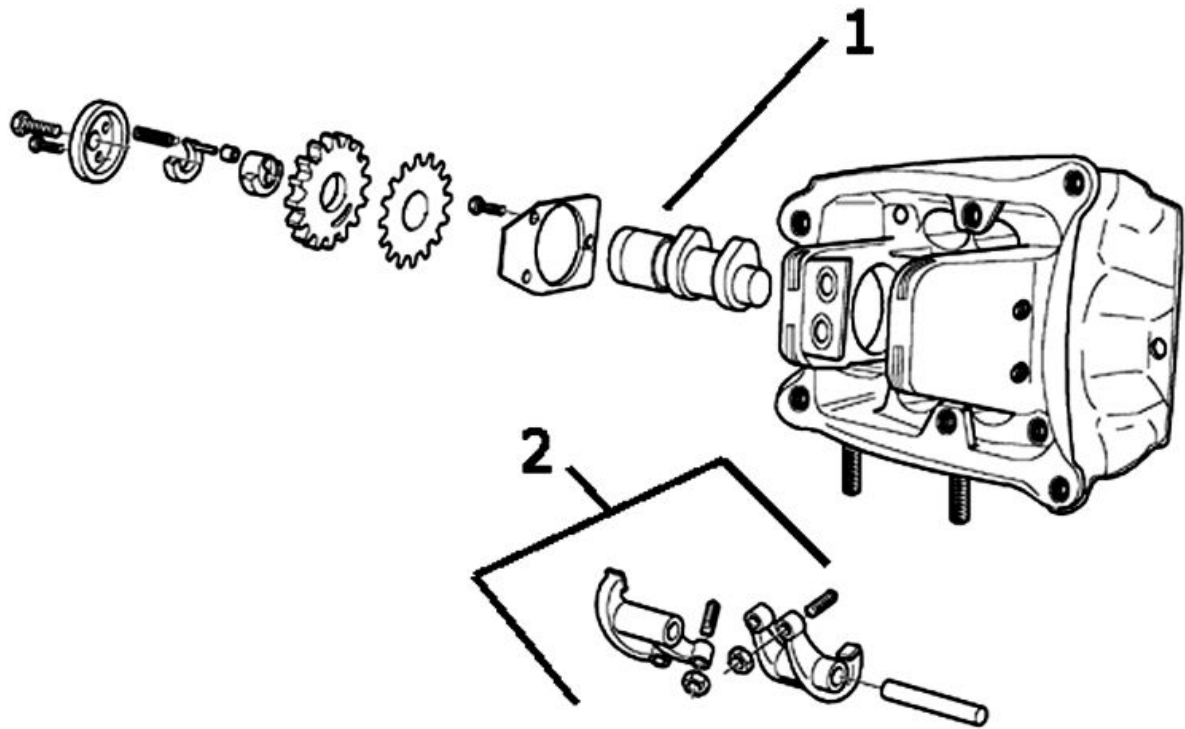

ROCKING LEVER SUPPORT UNIT

	Code	Action	Duration
1	001044	Camshaft - Replacement	
2	001148	Rocking lever valve - Replacement	


Cylinder head cover

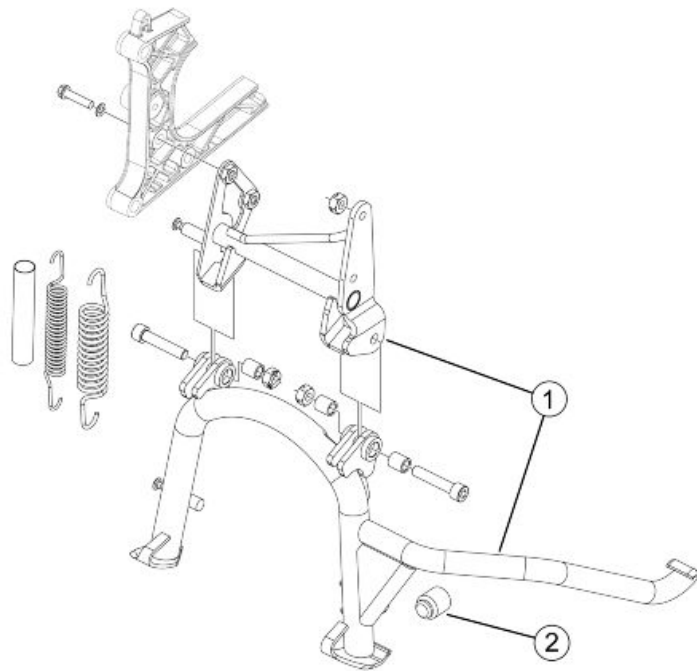

HEAD COVER

	Code	Action	Duration
1	001089	Head cover - Replacement	
2	001093	Spark plug - Replacement	
3	001088	Head cover gasket - Replacement	


Flywheel cover

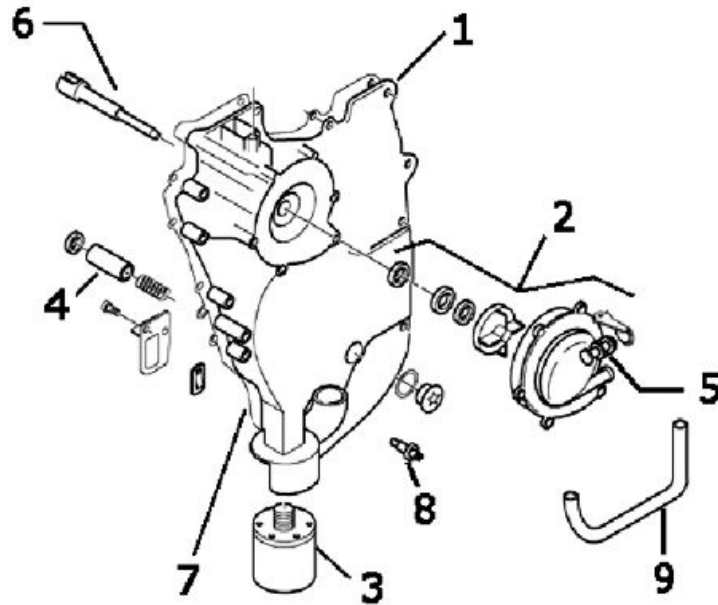

FLYWHEEL COVER

	Code	Action	Duration
1	001087	Flywheel cover - replace	
2	001113	Water pump - Replacement	
3	001123	Oil filter -Replacement	
4	001124	By-pass valve - Replacement	
5	001057	Thermostat - Replacement	
6	001062	Water pump command shaft - Replacement	
7	001150	Flywheel cover gasket - Replacement	
8	001160	Minimum oil pressure sensor - Replacement	
9	007011	By-pass manifold - thermostat - drain valve - Replacement	


Driven pulley

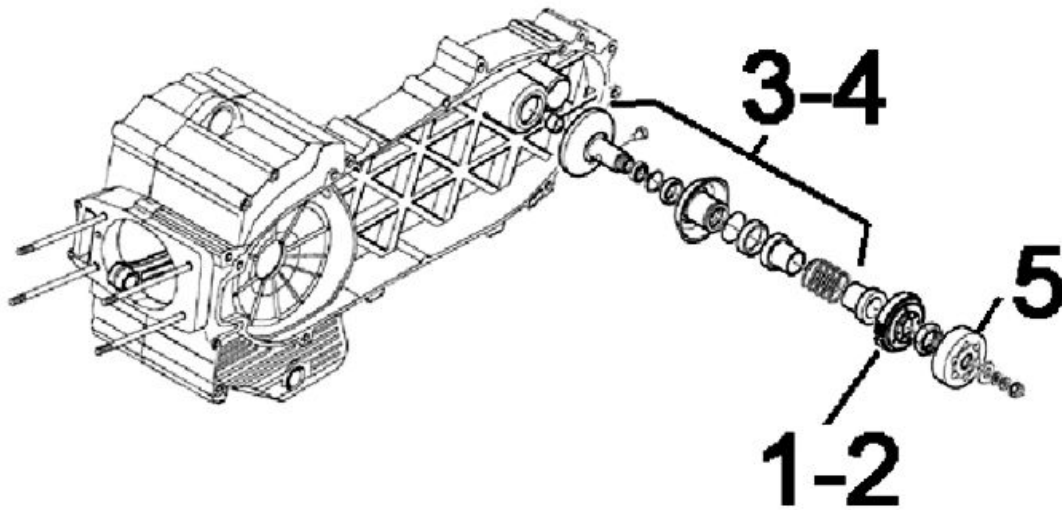

DRIVEN PULLEY

	Code	Action	Duration
1	001022	Clutch - Replacement	
2	003072	Clutch unit - Wear check	
3	001012	Driven pulley - overhaul	
4	001110	Driven pulley - Replacement	
5	001155	Clutch bell housing - Replacement	


Oil pump

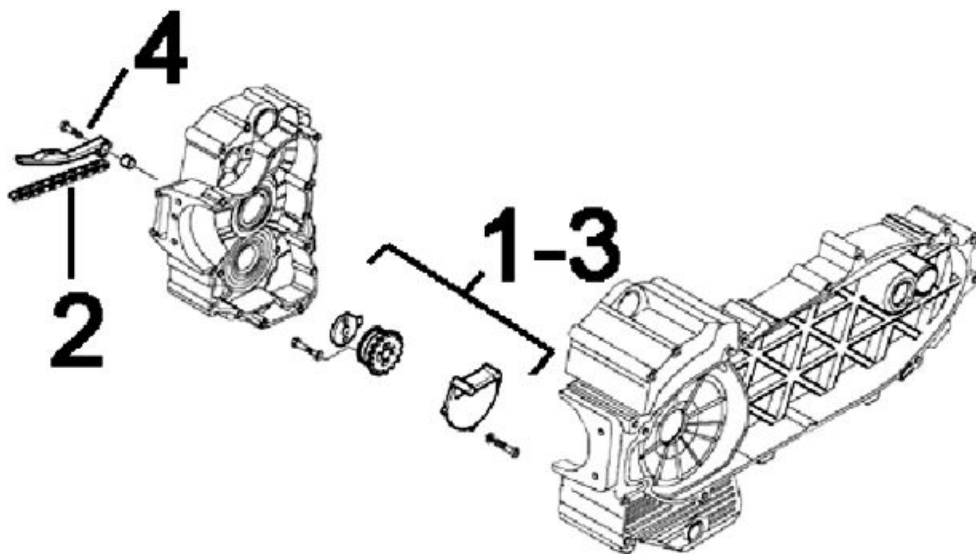

OIL PUMP

	Code	Action	Duration
1	001042	Oil pump - Service	
2	001051	Belt/Timing chain - Change	
3	001112	Oil pump - change	
4	001125	Chain guide pads - Replacement	


Final gear assy.

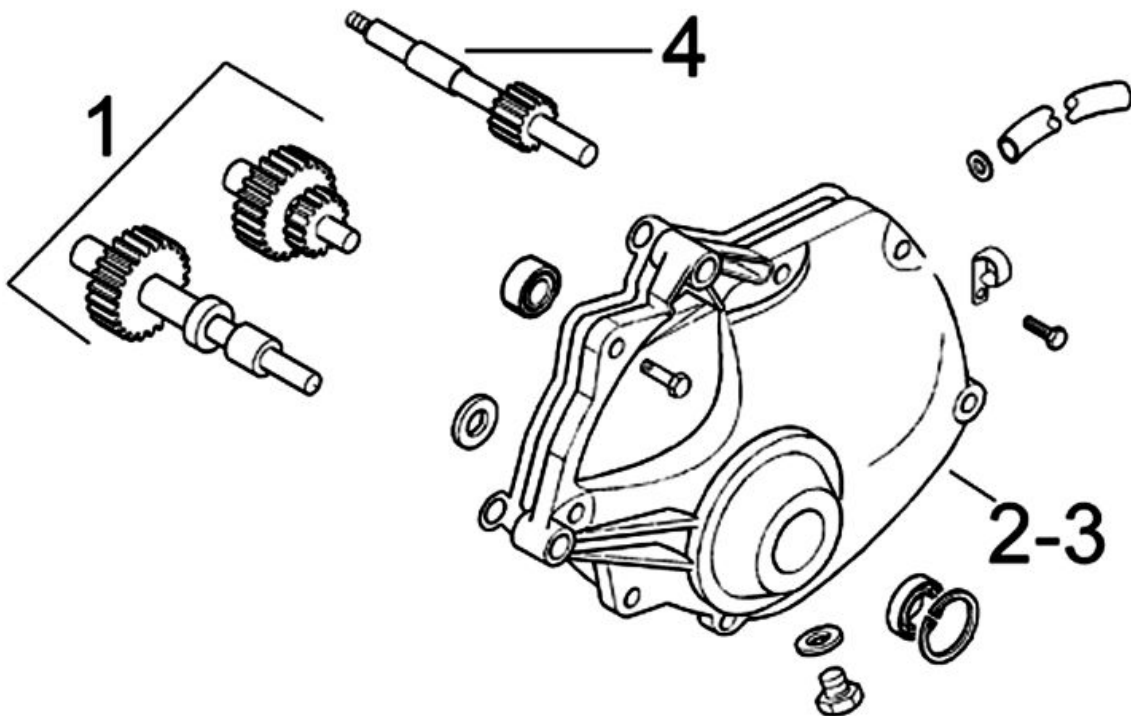

FINAL REDUCTION GEAR ASSEMBLY

	Code	Action	Duration
1	001010	Geared reduction unit - Service	
2	001156	Gear reduction unit cover - Replacement	
3	003065	Gear box oil - Replacement	
4	004125	Rear gear shaft - Replacement	


Driving pulley

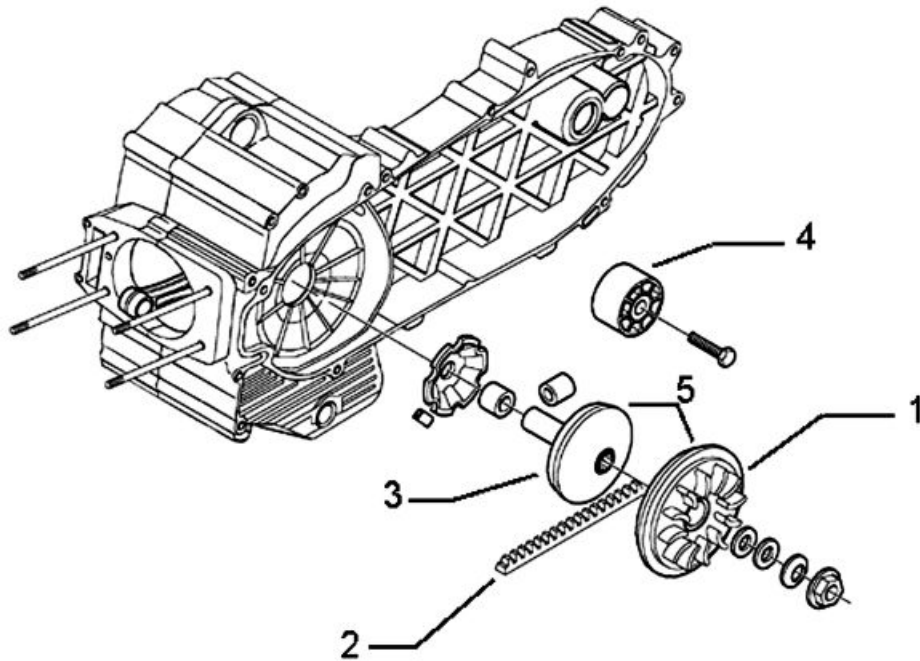

DRIVING PULLEY


	Code	Action	Duration
1	001086	Driving half-pulley - Replacement	
2	001011	Driving belt - Replacement	
3	001006	driving pulley - Service	
4	001141	Belt anti-flapping roller - Replacement	
5	001066	driving pulley - Replacement	

Transmission cover

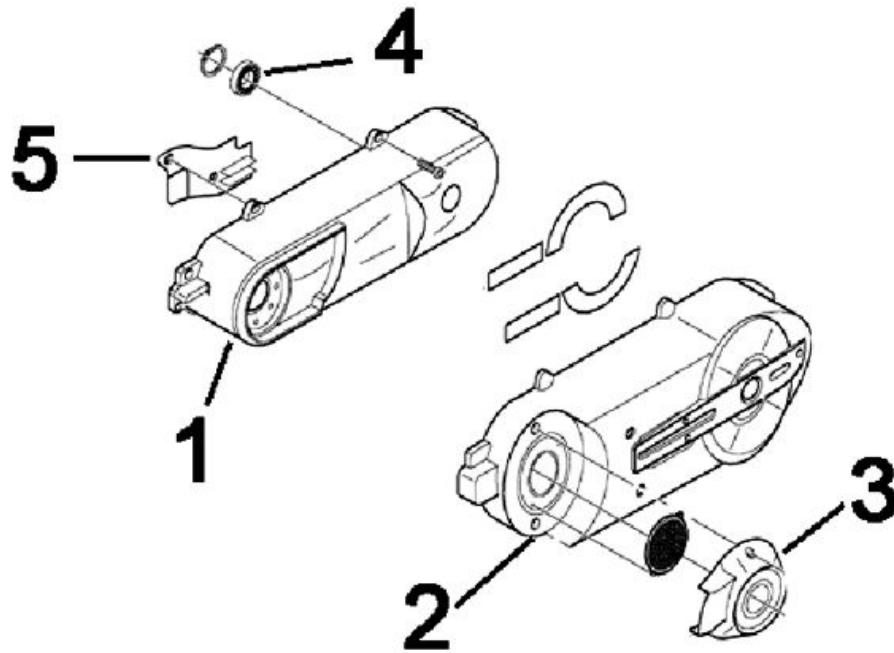


TRANSMISSION COVER

	Code	Action	Duration
1	001065	Internal transmission cover - Replacement	
2	001096	External transmission cover - Replacement	
3	001131	Transmission air intake - Replacement	
4	001135	Transmission cover bearing - Replacement	
5	001170	Air manifold - replacement	

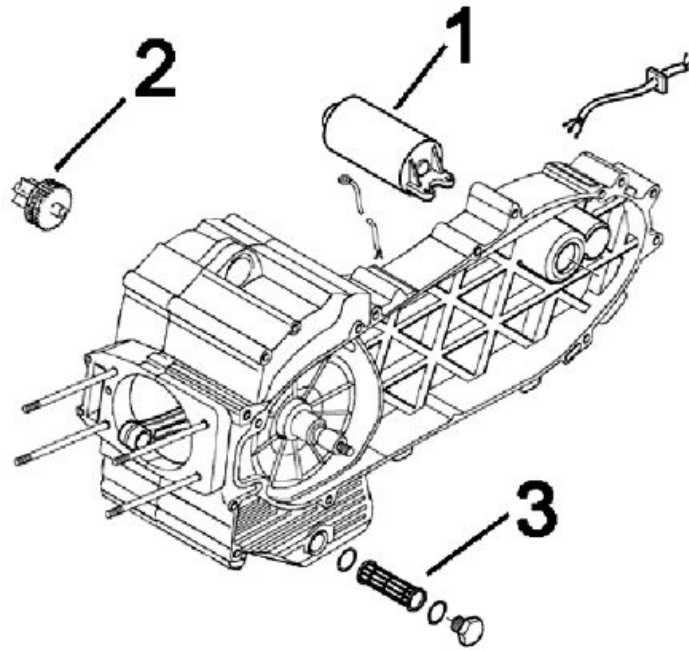Starter motor**STARTER MOTOR**


	Code	Action	Duration
1	001020	Starter motor - Replacement	
2	001017	Start-up pinion - Replacement	
3	003064	Engine oil - change	

Flywheel magneto

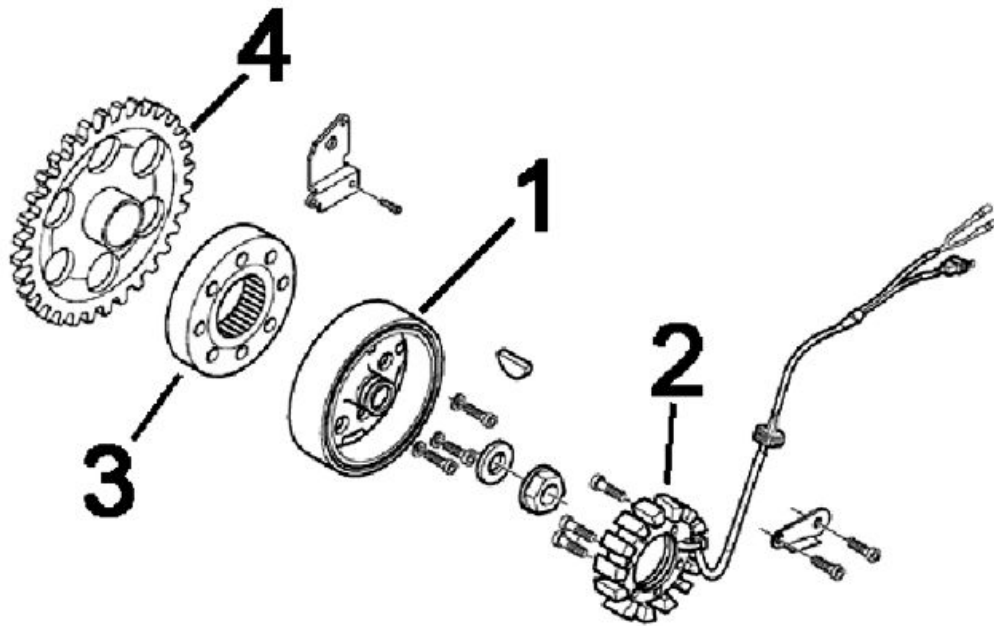


MAGNETO FLYWHEEL

	Code	Action	Duration
1	001058	Flywheel - Replacement	
2	001067	Stator - Replacement	
3	001104	Start-up freewheel - Replacement	
4	001151	Start-up driven gearing - Replacement	

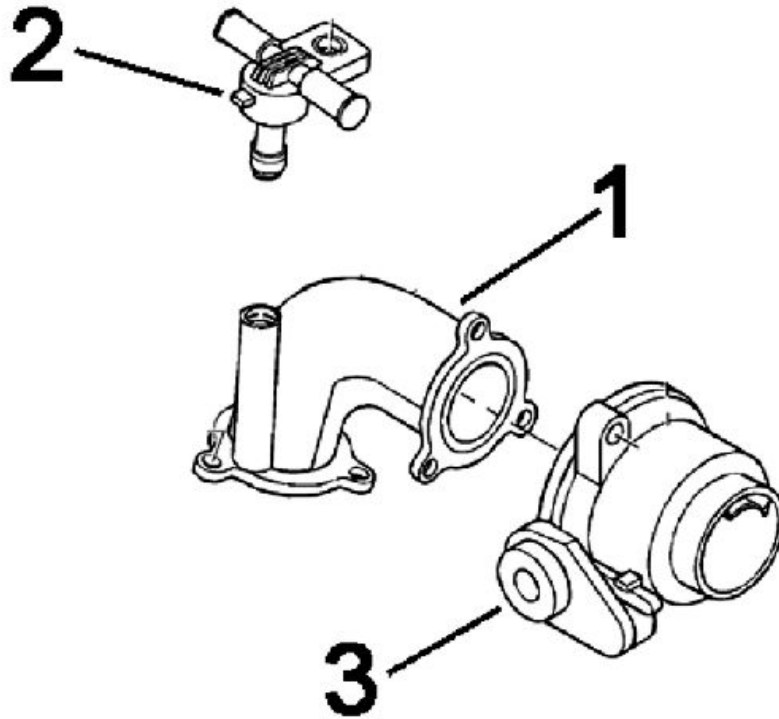Butterfly valve**THROTTLE BODY**

	Code	Action	Duration
1	001013	Intake manifold - change	
2	001047	Injector - Replacement	
3	001023	Control unit - Replacement	


Exhaust pipe

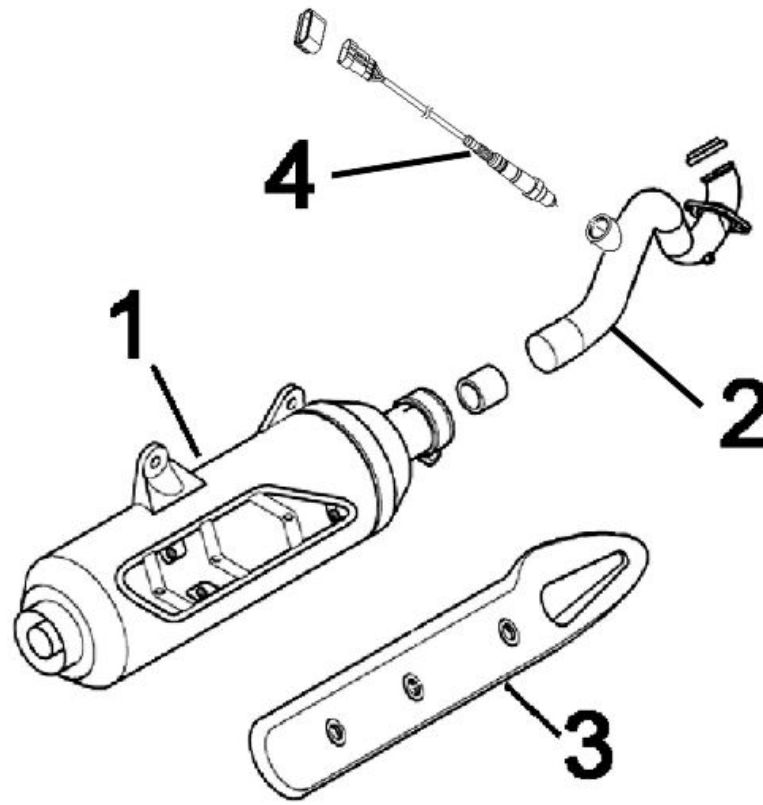

MUFFLER


	Code	Action	Duration
1	001009	Muffler - Replacement	
2	001092	Exhaust manifold - Replacement	
3	001095	Muffler guard - Replacement	
4	005138	Lambda probe - Replacement	

Air cleaner

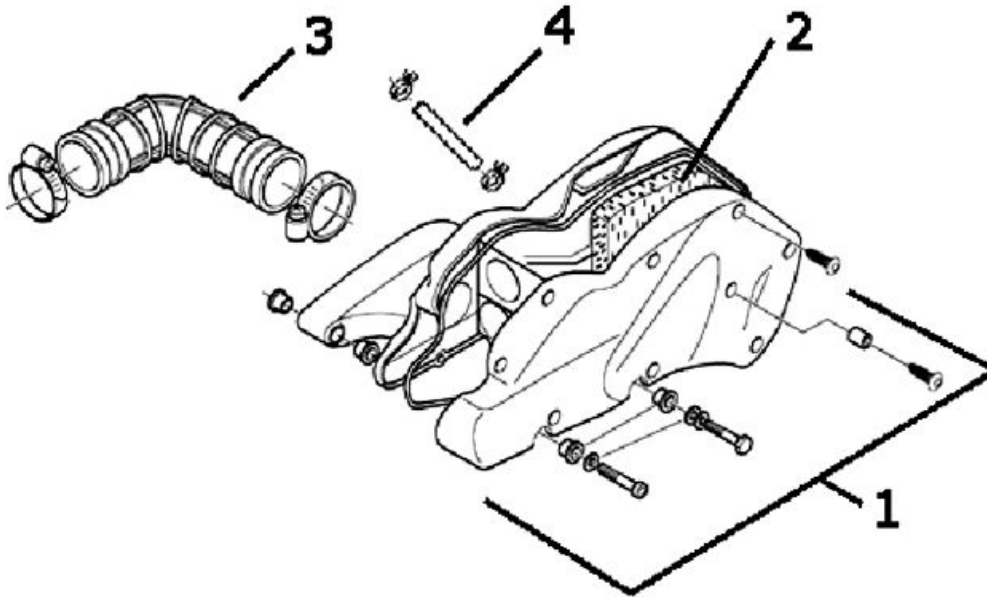**AIR CLEANER**

	Code	Action	Duration
1	001015	Air filter box - Replacement	
2	001014	Air filter - Replacement / cleaning	
3	004122	Cleaner / Throttle body union - Replacement	
4	001074	Oil vapour recovery pipe - Re- placement	


Frame

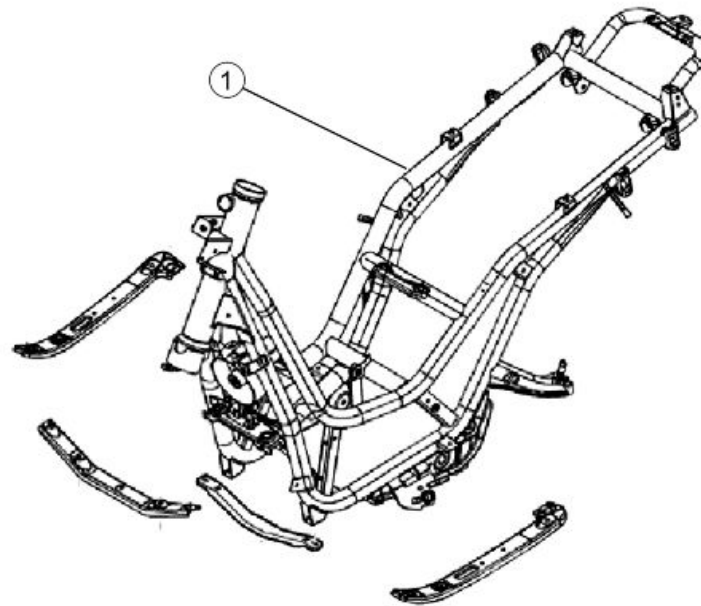

CHASSIS


	Code	Action	Duration
1	004001	Chassis - Replacement	

Centre-stand

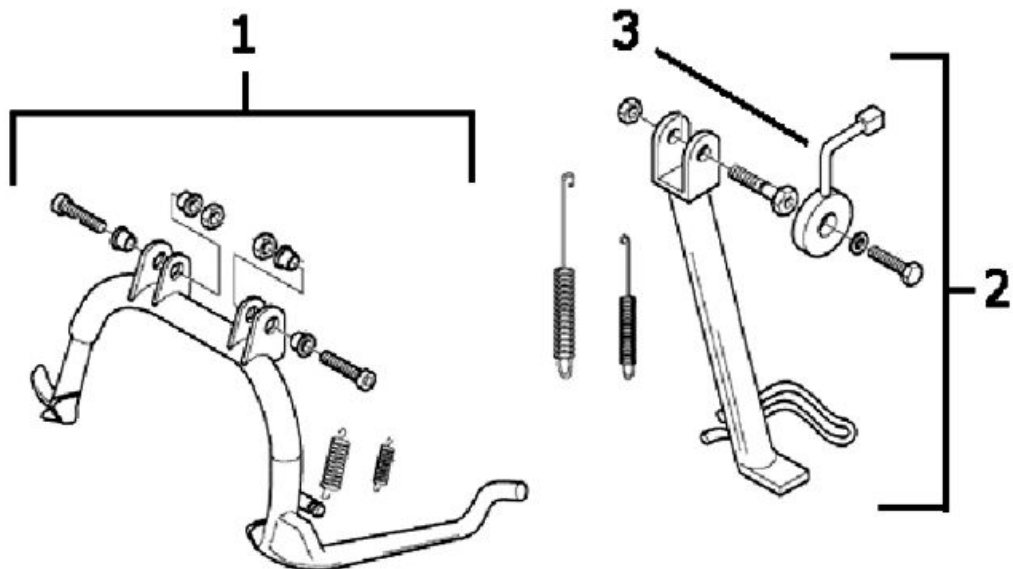


CENTRE AND SIDE STANDS

	Code	Action	Duration
1	004004	Stand - Replacement	
2	004102	Side stand - Replacement	
3	005079	Stand switch - Replacement	

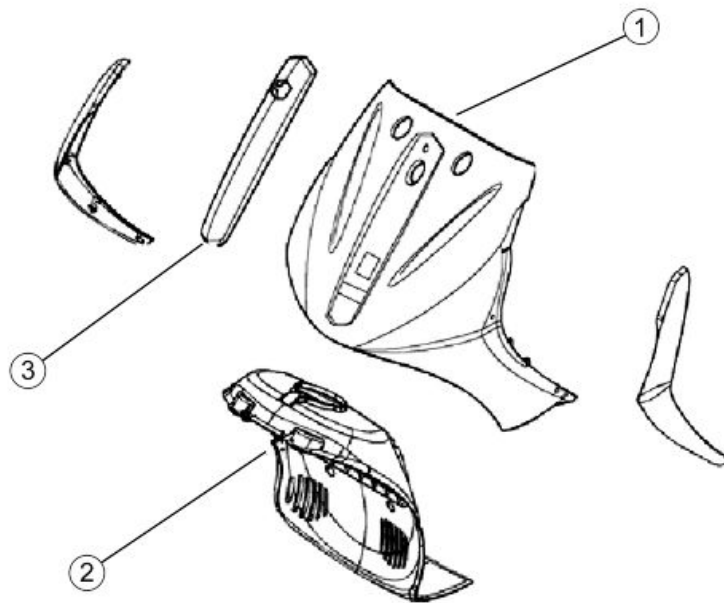Legshield spoiler**FRONT SHIELD SPOILER**

	Code	Action	Duration
1	004064	Front shield, front section - Replacement	
2	004053	Spoiler - Replacement	
3	004149	Shield central cover - Replacement	


Side fairings

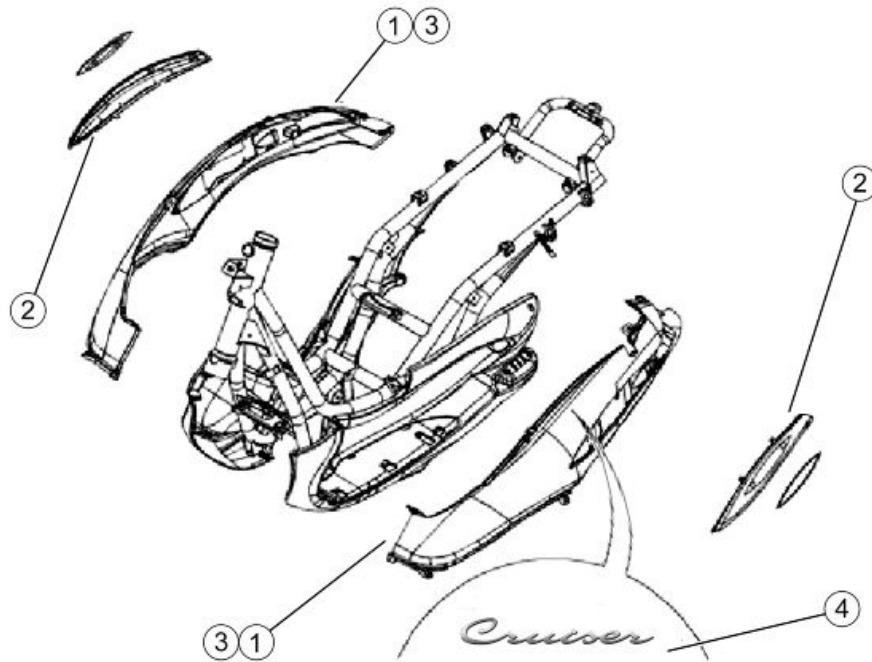

SIDE COVERS

	Code	Action	Duration
1	004085	Fairing (1) - Replacement	
2	004129	Bumper fairing - Replacement	
3	004012	Fairings (2) - Replacement	
4	004159	Plates / Stickers - Replacement	


Footrests

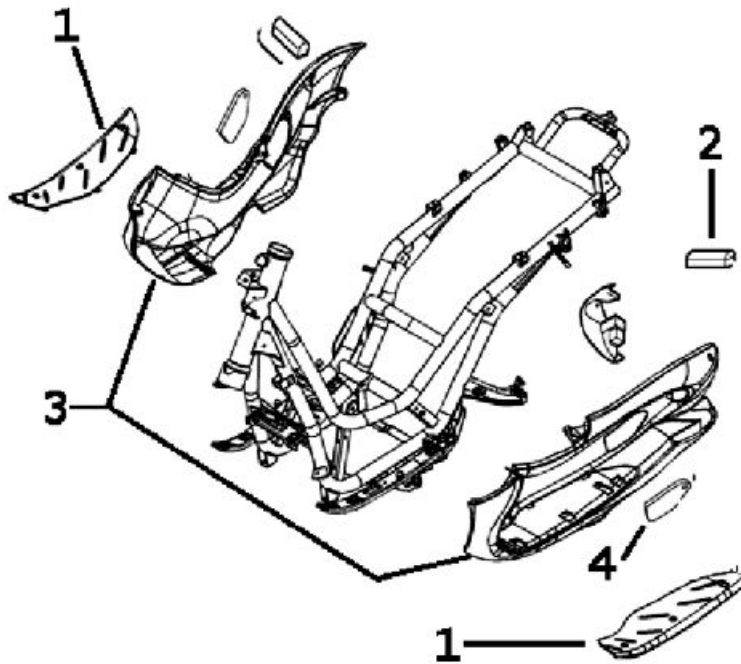

MATS AND COVERS

	Code	Action	Duration
1	004075	Front mat - Replacement	
2	004079	Passenger footrest (1) - Replacement	
3	004015	Footrest - Replacement	
4	004059	Spark plug inspection flap - Replacement	


Rear cover

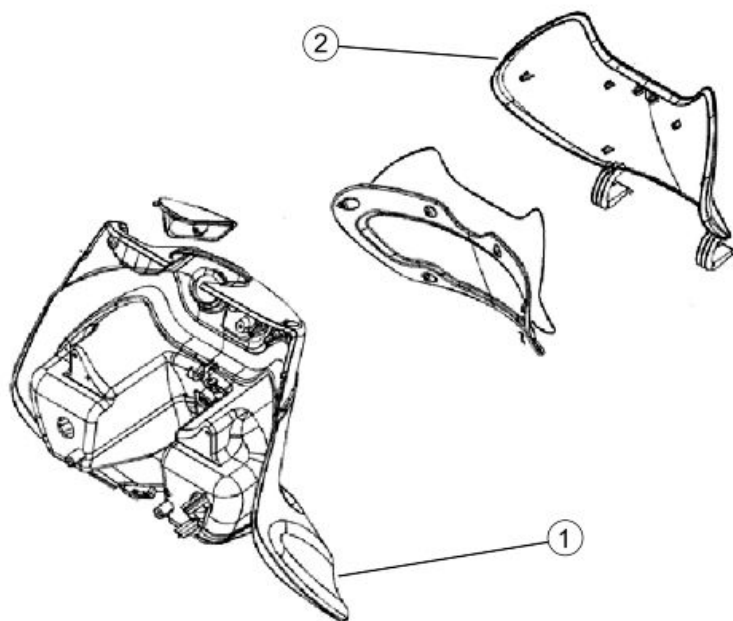

REAR SHIELD

	Code	Action	Duration
1	004065	Shield back plate - Replacement	
2	004081	Glove box door - Replacement	


Central cover

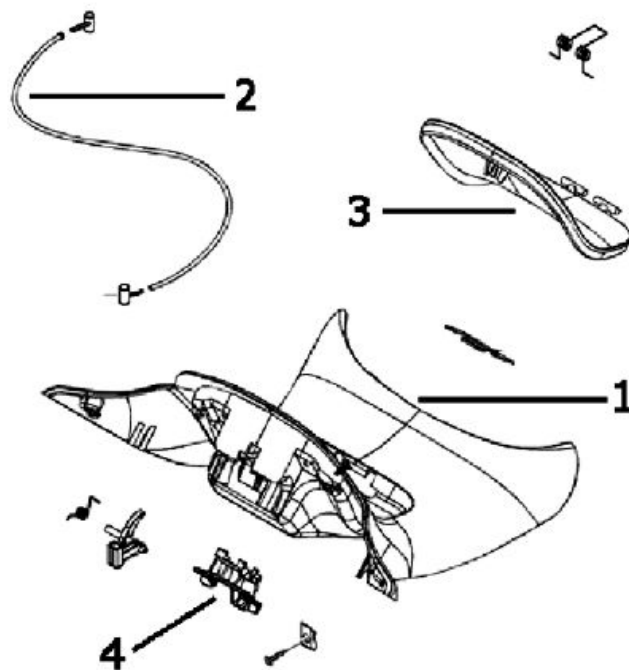

CENTRAL COVER

	Code	Action	Duration
1	004011	Central chassis cover - Replacement	
2	002082	Fuel tank cap opening drive - Replacement	
3	004135	Fuel tank port - Replacement	
4	004157	Fuel port coupling - Replacement	


Underseat compartment

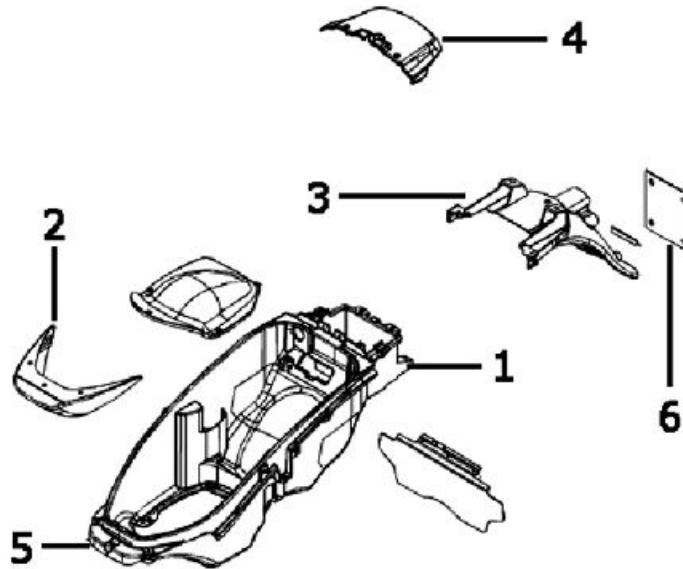

HELMET COMPARTMENT

	Code	Action	Duration
1	004016	Helmet compartment - Replacement	
2	004106	Under-saddle band - Replacement	
3	004136	License plate support - Replacement	
4	005046	Battery cover - change	
5	005033	Under seat light switch - Replacement	
6	005048	Licence plate holder - Replacement	


Mudguard

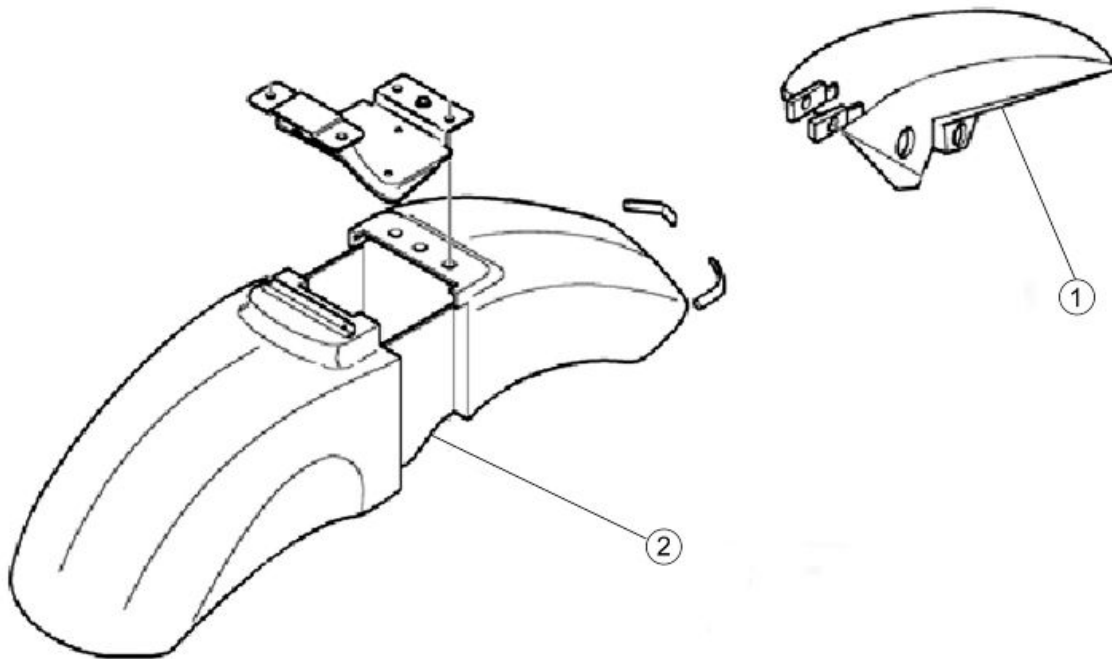

MUDGUARD

	Code	Action	Duration
1	004009	Rear mudguard - Replacement	
2	004002	Front mudguard - Replacement	


Fuel tank

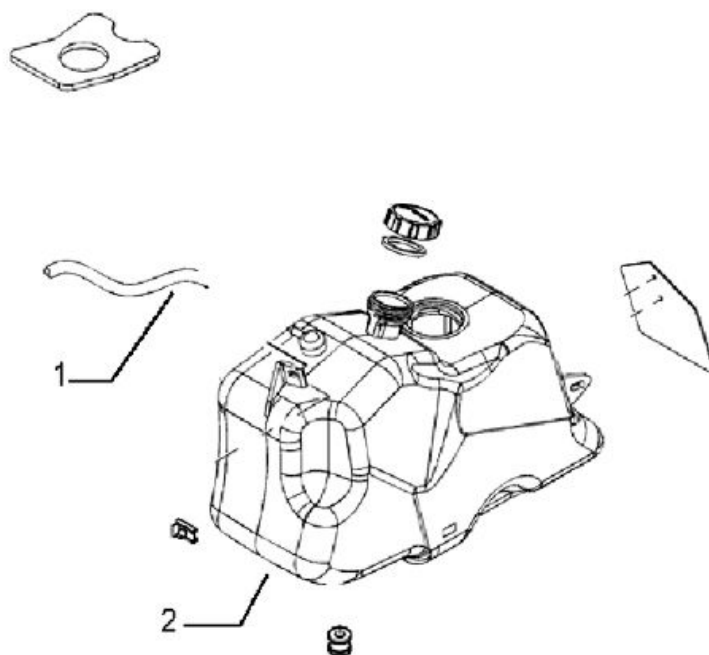

FUEL TANK

	Code	Action	Duration
1	004109	Fuel tank breather - Replacement	
2	004005	Fuel tank - Replacement	


Expansion tank

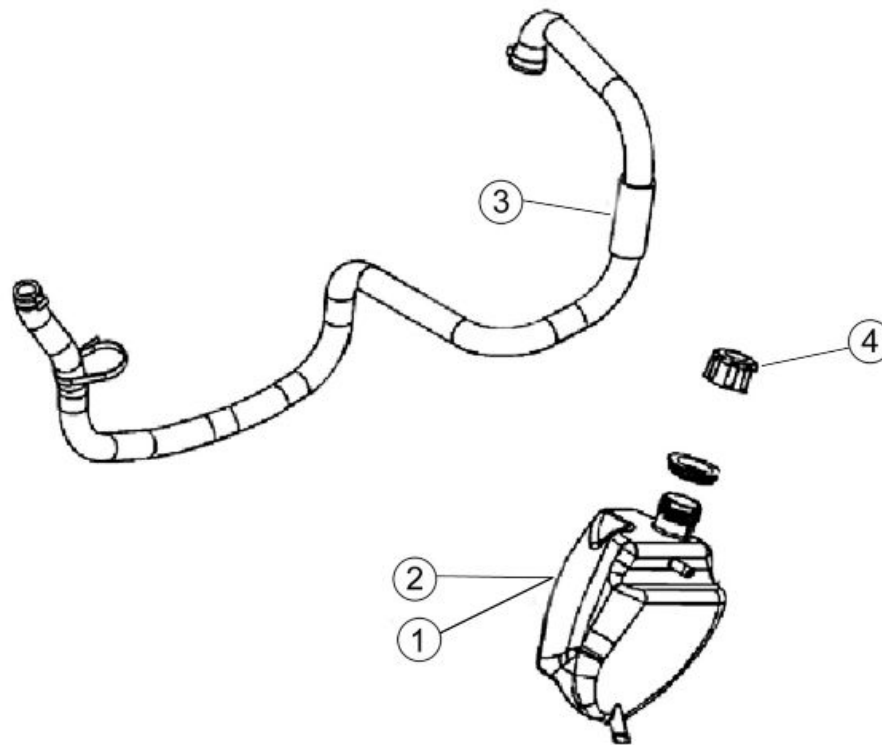

EXPANSION TANK


	Code	Action	Duration
1	007001	Expansion tank - Replacement	
2	001052	Coolant and air bleed - Replacement	
3	007013	Expansion tank / radiator connecting hose - Replacement	
4	007024	Expansion tank cap - Replacement	

Radiator

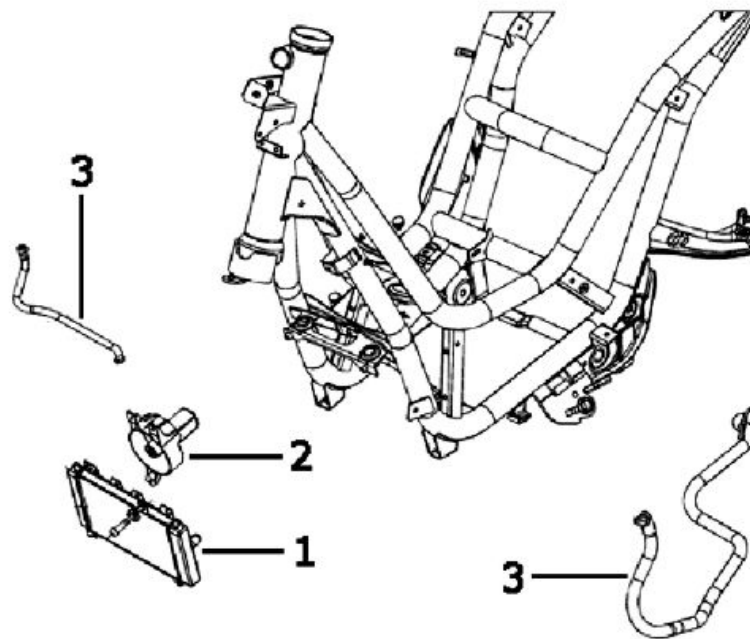


RADIATOR

	Code	Action	Duration
1	007002	Water cooler - Replacement	
2	007016	Fan complete with support - Replacement	
3	007003	Delivery line and coolant return - Replacement	

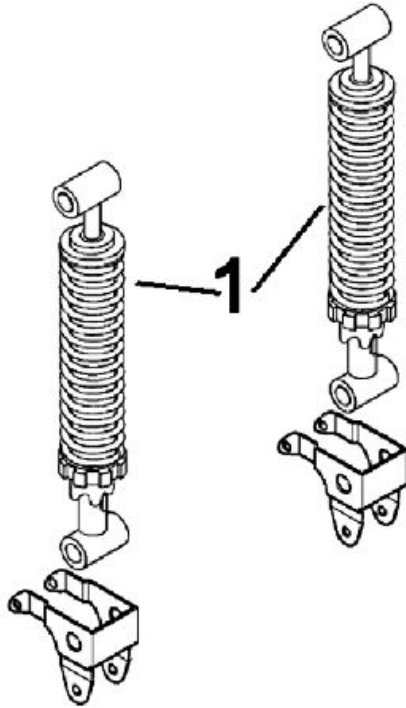Rear shock-absorber**REAR SHOCK ABSORBER**

	Code	Action	Duration
1	003007	Rear shock absorbers - Replacement	

Steering column bearings

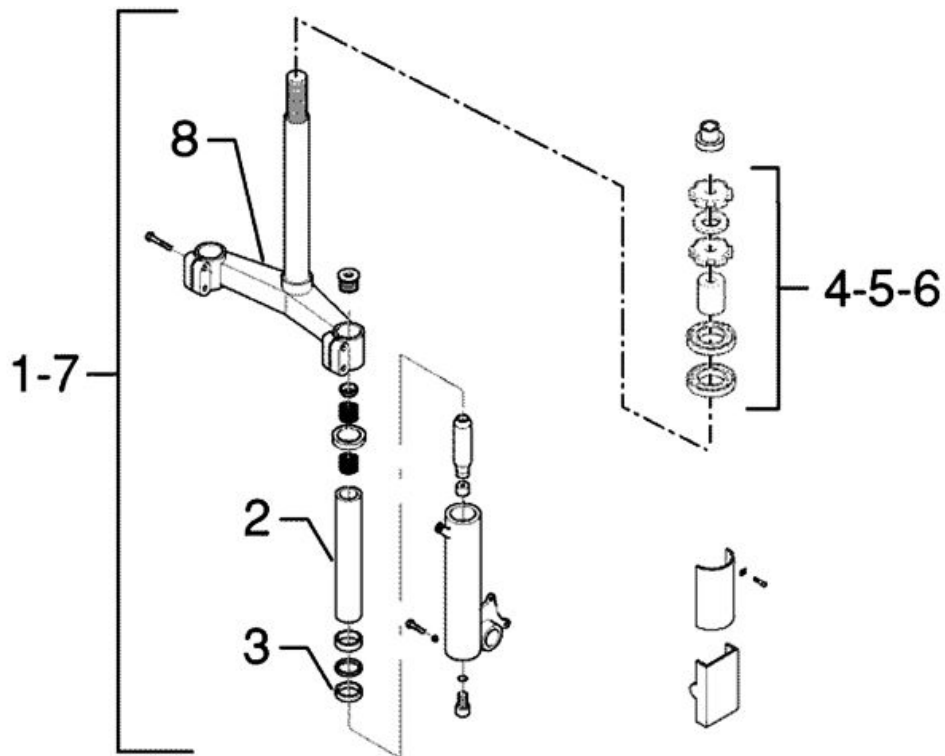

STEERING FIFTH WHEELS


	Code	Action	Duration
1	003051	Fork unit - Replacement	
2	003079	Fork stem - Replacement	
3	003048	Fork oil seal - Replacement	
4	004119	Bearing/upper steering fifth wheel - Replacement	
5	003002	Steering fifth wheel - Replacement	
6	003073	Steering clearance - Adjust	
7	003010	Front suspension - Service	
8	003050	Fork lower plate - Replacement	

Handlebar covers

HANDLEBAR COVERS

	Code	Action	Duration
1	004018	Handlebar front section - Replacement	
2	004019	Handlebar rear section - Replacement	


Handlebar components

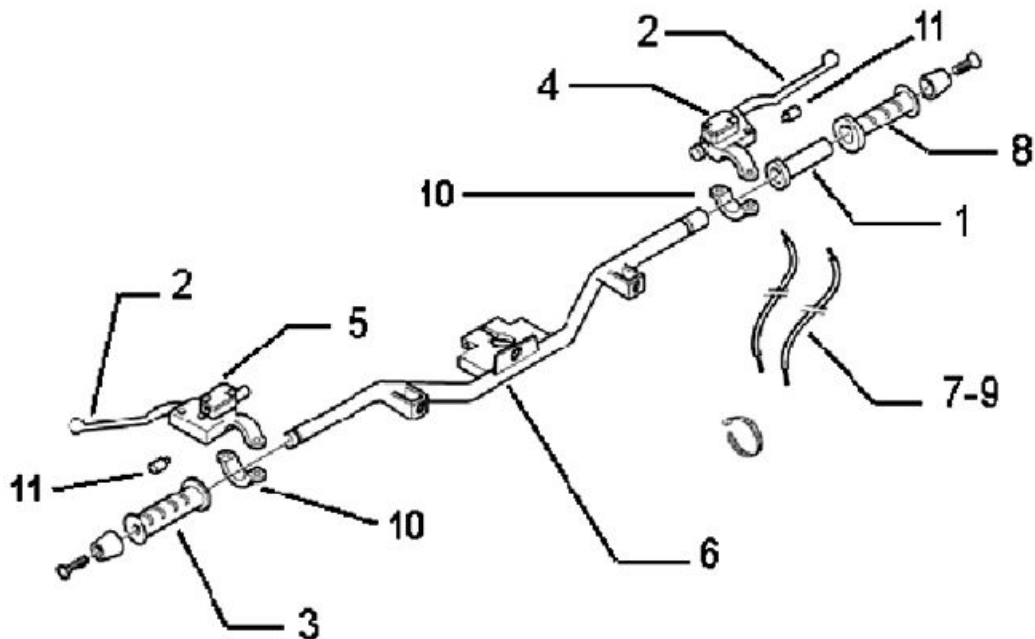

HANDLEBAR COMPONENTS

	Code	Action	Duration
1	002060	Throttle grip - Replacement	
2	002037	Brake or clutch lever - Replacement	
3	002071	Left hand grip - Replacement	
4	002024	Front brake pump - replace	
5	002088	Integral brake pump - Replacement	
6	003001	Handlebar - Replacement	
7	002063	Throttle control transmission - Replacement	
8	002059	Right hand grip - Replacement	
9	003061	Accelerator transmission - Adjustment	
10	004162	Mirror support and/or brake pump fitting U-bolt - Replacement	
11	005017	Stop switch - Replacement	


Swing-arm

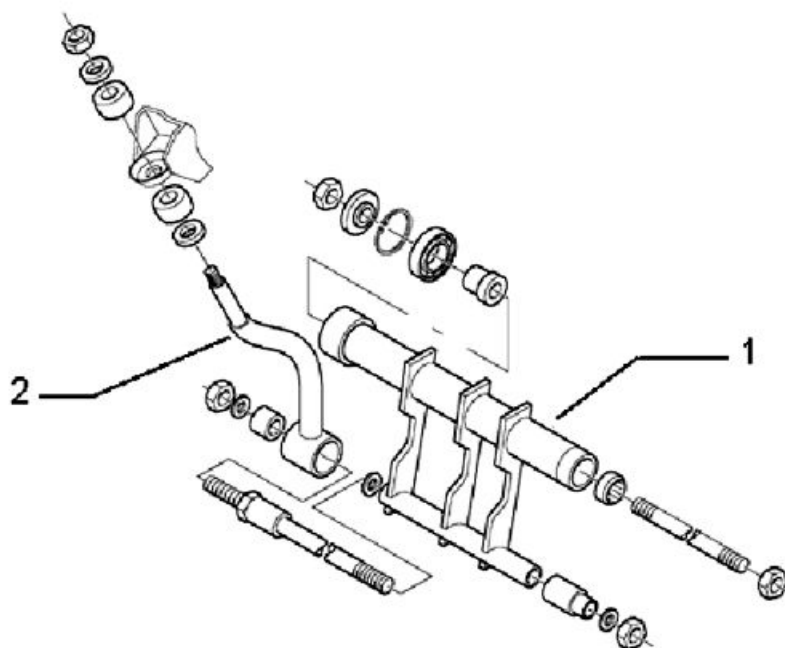

SWINGING ARM

	Code	Action	Duration
1	001072	Swinging arm - Engine-chassis connection - Replacement	
2	003082	Damper arm - Replacement	


Brake hoses

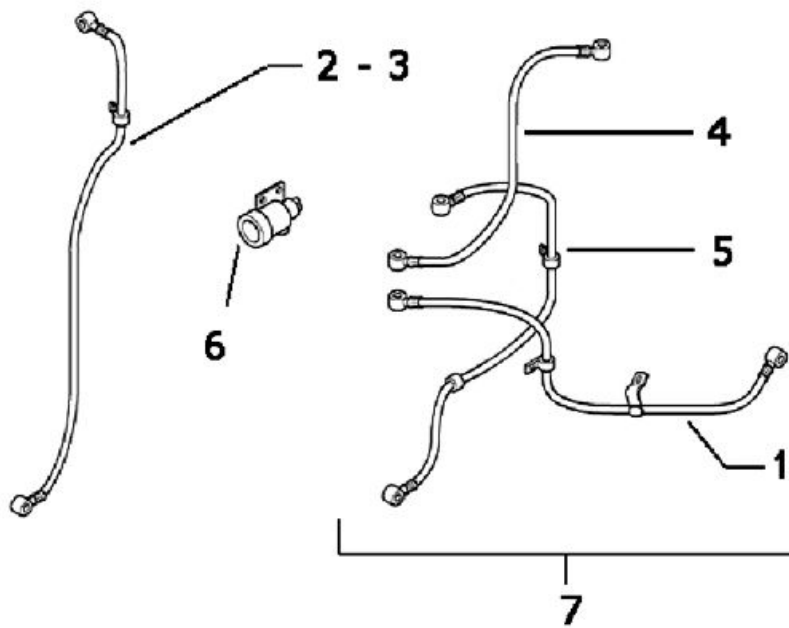

BREAK PIPES

	Code	Action	Duration
1	002020	Rear brake disc piping - Replacement	
2	002021	Front brake piping - Replacement	
3	002047	Front brake fluid and air bleeding system - Replacement	
4	002084	Integral break pump pipe, device - Replacement	
5	002085	Integral front brake pipes	
6	002089	Integral breaking device - Replacement	
7	002090	Integral brake fluid and bleeding system - Replacement	


Seat

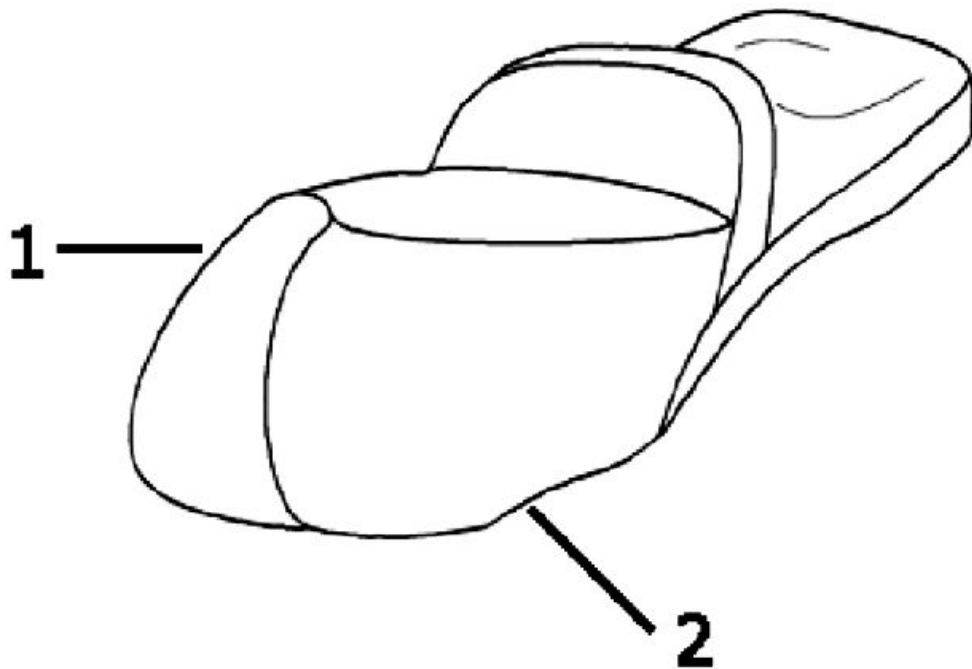

SADDLE


	Code	Action	Duration
1	004003	Saddle - Replacement	
2	004144	Saddle cover - Replacement	

Seat lock

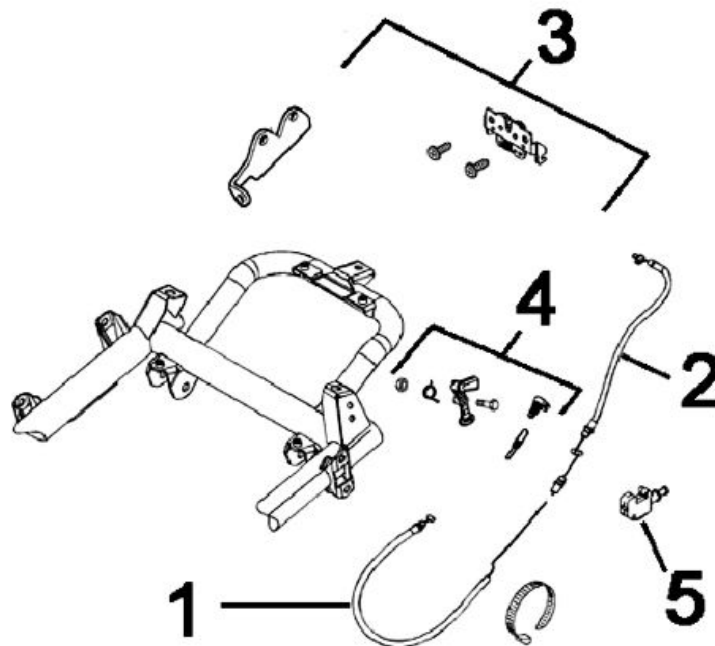**SADDLE CLOSING MECHANISM**


	Code	Action	Duration
1	002083	Saddle opening transmission - Replacement	
2	002092	Transmission splitter/ hook transmission - Replacement	
3	004054	Saddle lock catch - Replace- ment	
4	004158	Saddle opening splitter - Re- placement	
5	005099	Electric saddle opening de- vice - Replacement	

Instrument panel

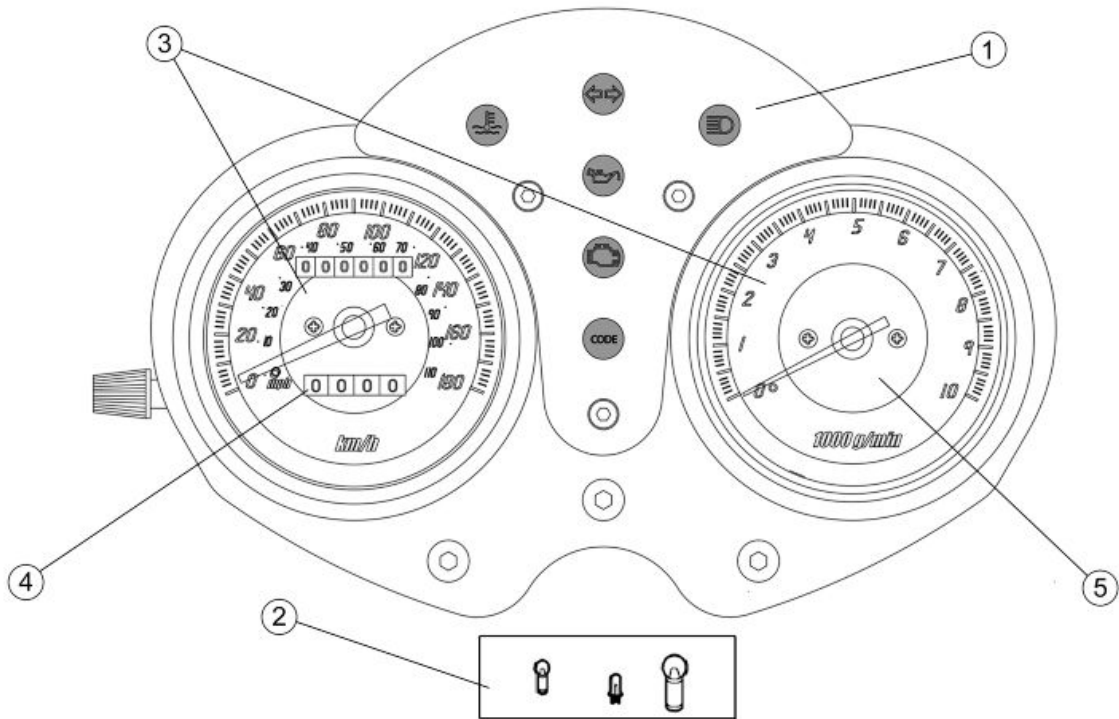


HEADLIGHT ASSEMBLY

	Code	Action	Duration
1	005014	Instrument panel - Replacement	
2	005038	Instrument panel warning light bulbs - Replacement	
3	005078	Odometer glass - Replacement	
4	005014	Odometer - Replacement	
5	005109	Rpm indicator - replacement	

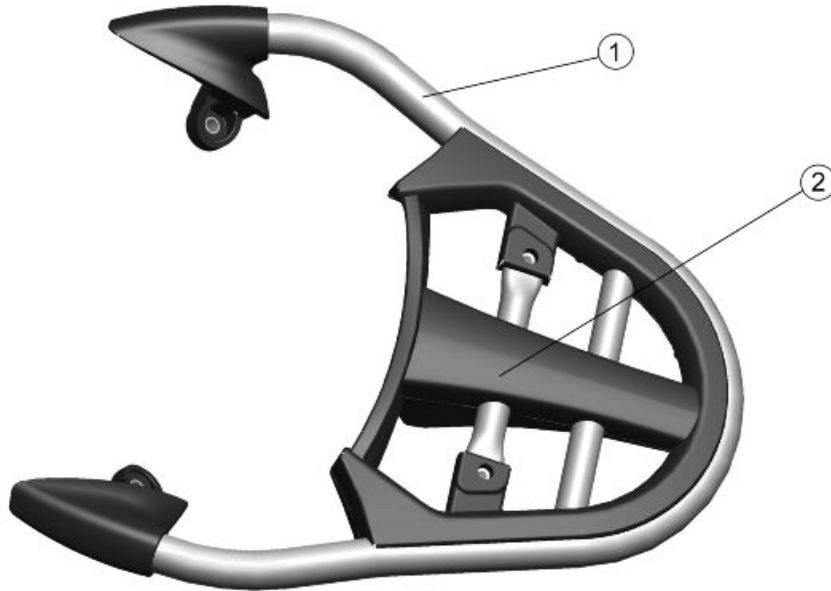Rear rack**LUGGAGE RACK**

	Code	Action	Duration
1	004008	Luggage rack - Replacement	
2	004062	Rear rack cover - Replacement	


Locks

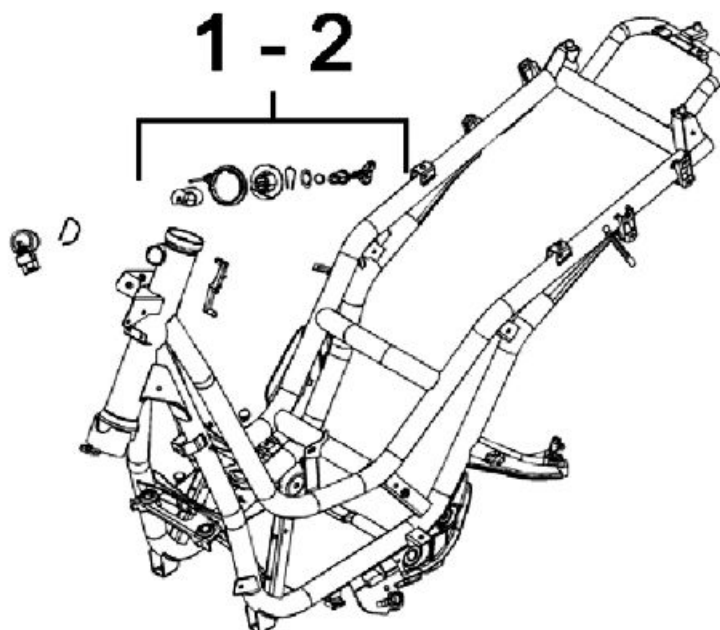

LOCKS

	Code	Action	Duration
1	005016	Key switch - Replacement	
2	004010	Antitheft lock - Replacement	


Turn signal lights

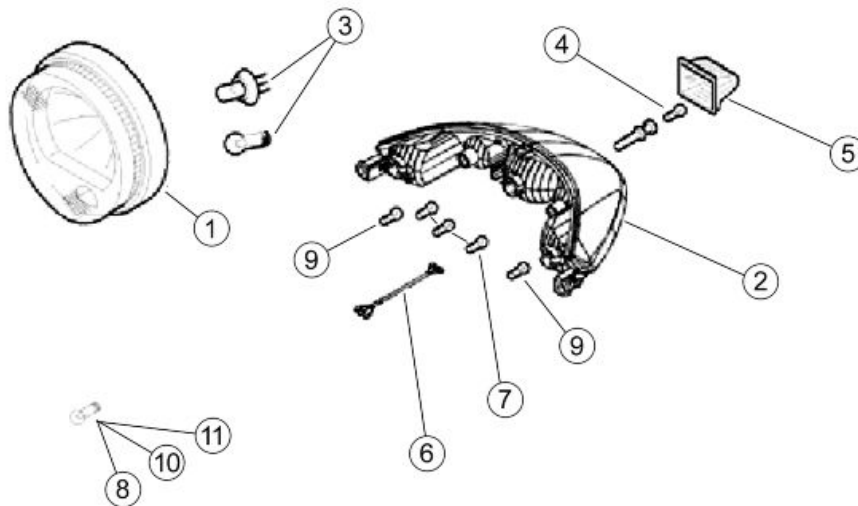

INDICATORS AND LIGHTS

	Code	Action	Duration
1	005002	Front headlamp - change	
2	005005	Taillight - Replacement	
3	005008	Front headlamp bulbs - Replacement	
4	005031	Licence plate light bulb - Replacement	
5	005032	Transparent licence plate cover - replace	
6	005044	Front lights cable unit- Replacement	
7	005066	Rear light bulbs - Replacement	
8	005067	Front turn indicator bulb - Replacement	
9	005068	Rear turn indicator bulb - Replacement	
10	005012	Front turn indicator - Replacement	
11	005091	Turn indicator glass - Replacement	

Front wheel

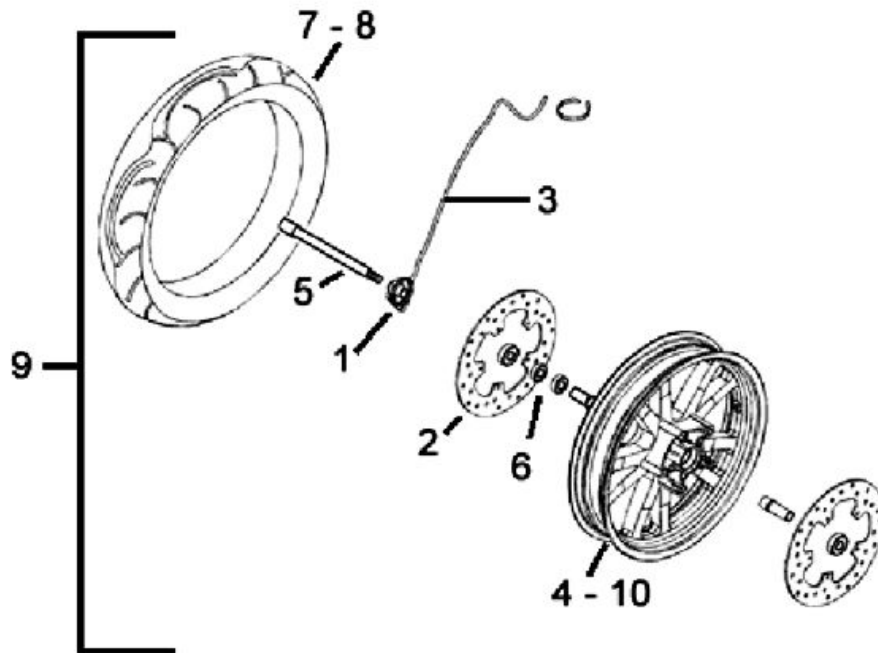

FRONT WHEEL


	Code	Action	Duration
1	002011	Odometer movement sensor - Replacement	
2	002041	Brake disc - Replacement	
3	002051	Odometer transmission assembly - Replacement	
4	003037	Front wheel rim- Replacement	
5	003038	Front wheel axle - Replacement	
6	003040	Front wheel bearings - Replacement	
7	003047	Front tyre - Replacement	
8	003063	Tyre pressure - Check	
9	004123	Front wheel - Replacement	

Grease tone wheel or drive

Please take note that the code has been introduced:


900001 - Tone wheel / drive greasing - 15'.

Never mistake the codes 002011 (movement sensor replacement) and 005089 (tone wheel replacement) in the event of noise of the indicated components. The grease recommended is TUTE-

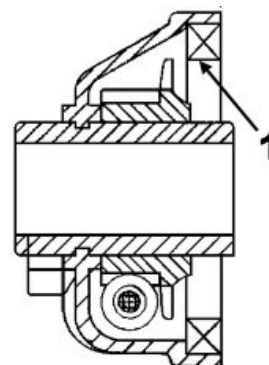


LA MRM 2 (soap-based lithium grease with Mo-lybdenum disulphide).

In the following points we indicate with an arrow the area to be greased (1 - Drive, 2 - Tone wheel)

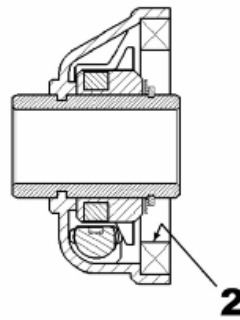

Rear wheel

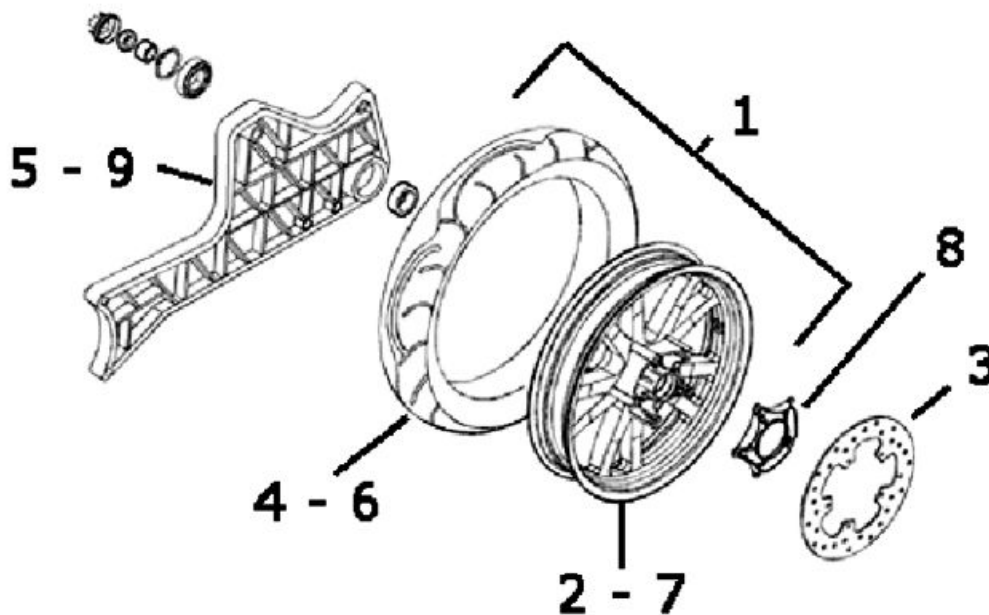


REAR WHEEL

	Code	Action	Duration
1	001016	Rear wheel - Replacement	
2	001071	Rear wheel rim - Removal and Refitting	
3	002070	Rear brake disc - Replacement	
4	003063	Tyre pressure - check	
5	003077	muffler/rear shock absorber support arm - Service	
6	004126	Rear wheel tyre - Replacement	
7	002028	Rear wheel hub - Replacement	

	Code	Action	Duration
8	003014	Rear suspension arm - Replacement	


Fuel pump

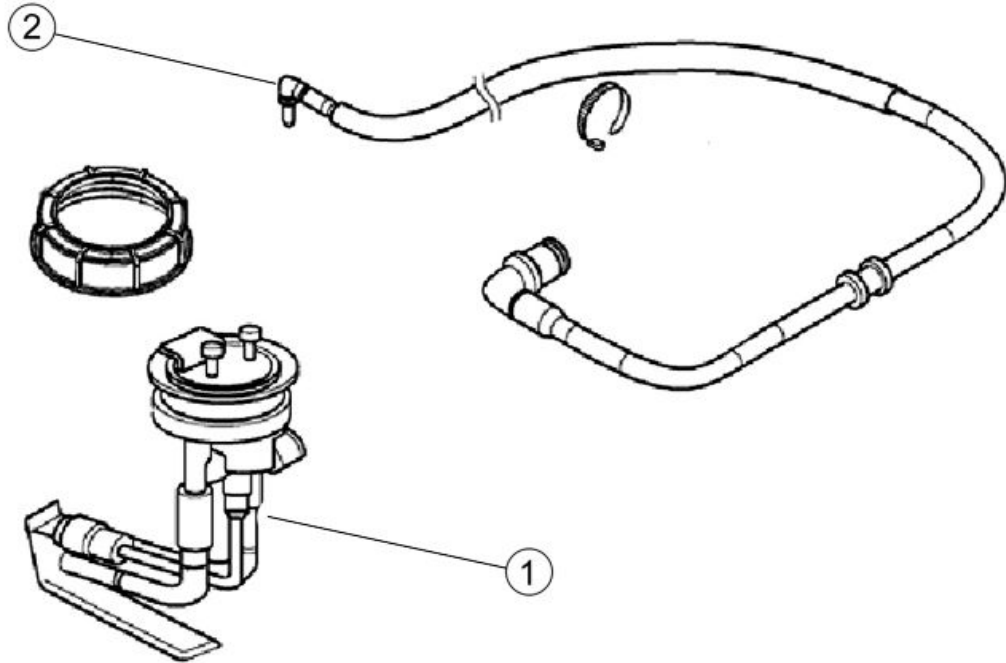

FUEL PUMP


	Code	Action	Duration
1	004073	Fuel pump - Replacement	
2	004137	Injector pump pipe - Replacement	

Electric devices

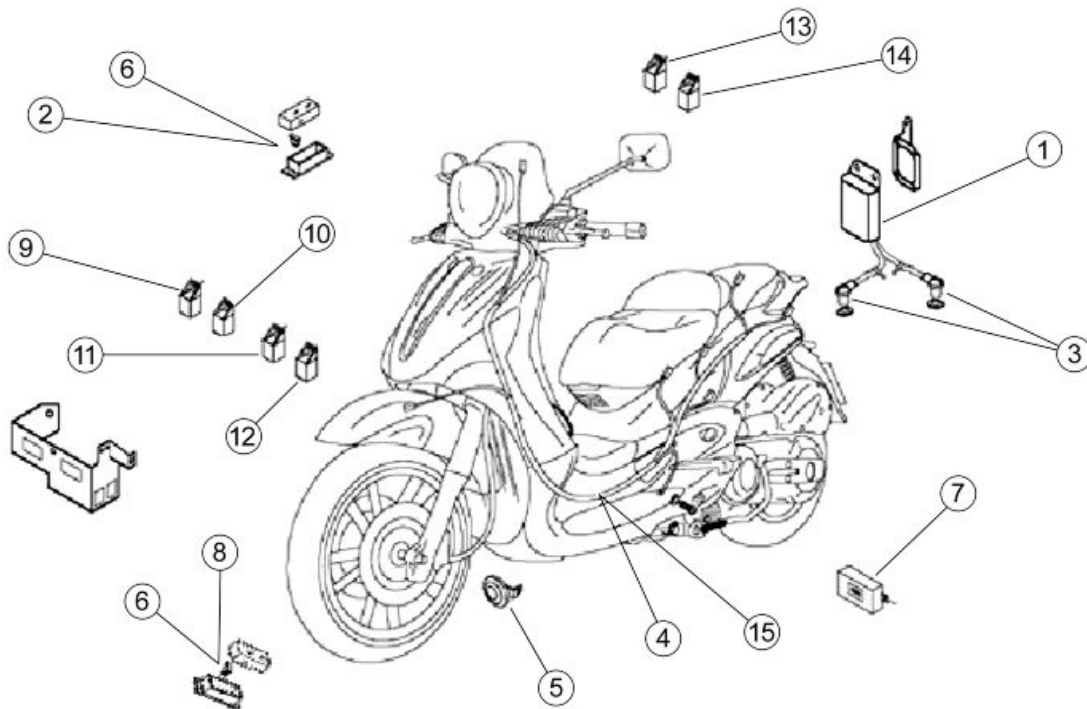

ELECTRIC DEVICES

	Code	Action	Duration
1	001069	HV coil - replace	
2	005054	Fuse holder - Replacement	
3	001094	Spark plug cap - Replacement	
4	005001	Electrical system - Replacement	
5	005003	Horn - Replacement	
6	005052	Fuse (1) - Replacement	
7	005115	Fuel level electrical damper - Replacement	
8	005080	Front fuse-holder - Replacement	
9	005035	Headlight remote control - Replacement	
10	005117	Electrical fan remote control - Replacement	
11	005118	Arrows remote control - Replacement	
12	005096	Remote control for injection components - Replacement	
13	005119	Fuel pump remote control - Replacement	
14	005120	Control unit power supply remote control - Replacement	
15	005114	Electrical system - Service	

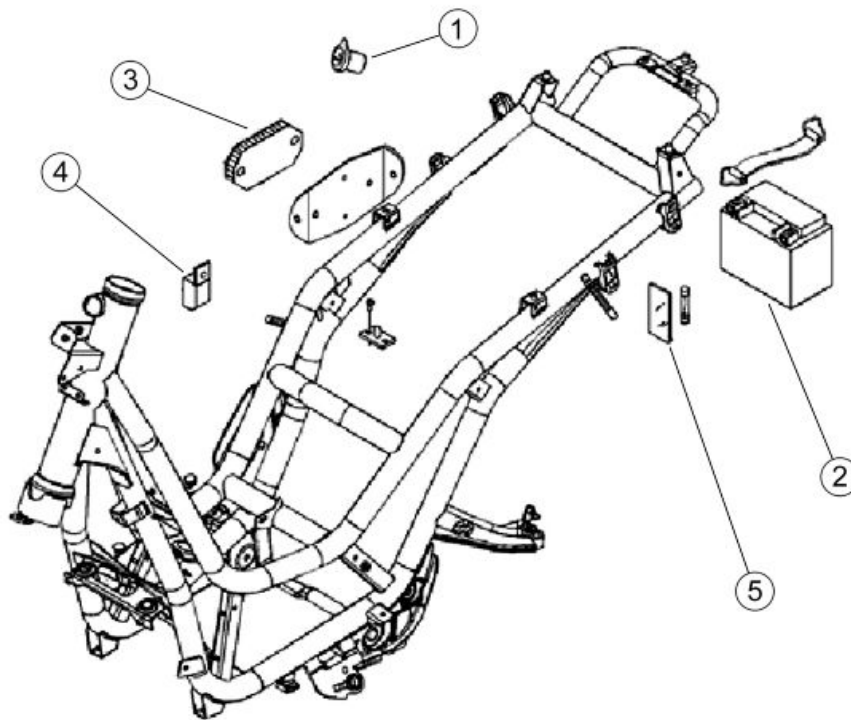


ELECTRIC DEVICES

	Code	Action	Duration
1	004142	Plug socket - Replacement	
2	005007	Battery - Replacement	
3	005009	Voltage regulator - replace	
4	005011	Start-up remote control switch - Replacement	
5	005026	Helmet compartment bulb - Replacement	
6	005027	Helmet compartment bulb support - Replacement	

ELECTRIC DEVICES

	Code	Action	Duration
1	005039	Headlight switch - replace	
2	005006	Light switch or turn indicators - Replacement	
3	005040	Horn button - Replacement	
4	005041	Starter button - Replacement	
5	005077	Emergency stop switch - Replacement	
6	005121	Saddle opening button - Replacement	
7	004066	Driving mirror - Replacement	

Brake callipers

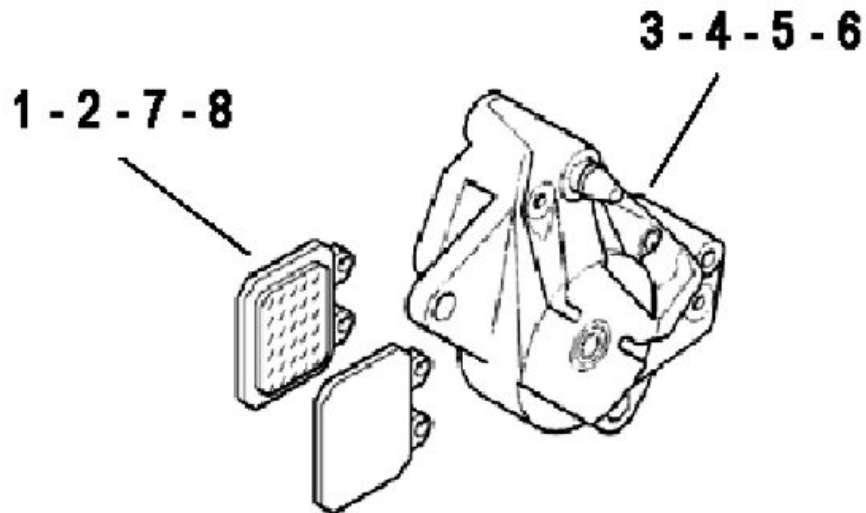

FRONT BREAK CALLIPER

	Code	Action	Duration
1	002002	Rear brake pads - replace	
2	002007	Front brake pads - Replacement	
3	002039	Front brake calliper - Replacement	
4	002040	Front brake calliper - Check	
5	002048	Rear brake calliper - Replacement	
6	002068	Rear brake calliper - Check	
7	003070	Front brake pads - Wear check	
8	003071	Rear brake pads - Wear check	